

---

# **PagePro® 9100**

## **User's Guide**

---

**1800731-001B**

---



## **Thank You**

Thank you for purchasing a KONICA MINOLTA printer. You have made an excellent choice.

## **Trademarks**

KONICA MINOLTA and the KONICA MINOLTA logo are trademarks or registered trademarks of KONICA MINOLTA HOLDINGS, INC. PagePro is a trademark or registered trademark of KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. Crown and CrownView are trademarks or registered trademarks of KONICA MINOLTA PRINTING SOLUTIONS U.S.A., INC. All other trademarks are the property of their respective owners.

## **Proprietary Statement**

The digitally encoded software included with your printer is Copyright © 2004 KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. All Rights Reserved. This software may not be reproduced, modified, displayed, transferred, or copied in any form or in any manner or on any media, in whole or in part, without the express written permission of KONICA MINOLTA BUSINESS TECHNOLOGIES, INC.

## **Copyright Notice**

Copyright © 2004 KONICA MINOLTA BUSINESS TECHNOLOGIES, INC., Marunouchi Center Building, 1-6-1 Marunouchi, Chiyoda-ku, Tokyo, 100-0005, Japan. All Rights Reserved. This document may not be copied, in whole or part, nor transferred to any other media or language, without written permission of KONICA MINOLTA BUSINESS TECHNOLOGIES, INC.

## **Manual Notice**

KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. reserves the right to make changes to this manual and to the equipment described herein without notice. Considerable effort has been made to ensure that this manual is free of inaccuracies and omissions. However, KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. makes no warranty of any kind including, but not limited to, any implied warranties of merchantability and fitness for a particular purpose with regard to this manual. KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. assumes no responsibility for, or liability for, errors contained in this manual or for incidental, special, or consequential damages arising out of the furnishing of this manual, or the use of this manual in operating the equipment, or in connection with the performance of the equipment when so operated.

---



---

# Contents

---

<b>1</b>	<b>Software Installation .....</b>	<b>1</b>
	<b>Software Utilities CD-ROM</b>	<b>2</b>
	Drivers, PPDs, and Utilities	2
	<b>Installing Printer Drivers and Utilities,</b>	
	<b>Windows Environments—Auto-loading Installation</b>	<b>5</b>
	<b>Installing Printer Drivers and Utilities, Windows Environments—Manual</b>	
	<b>Installation</b>	<b>5</b>
	<b>Installing Printer Drivers and Utilities, Macintosh Environments</b>	<b>6</b>
	Some Notes to Consider	6
	Macintosh OS 9—PPDs and Utilities Installation	6
	Macintosh OS X—PPDs and Utilities Installation	8
	<b>UNIX, NetWare, and NDPS</b>	<b>10</b>
	<b>Linux</b>	<b>10</b>
<b>2</b>	<b>Replacing Consumables .....</b>	<b>11</b>
	<b>Introduction</b>	<b>12</b>
	<b>Consumable Life Expectancies</b>	<b>12</b>
	Consumables Life Expectancies Chart	14
	<b>Replacing the Toner Cartridge</b>	<b>15</b>
	<b>Replacing the Exhaust Filter</b>	<b>21</b>

---



	<b>Replacing Rollers</b>	<b>22</b>
	<b>Replacing the Transfer Roller</b>	<b>27</b>
<b>3</b>	<b>Using Media</b>	<b>31</b>
	<b>Introduction</b>	<b>32</b>
	<b>Media Storage and Handling</b>	<b>32</b>
	Page Margins	40
	Image Alignment	40
	Output Tray	40
	<b>Media</b>	<b>40</b>
	<b>Loading Media</b>	<b>42</b>
	Using Media Other Than Plain Paper	48
	<b>Duplexing</b>	<b>52</b>
<b>4</b>	<b>Maintaining the Printer</b>	<b>55</b>
	<b>Introduction</b>	<b>56</b>
	<b>Cleaning</b>	<b>57</b>
	Cleaning the Printer Exterior	57
	Cleaning the Printer Interior	58
	Media Tray Pickup Rollers	58
<b>5</b>	<b>Troubleshooting</b>	<b>63</b>
	<b>Introduction</b>	<b>64</b>
	<b>Printing a Status Page</b>	<b>64</b>
	<b>PDF File Printing</b>	<b>64</b>
	Adjusting Memory Clients for PDF Printing	65
	Printing Preformatted Files Using CrownView	65
	Troubleshooting PDF Direct Printing from CrownView	65
	<b>Preventing Media Jams</b>	<b>66</b>
	<b>Automatic Jam Recovery</b>	<b>67</b>
	<b>Understanding the Media Path</b>	<b>67</b>
	Printer	67
	Printer, Optional Tray(s), Duplexer, and 4-bin Mailbox	68
	<b>Understanding Media Jam Status Messages</b>	<b>69</b>
	<b>Clearing Media Input Jams</b>	<b>69</b>
	<b>Clearing Internal Jams</b>	<b>73</b>
	<b>Clearing Output Jams</b>	<b>80</b>
	<b>Solving Problems</b>	<b>81</b>
	Other Problems	85
	Printing Quality	89
	<b>Status, Error, and Service Messages</b>	<b>93</b>
	Service Messages	99
	HP-GL Error Codes and PCL Error Codes	100
	PostScript Errors	101
	<b>Additional Assistance</b>	<b>101</b>



<b>6</b>	<b>Installing Accessories .....</b>	<b>103</b>
	<b>Introduction</b>	<b>104</b>
	<b>Antistatic Protection</b>	<b>106</b>
	<b>4-bin Mailbox</b>	<b>106</b>
	Installing the 4-bin Mailbox	107
	<b>Dual In-Line Memory Modules (DIMMs)</b>	<b>110</b>
	Installing DIMMs	112
	<b>Duplexer</b>	<b>114</b>
	Installing a Duplexer	114
	<b>Fonts and Forms</b>	<b>116</b>
	Optional Fonts	116
	CID Fonts	116
	Kanji Font Internal IDE Hard Disk	116
	PlanetPress	118
	<b>Internal IDE Hard Disk Drive</b>	<b>119</b>
	<b>Optional Media Feeder(s)</b>	<b>121</b>
	Installing an Optional Media Feeder	122
	<b>Time-of-Day Clock</b>	<b>124</b>
	Installing a Time-of-Day Clock	124
	Using the Time-of-Day Clock	125
<b>7</b>	<b>Storing, Deinstalling, Relocating, Repacking, and Shipping .....</b>	<b>127</b>
	<b>Introduction</b>	<b>128</b>
	<b>Storing the Printer</b>	<b>128</b>
	<b>Deinstalling Accessories</b>	<b>129</b>
	<b>Relocating the Printer</b>	<b>133</b>
	<b>Repacking the Printer</b>	<b>134</b>
	<b>Shipping the Printer</b>	<b>138</b>
<b>8</b>	<b>Technical Specifications .....</b>	<b>139</b>
	<b>Requirements</b>	<b>140</b>
	Space Requirements	140
	Location Requirements	142
	Power Requirements	143
	<b>Engine and Controller Specifications</b>	<b>145</b>
	Print Speed	145
	Engine	145
	Controller	147
	Electrical	149
	Physical	151
	<b>Consumable Life Expectancies</b>	<b>151</b>
	<b>IPP</b>	<b>153</b>
	<b>Document Option Commands</b>	<b>155</b>
	Header/Trailer Page Commands	155
	HP-GL Emulation Commands	155
	HP PCL 5e Emulation Commands	155



Lineprinter Emulation Commands	156
PostScript Emulation Command	156
Document Formatting	156
Job and Subjob Boundary Commands	157
	157

## **Menus 158**

Configuration Chart Conventions	158
Security Menu	158
Operator Control Menu	159
Administration Menu	160
Administration/Communications/Optional NIC/CrownNet Menu	161



---

# ***Software Installation***

---

# 1



# Software Utilities CD-ROM

If you followed all the steps in the *Installation Guide* that came with your printer, then the printer is properly set up, connected to your computer, plugged in, turned on, and ready to receive the system software, drivers, and utilities on the *Software Utilities* CD-ROM.

Put the CD-ROM in your computer's CD-ROM drive and the AutoInstaller begins the installation process.

## Drivers, PPDs, and Utilities

The printer drivers, PPDs, and additional software on the *Software Utilities* CD-ROM can be installed on PC, Macintosh, and other computers using any of the following:

- Windows Me
- Windows 98/95
- Windows XP
- Windows 2000
- Windows NT4
- Macintosh OS 9 or X (version 10.1 or higher)
- UNIX/Linux
- NetWare (Versions 5 and 6)
- NDPS

## Drivers and PPDs



*Manual installation instructions and additional information are included in the Crown Books (in PDF on the Documentation CD-ROM) in case you need them.*

Drivers	Use/Benefit	Installation Instructions
<b>PostScript Drivers</b> <ul style="list-style-type: none"><li>■ Windows XP/2000</li><li>■ Windows Me/98/95</li><li>■ Windows NT4</li></ul>	These drivers give you access to all of the printer features, including finishing and advanced layout	"Installing Printer Drivers and Utilities, Windows Environments—Auto-loading Installation" on page 5.
<b>PCL6 Drivers</b> <ul style="list-style-type: none"><li>■ Windows XP (1200 dpi)</li><li>■ Windows Me/98/95</li></ul>	PCL6 allows access to most of the features on the printer.	Readme on the <i>Software Utilities</i> CD-ROM.



Drivers	Use/Benefit	Installation Instructions
<b>PCL5e Drivers</b> <ul style="list-style-type: none"> <li>■ Windows XP</li> <li>■ Windows 2000</li> <li>■ Windows Me/98/95</li> <li>■ Windows NT4</li> </ul>	PCL5e allows limited access to features on the printer.	<p>Readme on the <i>Software Utilities</i> CD-ROM.</p> <p>You cannot install a PCL5e driver for Windows 9x or Windows NT4 without a Windows CD-ROM. This CD-ROM is required so you can supply the following files when prompted:</p> <p><b>For PCL5 9x</b>—ICONLIB.DDL, UNIDRV.DLL, and UNIDRV.HLP  <b>For PCL5 NT4</b>—RASDD.DLL, RASDDUI.DLL, and RASDDUI.HLP.</p> <p>If you install the driver and skip these files, an error message displays at the end of the process.</p>
<b>Macintosh PPDs</b>	PostScript Printer Description (PPD) files allow you to configure options such as memory and informs the computer what options and features are available.	Readme on the <i>Software Utilities</i> CD-ROM.
<b>Windows PPDs</b>	These PPD files allow you to install the printer for a variety of platforms, drivers, and applications.	Readme on the <i>Software Utilities</i> CD-ROM.
<b>Linux PPDs</b>	These PPDs can be used with third-party Linux print filters that use PPDs.	Readme on the <i>Software Utilities</i> CD-ROM.




## Utilities

Utilities	Use/Benefit	Installation Instructions
<b>Crown Print Monitor+ for Windows</b>	This Windows utility provides an efficient method for transporting print jobs directly to a KONICA MINOLTA printer via the TCP/IP protocol.	Readme on the <i>Software Utilities</i> CD-ROM.
<b>Download Manager for Windows</b>	This utility provides the ability to download fonts and overlays to the printer's hard disk. It also allows you to download fonts to printer memory.	Readme on the <i>Software Utilities</i> CD-ROM.
<b>Macintosh Installer</b>	This installer automatically places all needed print-related components, such as a PostScript Printer Description (PPD) file, color profiles, and screen fonts, in the correct locations on your system and allows you to use your printer with Macintosh OS 9 or X (version 10.1 or higher).	Readme on the <i>Software Utilities</i> CD-ROM.
<b>PageScope Net Care</b>	This utility, designed with administrators in mind, is a powerful tool allowing centralized management of network printers. It is available for Windows and UNIX platforms. Refer to the <i>PageScope Net Care</i> chapter in the <i>Reference Guide</i> or <i>PageScope Net Care Administrator's Manual</i> , both in PDF format on the <i>Documentation</i> CD-ROM.	Readme on the <i>Software Utilities</i> CD-ROM.
<b>UNIX Host Software</b>	UNIX Host Software, compatible with a variety of UNIX platforms, allows for the customization of UNIX-based queues and filters for the specific features of the Crown printer.	Readme on the <i>Software Utilities</i> CD-ROM.
<b>KONICA MINOLTA Gateway</b>	This interface allows NetWare users to manage printers from a central location.	Readme on the <i>Software Utilities</i> CD-ROM.
<b>PageScope Network Setup Utility</b>	This utility provides basic configuration functions for network printers using TCP/IP and IPX protocols.	Readme on the <i>Software Utilities</i> CD-ROM.



## Installing Printer Drivers and Utilities, Windows Environments—Auto-loading Installation

- 1 Insert the *Software Utilities* CD-ROM in your CD-ROM drive.  
 *If the CD-ROM does not start automatically, double-click setup.exe in the root directory.*
- 2 In the first window, click Printer Setup.
- 3 Choose the method by which the PC and printer are connected.
- 4 Follow the instructions on the screen.
- 5 On the Printer Options screen, use the check boxes to print a test page, make the new printer your default, set printer properties and printing preferences, or update printer firmware (also called printer system software).
- 6 On the last screen, choose Finish.  
*This returns you to the Main Menu screen where you can register your printer, review driver or utility documentation, or purchase supplies online. When you are finished, exit from the Installer.*
- 7 When the system software installation is complete, remove the CD-ROM from your CD-ROM drive and store it in a safe place.

## Installing Printer Drivers and Utilities, Windows Environments—Manual Installation

Manual installation instructions are included in the *Crown Books*.



# Installing Printer Drivers and Utilities, Macintosh Environments

## Some Notes to Consider

- In the following sections, we assume that you are installing the software for the first time.
- The current version of Macintosh OS X has limited support for PPD (PostScript Printer Description) files. Although KONICA MINOLTA printers can be used with Macintosh OS X, not all advanced printing features are available. Advanced printing features are still available under Macintosh OS 9.

You can connect to your printer by

- A USB cable
- A crossover Ethernet cable
- Ethernet patch cables and an Ethernet hub

## Macintosh—PPDs

We developed a PostScript Printer Description (PPD) file for the PagePro 9100. This PPD works with the Macintosh Operating System's PostScript printer driver (LaserWriter) to provide support for the features on the PagePro 9100, such as print resolution and media sizes, and optional features such as duplexing and proof-then-print.

## Macintosh OS 9—PPDs and Utilities Installation

### OS 9 Step 1. Software Installation

- a Insert the *Software Utilities* CD-ROM in your Macintosh's CD-ROM drive.  
*If necessary, double-click the CD-ROM icon on your Macintosh desktop.*
- b Double-click the Install icon.
- c Follow the instructions on the screen to install the PagePro 9100 PPD and utilities.
- d After the PPD and utilities installation is complete, choose Quit.
- e When the system software installation is complete, remove the CD-ROM from your CD-ROM drive and store it in a safe place.




## OS 9 Step 2. Creating a Desktop Printer

### USB Connection

- a Plug one end of the USB cable into the Macintosh and the other into the printer's USB port.
- b Locate the Desktop Printer Utility.  
*If you cannot locate it on your Macintosh hard disk, it can be found on your Macintosh's system CD-ROM.*
- c Double-click the Desktop Printer Utility icon to open the application.  
*The first window prompts you to select the type of desktop printer you would like to create.*
- d Select Printer (USB), and select OK.
- e Choose the Change button in the PostScript Printer Description section. In the resulting window, select the PagePro 9100 PPD, and choose Select.
- f Choose the Change button in the USB Printer Selection section. In the resulting window, select the PagePro 9100, and click OK.

### EtherTalk Connection

- a You can connect via Ethernet in either of two ways:
  - Plug one end of a crossover Ethernet cable into the Macintosh and the other into the printer's Ethernet port.
  - Use Ethernet patch cables and an Ethernet hub. Plug one end of each patch cable into the hub, then plug the other end of one into the Macintosh and the other end of the second into the printer's Ethernet port.
- b Open the Chooser and select LaserWriter.
- c When your printer boots up, it finds a default zone. If your network has more than one zone and you want to use a different zone, use the Interface/Ethernet/Ethertalk/Name and Zone menus on the printer control panel to specify the new zone.  
 *The Name and Zone menus allow you to identify 1 zone with a name up to 32 characters long. (Up to 16 characters can be entered in each of the two menus). You cannot use these two menus to identify two zones. Trailing spaces are not considered part of the zone name. All standard printable ASCII characters are valid except the @ and ' symbols. The names are case sensitive.*
- d Choose Create and then Set-Up.



## LPR Connection

- a You can connect via Ethernet in either of two ways:
  - Plug one end of a crossover Ethernet cable into the Macintosh and the other into the printer's Ethernet port.
  - Use Ethernet patch cables and an Ethernet hub. Plug one end of each patch cable into the hub, then plug the other end of one into the Macintosh and the other end of the second into the printer's Ethernet port.
- b Locate the Desktop Printer Utility.


*If you cannot locate it on your Macintosh hard disk, it can be found on your Macintosh's system CD-ROM.*
- c Select Printer (LPR), and select OK.
- d Type in the IP Address and use the same address for the Queue name. Click OK.
- e Choose Create.
- f Name the printer with the IP Address or a descriptive name.

## Macintosh OS X—PPDs and Utilities Installation

### OS X Step 1. Software Installation—Automatic

- a Insert the *Software Utilities* CD-ROM in your Macintosh's CD-ROM drive.

*If necessary, double-click the CD-ROM icon on your Macintosh desktop.*
- b Double-click the install icon.

 The installer uses the path *Hard Disk Name/Library/Printers/PPDs/Contents/Resources/* for PPDs and the path: *Hard Disk Name/Library/Fonts/* for fonts.
- c Follow the instructions on the screen to install the PagePro 9100 PPD and utilities.
- d After the PPD and utilities installation is complete, choose Quit.

### OS X Alternate Step 1. Software Installation—Manual

Manual installation instructions are included in the *Crown Books*.



## OS X Step 2. Creating a Printer Queue

- a Connect the printer to the computer using a USB or Ethernet connection.

*For USB, plug one end of the USB cable into the PC and the other into the matching printer port.*

*For Ethernet, you can connect in either of two ways:*

- Plug one end of a crossover Ethernet cable into the Macintosh and the other into the printer's Ethernet port.
- Use Ethernet patch cables and an Ethernet hub. Plug one end of each patch cable into the hub, then plug the other end of one into the Macintosh and the other end of the second into the printer's Ethernet port.

- b Locate and double-click the Print Center utility to open it.
- c In the Printer List window, choose Add Printer.
- d In the resulting window, select from USB, AppleTalk, or LPR to match your printer connection.

*USB—The PagePro 9100 appears in the window.*

*AppleTalk (for Ethernet connection)—Select the zone and scroll through printer choices. The PagePro 9100 appears in the choice list.*

*LPR—Enter the IP Address. If the "Use Default Queue on Server" box is checked, click it to unselect it. Type in the IP Address again for the Queue name.*

- e Choose the Printer Model popup menu to select the PagePro 9100 PPD, and choose Other.
- f Browse to Library/Printers/PPDs/Contents/Resources/en.lproj.



*The first two letters of the folder name are an abbreviation for the language. If you prefer another language instead of English, you can pick a different .lproj folder.*

- g Select the PagePro 9100 PPD. Click Choose and then click Add.  
*The Printer List opens again.*
- h Double-click on the printer you just created to open the Print Queue window.



# UNIX, NetWare, and NDPS

For UNIX, NetWare 5, NetWare 6, and NDPS installation, refer to the *Crown Books* on the *Documentation* CD-ROM.

## Linux

For Linux PPD and PDQ installation, refer to the *Crown Books* on the *Documentation* CD-ROM. It includes basic information about PDQ, XPDQ, CUPS, and XPP connections and instructions for installing them.



---

# ***Replacing Consumables***

---

# **2**



# Introduction

Item	Page
"What is a <b>consumable</b> ?"	page 12
"What is a <b>face</b> ?"	page 12
"What is the <b>life expectancy</b> of consumables?"	page 13
"How do I <b>order</b> consumables?"	page 15
"Where can I get more <b>information</b> ?"	page 15
"What is the <b>toner cartridge life expectancy</b> ?"	page 16
"How should I <b>handle</b> a toner cartridge?"	page 16
"How do I replace and recycle the <b>toner cartridge</b> ?"	page 17
"How do I replace the <b>exhaust filter</b> ?"	page 21
"How do I replace <b>rollers</b> ?"	page 22
"How do I replace the <b>transfer roller</b> ?"	page 27

## Consumable Life Expectancies

### What is a consumable?

A consumable is an item that needs to be replaced at regular intervals. For the PagePro 9100, consumables include:

#### Service replaceable

- Fuser

#### User replaceable

- Toner cartridge and exhaust filter
- Pickup rollers
- Transfer roller

Although the printer was designed for printing on a wide range of media types, it is not intended to print exclusively on a single media type except plain paper. Continuous printing on media other than plain paper (such as envelopes, labels, thick stock, or transparencies) may adversely affect print quality or reduce engine life.

### What is a face?

A **face** is a single **pass** of media past the toner cartridge. A **two-sided** (duplex) page (also called a **sheet**) consists of two passes of the toner cartridge.





*The number of sheets printed statistics shown on the startup page may differ from the sheets printed and faces printed statistics in CrownView (a printer-based application for accessing printer configurations, status, and consumables usage information) and on the consumables statistics page (Operator Control/Consumables/Print Statistics).*

*The numbers on the startup page refer to number of sheets/faces printed during the lifetime of the printer. The numbers in CrownView and on the consumables statistics page refer to the number of sheets/faces printed to date during the current consumables tracking period (Administration/Consumables/Start Period menu).*

*For further information about CrownView, refer to the Crown Books in PDF on the Documentation CD-ROM.*

## What is the life expectancy of consumables?

### Attention

---

Consumable life is expressed in simplex letter/A4 pages @ normal 5% coverage in continuous printing. A duplex page is equivalent to two simplex pages.

The stated life expectancy of each consumable is in page coverage (usually 5% coverage of letter/A4-size media), and continuous printing—for example, an average four-page run length (optimal consumable life), or intermittent printing—for example, one-page jobs.

The actual life expectancy will vary based on printing under specific operating conditions and other printing variables, such as ambient temperature, humidity, media type, page size, and content of material printed—for example, text or graphics.

---

### Attention

---

Failure to follow instructions as outlined in this manual could void your warranty. Use of consumables not manufactured by KONICA MINOLTA or use of non-supported print media may cause damage to your printer and void your warranty. If printer failure or damage is found to be directly attributable to the use of non-KONICA MINOLTA consumables, KONICA MINOLTA will not repair the printer free of charge. In this case, standard time and material charges will be applied to service your printer for that particular failure or damage.

---



## Consumables Life Expectancies Chart

Item	Average Life Expectancy (in Simplex Pages)	Comment
<b>Fuser</b>	300,000 intermittent printing (for example, one-page jobs)  500,000 continuous printing (average four-page jobs)	The fuser must be replaced by a KONICA MINOLTA authorized service provider. Refer to the <i>Service &amp; Support Guide</i> or <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a>
<b>Toner Cartridge and Exhaust Filter</b>	At 5% coverage, <b>Starter Cartridge</b> = 6,000 <b>Replacement Cartridge</b> = 15,000 continuous printing or 12,000 intermittent printing (TONER EMPTY displays in the message window.)	Replace the toner cartridge and the exhaust filter at the same time.  <i>If the optional duplexer is installed, the exhaust filter does not need replacement.</i>  See “How do I replace and recycle the toner cartridge?” on page 17.
<b>Media Pickup Roller—Multipurpose Tray</b>	Approximately 150,000	User replaces if media misfeeds in the multipurpose tray frequently, when the fuser is replaced, and after every 150,000 pages. See “Multipurpose Tray Pickup Roller” on page 24.
<b>Paper Separation Roller—Media Tray(s)</b>	Approximately 200,000	User replaces if media misfeeds in the media tray(s) frequently, when the fuser is replaced, and after every 200,000 pages. See “How do I replace the paper separation roller?” on page 22.
<b>Transfer Roller</b>	Approximately 150,000	See “How do I replace the transfer roller?” on page 27.



## How do I order consumables?

Choosing the right consumables for your printer not only increases its reliability and performance, but also minimizes the risk of damage. For example, only KONICA MINOLTA toner cartridges are designed to meet the exact specifications of your printer, giving maximum performance, efficiency, and long life.

Toner cartridges and other consumables for your printer are available from your local vendor or visit [printer.konicaminolta.com](http://printer.konicaminolta.com).


## Where can I get more information?

To access consumables usage information, use the Operator Control/Consumables/Print Statistics menu on the control panel, or use the CrownView printer web page. For information about the consumables statistics page and replacement menus, refer to the *Crown Books* in PDF on the *Documentation* CD-ROM. For information about ordering consumables, refer to [printer.konicaminolta.com](http://printer.konicaminolta.com). For more assistance, go to [printer.konicaminolta.com](http://printer.konicaminolta.com).

## Replacing the Toner Cartridge

Characters and images are created in your laser printer through a process that applies toner to the photosensitive OPC (Optical Photo Conductor) inside your toner cartridge. Your printer uses one toner cartridge. Handle the toner cartridge carefully to avoid spilling toner inside the printer or on yourself.

When the toner cartridge is worn out, the message **TONER EMPTY** appears. The printer will not print until the toner cartridge is replaced. After the toner cartridge is replaced, the printer automatically resets the consumables count.

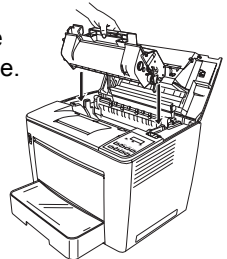

### Attention

The OPC inside the toner cartridge is extremely sensitive to bright light, direct sunlight, and touch. Always leave the toner cartridge in its protective package until you're ready to install it. Any exposure to light should be avoided and limited to less than two minutes, or permanent damage could result. If you suspect the OPC is damaged due to exposure to light, put the toner cartridge in a dark place to recover. Recovery may take up to two hours. Recovery time is dependent on the amount of exposure sustained, and recovery is not guaranteed.



## What is the toner cartridge life expectancy?

Toner cartridge life is directly related to the number of rotations of the OPC. Longest unit life is achieved with continuous printing, which requires a cleaning rotation after every fourth page of an average size job. Intermittent printing with small job sizes requires a cleaning rotation after each one-page simplex job, and therefore impacts OPC life.

A toner cartridge contains enough toner to print letter/A4-size pages at the percent coverage stated (other factors will also affect toner life):

Coverage	Starter Cartridge	Replacement Cartridge (Continuous Printing)	Replacement Cartridge (Intermittent Printing)
5%	6,000	15,000	12,000
10%	3,000	7,500	6,000
15%	2,000	5,000	4,000
20%	1,500	3,750	3,000

When a toner cartridge runs low, `TONER LOW` displays in the message window and there is approximately 5% toner remaining. Printing continues even though the warning appears. However, the image gradually fades, so replace the toner cartridge as soon as possible.

Approximately 750 pages after the printer displays `TONER LOW` in the message window, the printer displays `TONER EMPTY`, and the printer stops.

## How should I handle the toner cartridge?

Keep the toner cartridge

- Away from open flames.
- In its packaging until you're ready to install it.
- In a cool, dry location away from sunlight (due to heat).

*The maximum storage temperature is 95° F (35° C) and the maximum storage humidity is 80% without condensation. If the toner cartridge is moved from a cold place to a warm, humid place, condensation may occur, degrading print quality. Allow the toner to adapt to the environment for about one hour before use.*

- Level during storage.

*Do not store cartridges on their ends or turn them upside down; the toner inside the cartridges may become caked or unequally distributed.*


- Away from salty air and corrosive gases such as aerosols.



## How do I replace and recycle the toner cartridge?


### Base Printer

- 1 Open the top cover ①, ②.

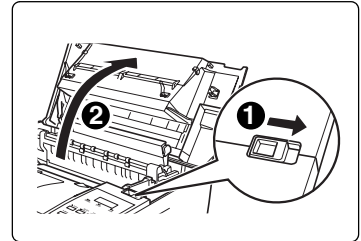

### Attention


Never touch the copper or brass electrodes ① or electrical parts that are located inside the top cover and underneath the toner cartridge, as a printer malfunction can result.

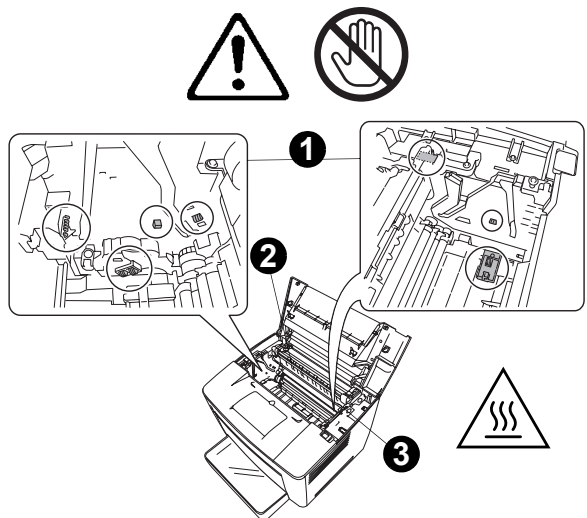

Be careful not to touch ② around the image transfer roller (*touching certain parts in this area may result in reduced print quality*) or ③ around the fusing unit (*since the inside reaches temperatures of about 392 °F (200 °C), touching any part in this area may result in burns*).



- 2 Recycle the used toner cartridge.
- a Seal the empty toner cartridge in its original box.
  - b Affix the prepaid UPS label on the top of the box and return it via UPS.

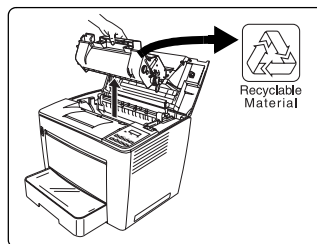


- 3 Remove the new toner cartridge from its box.



*We strongly suggest that you save the packaging materials in case you ever need to replace the toner cartridge, or move or ship the printer.*


- 4 Peel off the packing tape.

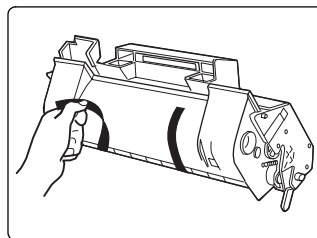

#### **⚠ Attention**

Do not open the protective cover① of the OPC (the green area) ② or hold the toner cartridge by the protective cover.


The OPC is extremely sensitive to hand oils and scratches, both of which reduce print quality. This type of damage is not covered by your warranty.

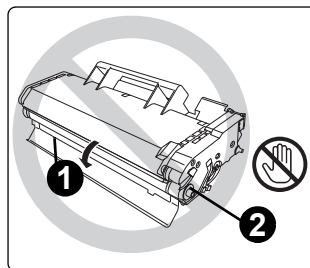



- 5 Slowly shake the toner cartridge, tilting it to the left and right 7 or 8 times to distribute the toner.


*The toner is nontoxic. If you get toner on your hands, wash them in cool water and mild neutral detergent. If you get toner on your clothes, lightly dust them off as much as possible. If some toner remains on your clothes, use cool, not hot water, to rinse the toner off, provided your clothing is washable.*

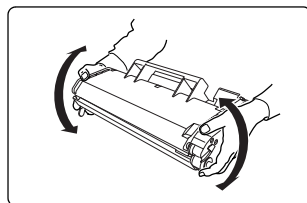

## WARNING!

**If you get toner in your eyes, wash it out immediately with cool water and consult a doctor. Material Safety Data Sheets (MSDS) can be found at [printer.konicaminolta.com](http://printer.konicaminolta.com).**


- 6 Align the tabs on the toner cartridge (one on each side) with the notches in the printer, and then insert the cartridge as far as possible into its compartment.

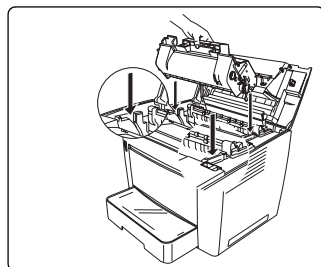

- 7 Close the top cover.

### **⚠ Attention**


**Do not transport the printer with the toner cartridge installed. If toner spills within the printer, decreased print quality may result, or the printer may be damaged.**

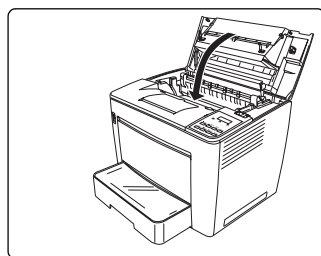




## Printer with 4-bin Mailbox Attached

- 1 Slide the 4-bin mailbox to the back of the printer.

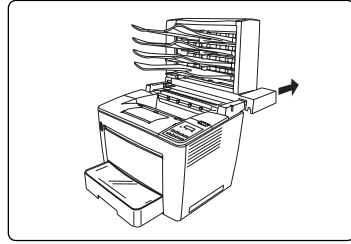


- 2 Open the top cover ①, ②.

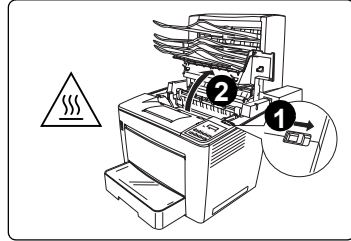

- 3 Lower the stopper to support the top cover.


- 4 Replace the toner.

Refer to “How do I replace and recycle the toner cartridge?” on page 17.

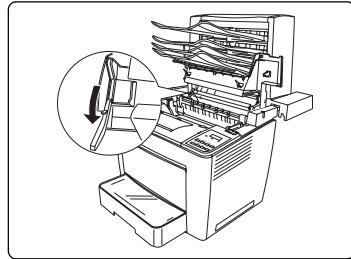


- 5 Return the stopper to its original position ①.

- 6 Close the top cover ②.

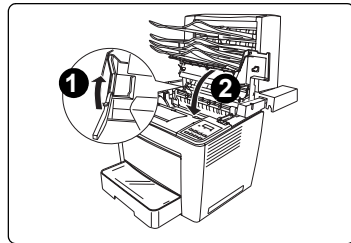



- 7 After closing the top cover, slide the 4-bin mailbox forward to its original position.

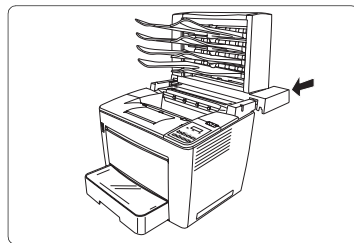

## Replacing the Exhaust Filter

If you haven't installed the optional duplexer, the exhaust filter on the back of the printer is replaced when you replace a toner cartridge.


### How do I replace the exhaust filter?



- 1 Remove the used exhaust filter.




*Dispose of it  
according to your  
local regulations.*

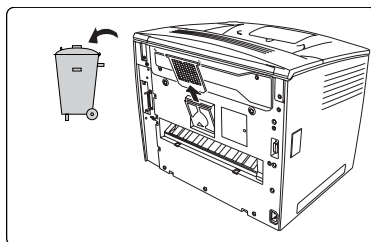

### **⚠ Attention**

**If you will be installing the optional duplexer, it contains a built-in exhaust filter that does not need replacement.**

- 2 Remove the new filter from its box and insert it into place.

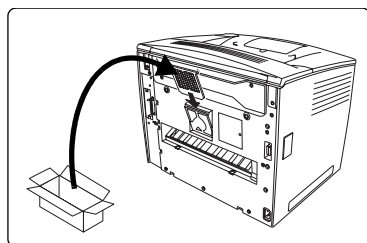



# Replacing Rollers

The pickup rollers feed media from the media trays into the printer. When the pickup rollers deteriorate, media may not feed correctly, resulting in media jams. Replace the pickup roller in the multipurpose tray each time you have the fuser replaced, and more frequently if the media is not being picked properly.

The upper and optional media trays' media pickup roller needs periodic cleaning but not replacement.


There are two different roller kits—one for the pickup rollers in the multipurpose tray, and one for the media trays' paper separation roller.

## How do I replace the paper separation roller?


### Paper Separation Roller

- 1 Pull the media tray out of the printer until it stops.

*The illustration shows the upper media tray. Follow the same instructions for the optional media tray(s).*

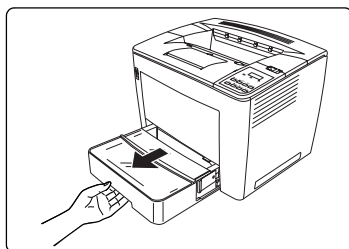

- 2 Remove the media tray.

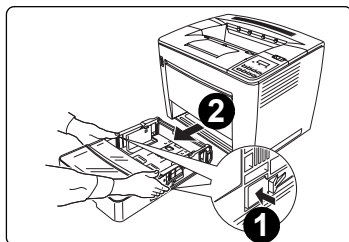





- 3 Loosen the two screws on the rear of the media tray.
- 4 Remove and dispose of the old paper separation roller.




*Dispose of it according to local regulations.*

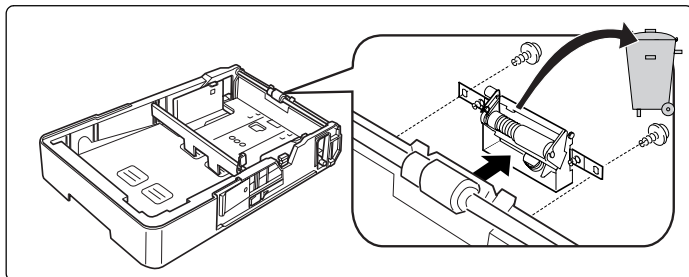

- 5 Remove the new paper separation roller assembly from its packaging.
- 6 Install the new paper separation roller.

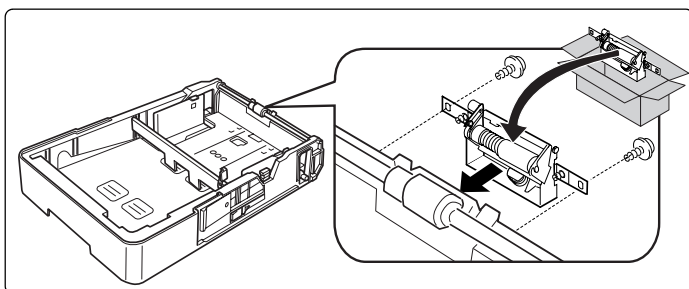

- 7 Tighten the two screws.
- 8 Reinsert the media tray into the printer.
- 9 If you have optional media tray(s) installed, repeat steps 3–8 for each one.

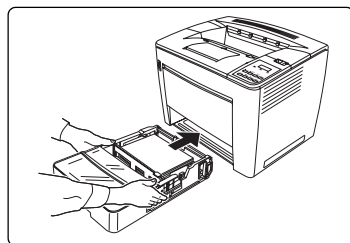




## How do I replace the multipurpose tray pickup roller?

### Multipurpose Tray Pickup Roller

- 1 Turn off the printer.

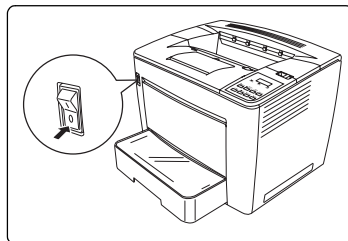


- 2 Open the top cover.

#### Attention

Never touch the copper or brass electrodes ① or electrical parts that are located inside the top cover and underneath the toner cartridge, as a printer malfunction can result.


Be careful not to touch ② around the image transfer roller (touching certain

parts in this area may result in reduced print quality) or ③ around the fusing unit (since the inside reaches temperatures of about 392 °F (200 °C), touching any part in this area may result in burns).

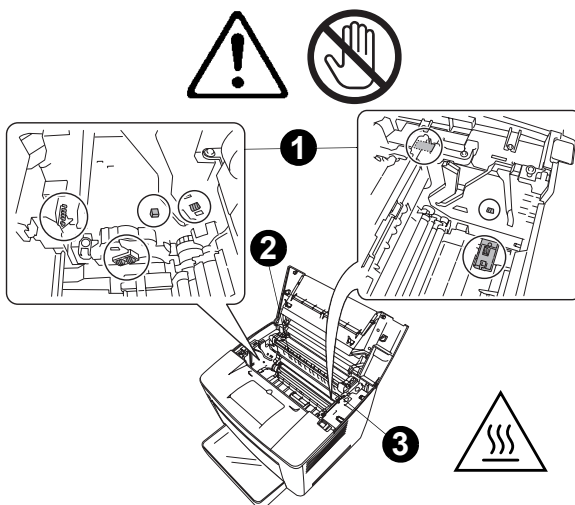




- 3 Remove the toner cartridge and store it in a light-free protective bag.

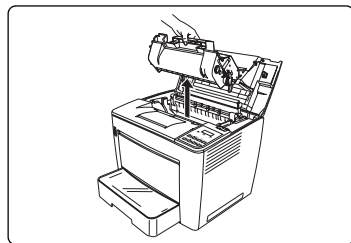


- 4 Open the media feed roller cover.

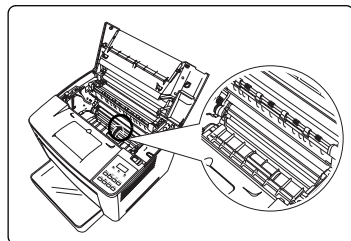

- 5 Unscrew the screw in the center of the multipurpose tray pickup roller and dispose of the pickup roller.




*Dispose of it according to your local regulations.*

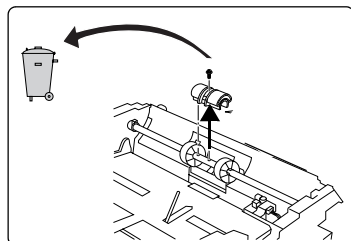

- 6 Remove the new pickup roller from its packaging.


**Attention**

**Do not touch the two black parts of the roller.**

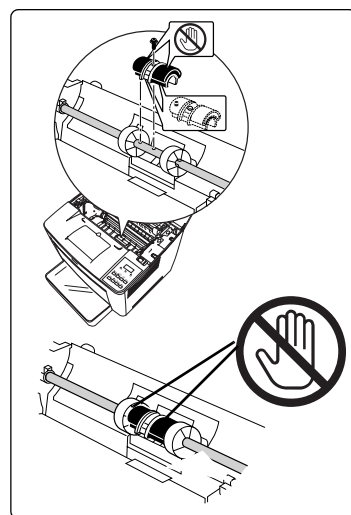





- 7 Align the peg on the bottom of the pickup roller in its hole, and replace the pickup roller.
- 8 Tighten the screw.

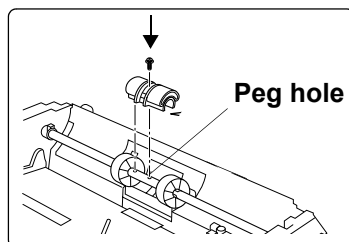


- 9 Close the media feed roller cover.

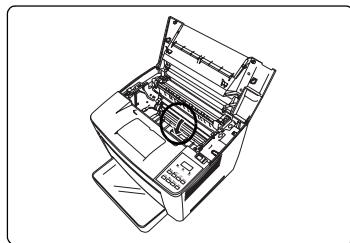


- 10 Align the tabs on the toner cartridge (one on each side) with the notches in the printer, and then insert the cartridge as far as possible into its compartment.

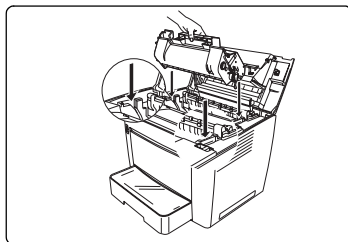

- 11 Close the top cover.

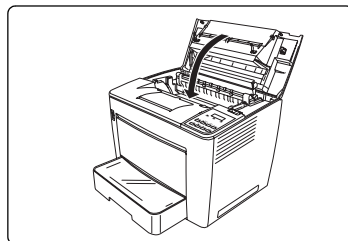


- 12 Turn on the printer.

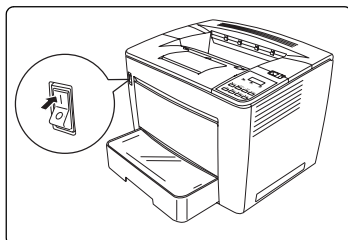




# Replacing the Transfer Roller

The transfer roller interfaces with the roller in the toner cartridge.

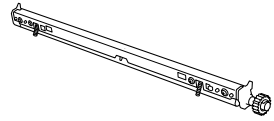


## How do I replace the transfer roller?


- 1 Turn off the printer.

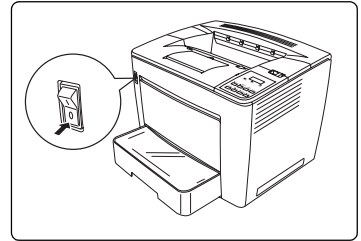

- 2 Slide the top cover release lever to the right ①, and open the top cover ②.

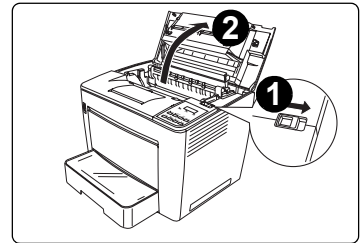

- 3 Remove the toner cartridge and store it in a light-free protective bag.

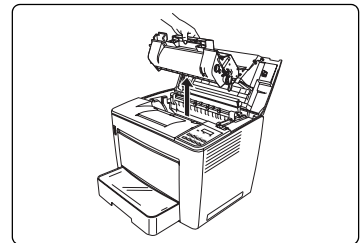



- 4 Place your fingers underneath the green tabs and rotate the roller upward away from you ①.


*The metal surface will move upward.*

- 5 Remove the used transfer roller ②.




*Dispose of it according to your local regulations.*

- 6 Remove the new transfer roller from its packaging.

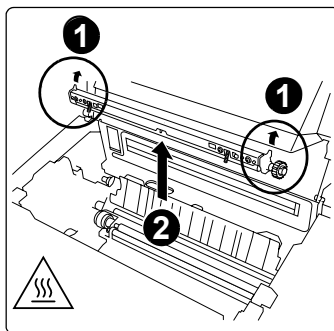


### **Attention**

**Do not touch the transfer roller's black surface.**

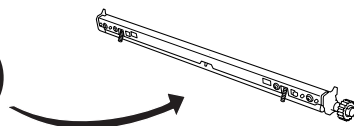


- 7 Lower the new transfer roller straight in ①, making sure the shaft is well seated.

- 8 Rotate the green tabs downward ② so that the metal surface faces you.

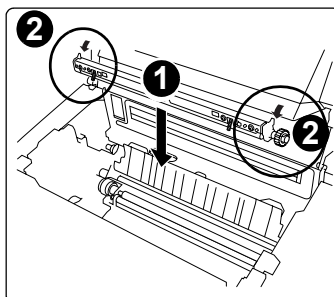


- 9 Align the tabs on the toner cartridge (one on each side) with the notches in the printer, and then insert the cartridge as far as possible into its compartment.

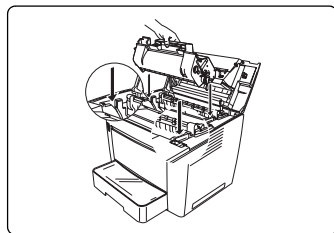




**10** Close the top cover.

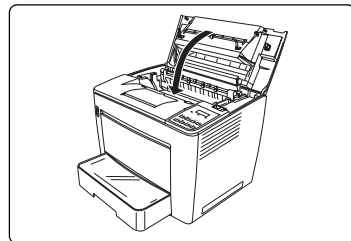

**11** Turn on the printer.

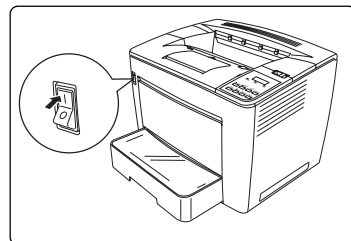







---

***Using Media***

**3**



# Introduction

This chapter provides information on handling, selecting, and storing media.

<b>Getting Started</b>	
"How do I take <b>care</b> of media?"	page 32
"What should I watch out for when <b>handling media</b> ?"	page 35
"What <b>type and amount of media</b> can I load?"	page 37
"What <b>sizes/weights</b> of media can I use?"	page 37
"What Is the <b>guaranteed</b> imageable (printable) area?"	page 39
<b>Job Modes and Media Types</b>	
"Why have two different job modes?"	page 41
"How do I select the <b>job mode</b> ?"	page 41
<b>Media Types</b>	
"How do I <b>select the media type</b> ?"	page 41
<b>Other Information</b>	
"How do I <b>prepare the media</b> ?"	page 42
"How do I <b>manually duplex</b> ?"	page 52
"How do I <b>autoduplex</b> ?"	page 52
"Where can I get more <b>information</b> ?"	page 53



## Attention

Using unsupported media such as inkjet paper or coated color transparencies will result in damaging the printer and in voiding your warranty.

## Media Storage and Handling

### How do I take care of media?

Keep media on a flat, level surface in its original wrapper until it is time to load it.

If media has been removed from its wrapper, place it in its original packaging and store in a cool, dark place.



### When storing media, avoid

- Moisture, excess humidity

*Keep media between 30% to 65% relative humidity. Toner does not adhere well to moist or wet paper*

*On the other hand, media that has been stored for a long time without staying in its packaging may dry up too much and also cause jamming.*

- Direct sunlight
- Excess heat (up to 86° F/30° C)
- Dust
- Leaning against other objects or placed in an upright position

Before purchasing a large quantity or special media, do a trial printing with the same media and check print quality.

### What should I watch out for when handling media?

#### Attention

---

**Do not use the media types listed below. These could cause poor print quality, media jams, or damage to the printer.**

---

#### Do not use media that is

- Coated with a processed surface (such as carbon paper, digitally gloss-coated media, colored paper that has been treated)
- Carbon backed
- Iron-on transfer media (heat-sensitive paper, heat-pressure paper, heat-press transfer paper)
- Cold water transfer paper
- Pressure sensitive
- Special media designed specifically for **inkjet printers** (superfine paper, glossy paper, glossy film, postcards, etc.)
- Media that has already been printed on
  - An inkjet printer
  - A monochrome or color laser printer or copier
  - A heat-transfer printer
  - Another printer or fax machine
- Wet (or damp)
- Layered
- Adhesive
- Folded, creased, curled, embossed, warped, or wrinkled



- Perforated, three-hole punched, or torn
- Too slick, too coarse, too textured
- Different in texture (roughness) on the front and back
- Too thin or too thick
- Stuck together with static electricity
- Composed of foil or gilt; too luminous
- Heat sensitive or cannot withstand the fusing temperature (392° F/200° C)
- Irregularly shaped (not rectangular or not cut at right angles)
- Attached with glue, tape, paper clips, staples, ribbons, hooks, or buttons
- Acidic
- Any other media that is not approved

**Use media that is**

- Suitable for plain-paper laser printers, such as standard paper

## **What should I watch out for when loading custom media?**

When printing on media that is longer than 14 inches (355.6 mm), use the multipurpose tray extender and support the media with your hands underneath while it feeds through the multipurpose tray.

Select plain paper mode in Administration/Media/Plain Paper menu. Set the printer for custom-sized media in the Operator Control/Multipurpose Sz/Custom menu.

**Do not use custom media that does not fit the approved dimensions**

- **Width:** 3.4 inches (86 mm) up to 11.7 inches (297 mm)
- **Length:** 5.5 inches (139.7 mm) up to 17.0 inches (432 mm)

## **What should I watch out for when loading envelopes?**

**Do not use envelopes that have**

- Sticky flaps
- Tape seals, metal clasps, paper clips, fasteners, or peel-off strips for sealing
- Transparent windows
- Too rough of a surface
- Material that will melt, vaporize, offset discolor, or emit dangerous fumes
- Been presealed

**Use envelopes that are**

- Common office envelopes with diagonal joints, sharp folds and edges, and ordinary gummed flaps



- Approved for laser printing
- Dry
- Printed on the front address side only

## What should I watch out for when loading labels?

A label consists of a face sheet (the printing surface), adhesive, and a carrier sheet:

- The face sheet must follow the plain paper specification.
- The face sheet surface must cover the entire carrier sheet, and no adhesive should come through on the surface.

You can print continuously with label paper. However, this could affect the media feed, depending on the media quality and printing environment. If problems occur, stop the continuous print and print one sheet at a time.


Format label data within your application. Try printing your data on a plain sheet of paper first to check placement. Check your application documentation for other information on printing labels.

### Do not use label sheets that

- Have labels that easily peel off
- Have the backing sheets that have peeled away or have exposed adhesive

*Labels may stick to the fuser, causing them to peel off and media jams to occur.*

- Are precut

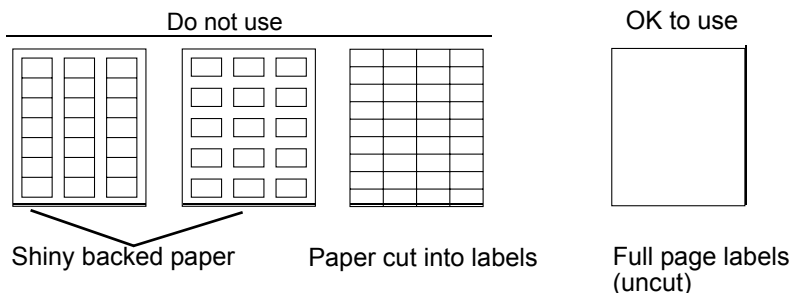

### Use label sheets that are

- Recommended for laser printers

## What should I watch out for when loading postcards?

### Do not use postcards that are

- Coated
- Warped or bent



- Designed for inkjet printers
- Multicolored
- Preprinted or multicolored (may result in printer jamming)

#### **Use postcards that are**

- Japanese Post Office standard postcards (3.9 x 5.8:" [100 x 148 mm]) recommended for laser printers

## **What should I watch out for when loading thick stock?**

Test all thick stock to ensure acceptable performance and to ensure that the image does not shift.

#### **Do not use thick stock that is**

- Mixed with any other media in the media trays (this causes media jams)

## **What should I watch out for when loading transparencies?**

### **Attention**

**Using unsupported transparency media such as coated color transparencies will result in damaging the printer and in voiding your warranty.**

Remove transparency media as soon as possible from the output tray to avoid static buildup.

If you touch the face of transparencies with your bare hands, print quality may be affected. Do not handle transparency media too much.

Do not fan large quantities of transparency media before loading it.

You can print continuously with transparencies. However, this could affect the media feed, depending on the media quality, static buildup, and printing environment. For the multipurpose tray, if you have problems loading a large number of transparencies at a time, try loading only 1–10 sheets.

### **Attention**

**Use only KONICA MINOLTA-approved transparencies. For a list of currently approved media, go to [printer.konicaminolta.com](http://printer.konicaminolta.com). To order approved transparencies, go to [printer.konicaminolta.com](http://printer.konicaminolta.com).**

#### **Do not use transparencies that**

- Are coated, such as transparencies designed for color printers or copiers
- Have static electricity that will cause them to stick together

#### **Use transparencies that are**

- Monochrome, uncoated transparencies (also known as OHP film)



## What type and amount of media can I load?



Use only media approved for laser products. For a list of currently approved media, go to [printer.konicaminolta.com](http://printer.konicaminolta.com). To order approved transparencies, go to [printer.konicaminolta.com](http://printer.konicaminolta.com).

Media Source/Maximum Amount Based on 16–20 lb bond (75 g/m <sup>2</sup> )*		Input Capacity**		
		Upper Media Tray***	Multi-purpose (MPT) Tray	Optional Media Trays*** (Optional1, 2, or 3)
Media Type				
Plain Paper	16–24 lbs (60–90 g/m <sup>2</sup> )	500 FU (A5 media: 350 FU)	200 FU	500 FU
Special Media	Custom Media	Not supported	50 FU	Not supported
	Envelopes		100 FU	
	Label Stock (letter or A4 only)		50 FU	
	Postcards (Japanese Size)		100 FU	
	Thick Stock 24–90 lbs (91–163 g/m <sup>2</sup> )		50 FU	
	Transparencies (letter or A4 only)		100 FU	
Notes	* Capacity for other weights and thicknesses varies accordingly ** All media is inserted face up into the trays. *** You can rename these trays for your convenience. See the <i>Crown Books</i> (in PDF on the <i>Documentation</i> CD-ROM) for more information.			

Often, an arrow on the media package label indicates the printing-side of the media. If you can't remember which side of the media to print on, remove the media from the tray, rotate the stack 180°, turn the stack over, and then place it back in the tray.



### Attention

Do not allow media to go above the fill limit mark inside the tray or the media may not be fed correctly.

## What sizes/weights of media can I use?

Media	Media Size		Weights	Feed Direc- tion	Input Source *	Output Source	Auto- duplex
	Inches	Millimeters					
8 Kai	10.2x14.6	260.0x370.0	16–24**	SEF	M	Top	No
16 Kai	7.3x10.2	185.0x260.0		LEF	M	Top	No
32 Kai	5.1x7.3	130.0x185.0		LEF	M	Top	No
A3	11.7x16.5	297.0x420.0		SEF	UO/M	Top/Mbox	Yes



Media	Media Size		Weights	Feed Direction	Input Source *	Output Source	Auto-duplex
	Inches	Millimeters					
A4 Label	8.2x11.7	210.0x297.0	N/A	LEF	M	Top	No
A4 Plain Paper	8.2x11.7	210.0x297.0	16–24	LEF	UO/M	Top/Mbox	Yes
A4 Transparency	8.2x11.7	210.0x297.0	N/A	LEF	M	Top	No
A5	5.9x8.3	148.0x210.0	16–24	LEF	M	Top	Yes
B4	10.1x14.3	257.0x364.0		SEF	UO/M	Top/Mbox	Yes
B5 (ISO)	6.6x9.8	176.0x250.0		LEF	M	Top	Yes
B5 (JIS)	7.2x10.1	182.0x257.0		LEF	UO/M	Top/Mbox	Yes
C5	6.4x9.0	162.0x229.0		SEF	M	Top	No
C6	4.5x6.4	114.0x162.0		SEF	M	Top	No
Commercial #10 Envelope	4.1x6.4	105.0x241.3	N/A	SEF	M	Top	No
Custom Sizes, Minimum	3.4x5.5	86.0x140.0	16–24	Varies	M	Top	No
Custom Sizes, Maximum	11.7x17.0	297.0x 432.0					
International DL Envelope	4.3x8.7	110.0x220.0	N/A	SEF	M	Top	No
Executive	7.3x10.5	184.0x267.0	16–24	LEF	M	Top/Mbox	Yes
Folio (Govt. Legal)	8.5x13.0	216.0x330.0		SEF	M	Top/Mbox	Yes
Government Letter	8.0x10.5	203.2x267.0		LEF	UO/M	Top/Mbox	Yes
Japanese Postcard	3.9x5.8	100.0x148.0	N/A	SEF	M	Top	No
Ledger	11.0x17.0	279.4x432.0	16–24	SEF	UO/M	Top/Mbox	Yes
Legal	8.5x14.0	215.9x355.6		SEF	UO/M	Top/Mbox	Yes
Letter Label	8.5x11.0	215.9x279.4	N/A	LEF	M	Top	No
Letter Plain Paper	8.5x11.0	215.9x279.4	16–24	LEF	UO/M	Top/Mbox	Yes
Letter Transparency	8.5x11.0	215.9x279.4	N/A	LEF	M	Top	No
Monarch	3.9x7.5	98.0 x 191.0	16–24	SEF	M	Top	No
Statement	5.5x8.5	140.0x216.0		LEF	M	Top	Yes
Thick stock			25–90	Varies	M	Top	No
<b>Notes:</b> LEF = Long-edge feed; SEF = Short-edge feed *UO = Upper or optional media tray(s); M = Multipurpose tray; Mbox = 4-bin Mailbox **16–24 = 16–24* lb bond (60–90g/m <sup>2</sup> ); 25–90 = 25–90 lbs (91–163 g/m <sup>2</sup> ); N/A = Not applicable; use only approved media Autoduplex up to 24 lb bond (90 g/m <sup>2</sup> ); do not autoduplex thick stock 25–90 lb (91–163 g/m <sup>2</sup> ).							



## What Is the guaranteed imageable (printable) area?


Each media size has a specific imageable area, the maximum area on which the printer can print clearly and without distortion.

This area is subject to both hardware limits (the physical media size and the margins required by the printer) and software constraints (the amount of memory available for the full-page frame buffer). The guaranteed imageable (printable) area for all media sizes is the page size minus 0.157" (4 mm) from all edges of the media.

### Edge-to-Edge Printing

Edge-to-edge printing removes the standard 0.157" (4 mm) margin from all media sizes. Edge-to-edge printing requires driver support, but not all drivers support edge-to-edge printing.

- 1 Enable edge-to-edge printing through the printer's control panel (Administration/Engine/Edge-to-Edge menu).
- 2 From the PagePro 9100 Windows printer driver, select PostScript custom page size and set it to match the actual media size. From the PagePro 9100 Macintosh printer driver, select custom page size and set it to match the actual media size.
- 3 Set your margins to 0 from the appropriate application. Certain applications will not support edge-to-edge printing.

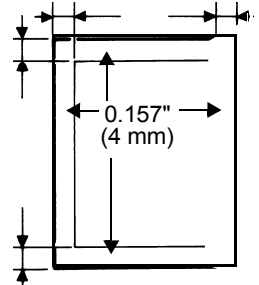

Printing outside the 0.157" (4 mm) margin is nonguaranteed. The nonguaranteed area is the area on which you can print, but image quality in these areas might be compromised.




*For further information, refer to the readmes on the Documentation CD-ROM.*

### Envelopes

Envelopes have a nonguaranteed flap area that varies with envelope type.



*Envelope print orientation is determined by your application.*

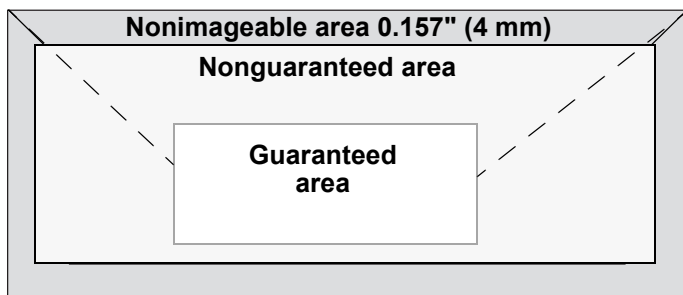



## Page Margins

Margins are set through your application. Some applications allow you to set custom page sizes and margins while others have only standard page sizes and margins from which to choose. If you choose a standard format, you may lose part of your image (due to imageable area constraints). If you can custom-size your page in your application, use those sizes given for the imageable area for optimum results.

## Image Alignment

If for any reason, you need to change the image alignment, you can do so in several different ways:

- Adjust the margins or page size through your application (recommended method).
- Use the printer's control panel (Administration/Engine/Image Alignment or the Administration/Engine/Edge-to-Edge menu).
- Use the PostScript translate and scale operators to reduce image size and change its placement on the page (requires PostScript programming knowledge).

## Output Tray

The single face-down output tray has a capacity of 500 sheets of 20 lb (75 g/m<sup>2</sup>) bond paper. If the media stacks too high, your printer may experience media jams, excessive media curl, or static buildup. Remove transparency media as soon as it's printed.

## Media

### Attention

---

**Use only KONICA MINOLTA-approved media. For a list of currently approved media, go to [printer.konicaminolta.com](http://printer.konicaminolta.com). To order approved transparencies, go to [printer.konicaminolta.com](http://printer.konicaminolta.com).**

---

- Try printing your data on a plain sheet of paper first to check placement.
- Media is fed either on the short or long edge, depending on the size of the media. See "What sizes/weights of media can I use?" on page 37.
- Test any stock (and the number of sheets of thick stock a media tray can hold) thicker than 24 lb bond (90 g/m<sup>2</sup>) to ensure that its performance is acceptable.



- Select **Single User Mode** or **Network Mode** (job modes) to specify how media type requests are handled. For more information, refer to the *Crown Books* in PDF format on the *Documentation* CD-ROM.
  - In **Single User Mode**, you can select the media type and size from the drivers. The driver will overwrite any settings on the printer.
  - In **Network Mode**, if special media is not selected in both the driver and from the printer's control panel, the printer uses plain paper settings.
- Select the **media type**.

## Why have two different job modes?

**Network mode** is designed for printing on the network, so that print jobs are not held up by requested media changes. If the requested media type from the driver matches the media type set for the inputbin, the job will print on the requested media type. If the printer does not sense a requested media type (such as transparency) in the inputbin selected in the driver, it will continue and print the job on plain paper.

**Single user mode** is designed to allow a printer to stop and request a specific media type (such as transparency or thick stock) when requested by the driver, regardless of the current media type in the inputbin. This allows more flexibility in the individual print job, but it can bottleneck the printing process if the printer is waiting for a media change and you do not physically go to the printer and make the change. Since your printer uses a First-In First-Out order in job processing, all print jobs will be paused, waiting for the media change.

## Which job mode is best?

The specific mode that is best depends upon your particular network environment. If getting your jobs printed in a timely manner is most important, use network mode. If getting your jobs printed on the requested media is most important, use single user mode.

## How do I select the job mode?

In network mode, you must select a specific media type from the printer driver and Network Mode from the printer's control panel (Operator Control/Media Mode/Network Mode). In single user mode, you only have to specify the type of media that you are printing on in the driver.


## How do I select the media type?

For example, in the printer driver (Paper tab, Media Type option), select Plain Paper.



# Loading Media

For a list of currently approved media, go to [printer.konicaminolta.com](http://printer.konicaminolta.com). To order approved transparencies, go to [printer.konicaminolta.com](http://printer.konicaminolta.com).

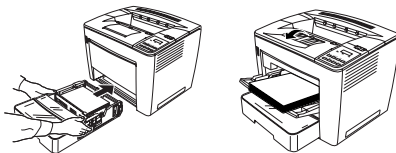

## How do I prepare the media?




*Don't unwrap paper above the printer, as this might cause paper particles to fall into the printer.*

- 1 Take off the top and bottom sheets of a ream of paper.
- 2 Fan a stack of approximately 500 sheets of paper to prevent static buildup.

*Don't fan large quantities of transparency media.*

*A fill limit mark is provided on the inside right side of the tray. The upper and optional media tray(s) hold approximately 500 sheets of 20 lb bond (75 g/m<sup>2</sup>) paper.*

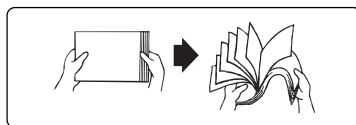


## How do I refill a media tray?

- 1 Pull out the media tray until it stops.




*The illustration only shows the upper media tray. The following instructions are also valid for the optional media trays.*

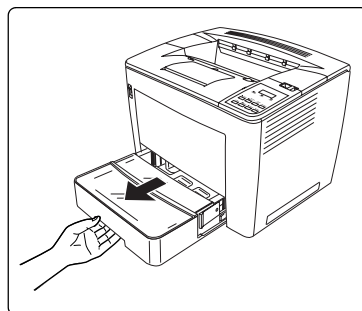





- 2 While pressing in the release buttons (one on each side) ①, remove the tray ②.

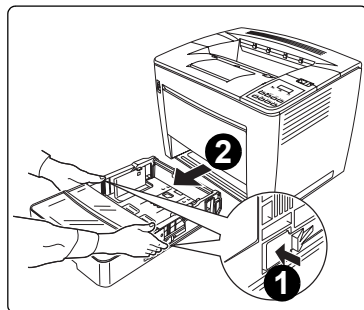


- 3 Remove the media tray cover.

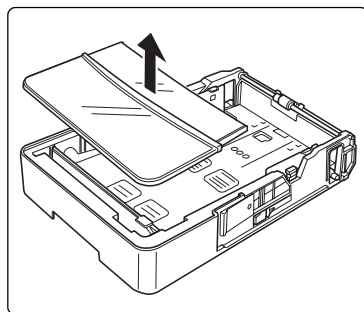

- 4 Lift up the gray lever on the right end of the paper retainer ①, and then slide the paper retainer to the right ②.

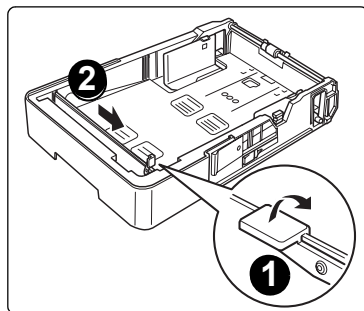


- 5 Lift up on the left end of the paper retainer ① to remove it ②.

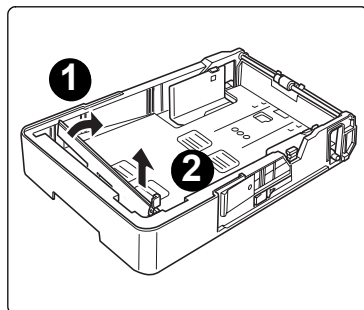



- 6 Insert the right end of the paper retainer ① into the slot for the size of paper to be loaded ②.


*The paper size is detected depending on the position of the paper retainer. Correctly position the paper retainer according to the size of paper to be loaded.*

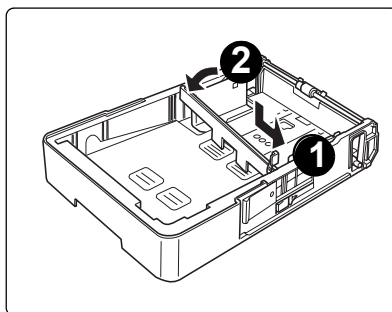

- 7 Slide the paper retainer to the left ①, and then press down on the gray lever ② to secure the paper retainer.


**Attention**

**Make sure the paper retainer is seated properly.**

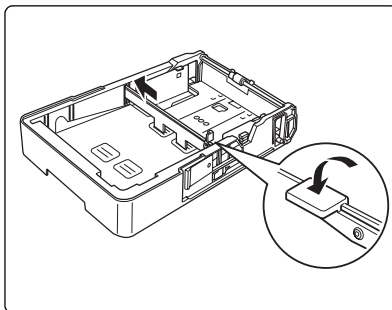


- 8 Align the four edges of the paper, and then load the paper printing side up.

**Do not load media on this side.**

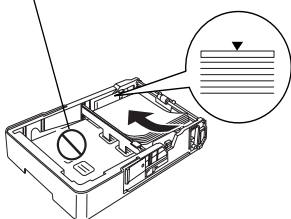

**Long-edge Feed Examples**

A4, B5, Government Letter, and Letter

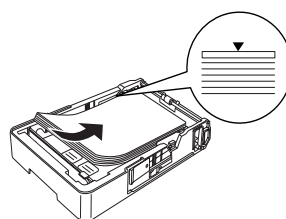

**Short-edge Feed Examples**

A3, B4, and Ledger


*A maximum of 500 sheets (20 lb bond [75 g/m<sup>2</sup>] plain paper) can be loaded. If media is loaded past the triangular mark, it may not be fed correctly.*




- 9 Press in the button on the paper guide ①, and then slide the guide against the edge of the paper ②.

**! Attention**


The media should fit easily between the guides. Improperly adjusted guides may cause poor print quality, media jams, or printer damage.

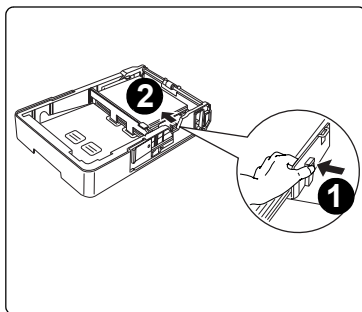

- 10 Install the media tray cover.

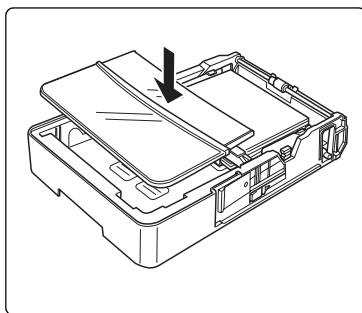


- 11 Install the media tray, inserting it as far as possible into the printer.

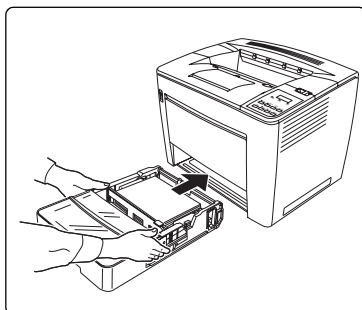




- 12 When printing on media B4 or larger, fold open the output tray extension.

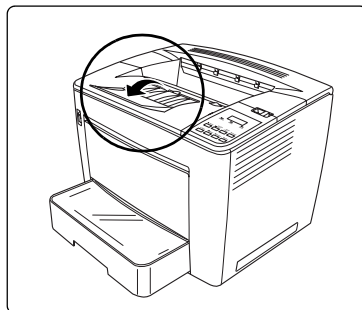


- 13 Affix the media size labels (supplied with the printer) to the media tray(s) in order to indicate the size of the loaded paper.

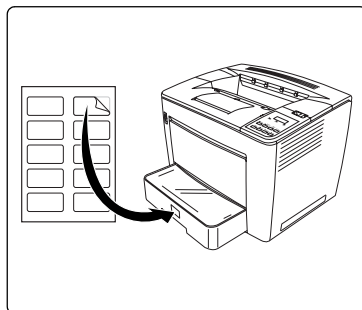


## How do I refill a multipurpose media tray? 🎥

For information about approved media, refer to page 37.

The multipurpose tray is used for all media types, especially envelopes, labels, Japanese-sized postcards, and thick stock.

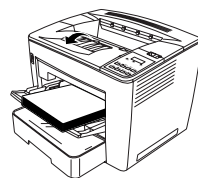


- 1 Open the multipurpose tray.

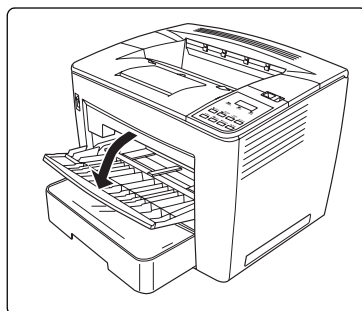




- 2 While pressing in the button ① on the media guide at the right, slide the media guide ② to adjust it to the appropriate size.

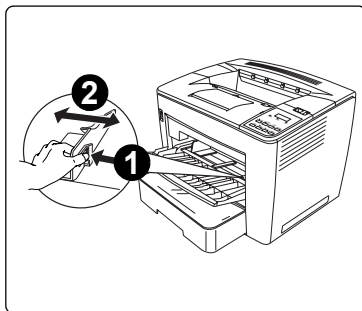


- 3 Fan a stack of media.

*A fill limit mark is provided on the inside of the tray. A maximum of 200 sheets (75 g/m<sup>2</sup> plain paper) can be loaded. If media is loaded past the triangular mark, it may not be fed correctly.*

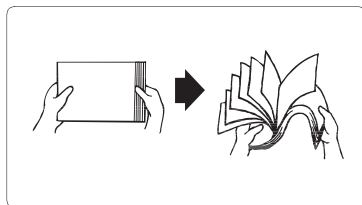


- 4 Align the four edges of the media, and then lightly slide the media as much as possible into the feed slot (printing-side up).

*Often, an arrow on the package label indicates the printing-side of the media.*

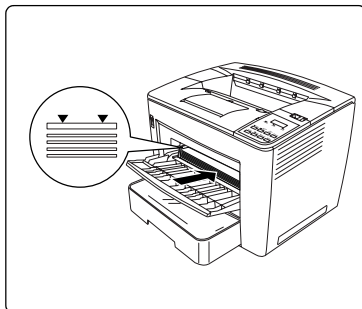

### **⚠ Attention**

**Make sure the media fits easily between the guides. Improperly adjusted guides may cause poor print quality, media jams, or printer damage.**

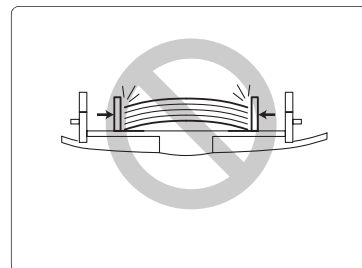



## Using Media Other Than Plain Paper

### Attention

For a list of currently approved media, go to [printer.konicaminolta.com](http://printer.konicaminolta.com). To order approved transparencies, go to [printer.konicaminolta.com](http://printer.konicaminolta.com).

### Attention



Although your printer was designed for occasional printing on a wide range of media types, it is not intended to print exclusively on a single media type except plain paper. Continuous printing on media other than plain paper (such as envelopes, labels, thick stock, or transparencies) may adversely affect print quality or reduce engine life.

Set the single user job mode versus network job mode shown on page 41 before you load media.

## How do I load and print envelopes?





*Envelope printing is supported only from the multipurpose tray.*

- 1 In the printer driver (Paper tab, Media Type option), select Envelope.
- 2 If you are in Network Mode, on the control panel, select Operator Control/ MPT Media, and select Thick Stock.
- 3 Select the size of envelope, either
  - a Press the MP Size Select  key and scroll to the required envelope size and select it, or
  - b On the control panel, press the Menu  key and select Operator Control/Multipurpose Sz, and scroll to the required envelope size, and select it.
- 4 Place the envelopes on a flat surface, and flatten them by pressing down the corners.
- 5 Flex the envelope stack (including the edges) to remove any stiffness.
- 6 Correct any bent corners, and tap the envelopes on a flat surface to align them.



- 7 Open the multipurpose tray and adjust the media guides to the width of the envelopes.

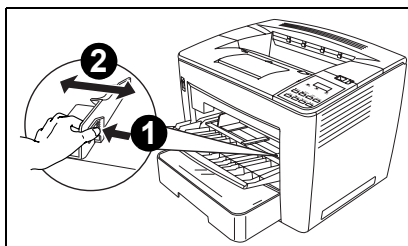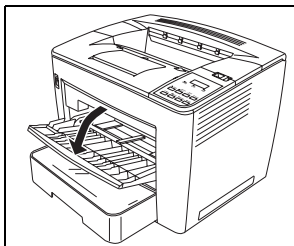


### **! Attention**

**Improperly adjusted guides may cause poor print quality, media jams, or printer damage.**

- 8 Fold the flaps.

*Make sure the adhesive is dry.*

- 9 Place the envelope stack into the multipurpose tray with the printing-side up.

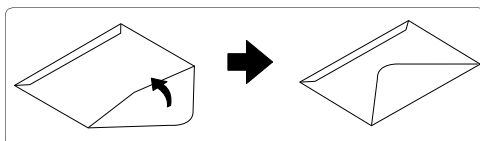

*Print envelopes on the front address side only. Some parts of the envelope consist of three layers of paper—the front, back, and flap. Anything printed in these layered regions may be lost or faded.*



*Check your application documentation to determine if the flap should be placed on the left or on the right. You can also print a single envelope to check the orientation before printing multiple copies.*

- 10 Recheck the media guides to make sure they are adjusted to the width of the envelopes.

- 11 Print the envelopes.

- 12 Open the flap of each envelope immediately (before it cools) after the envelope is delivered to the output tray.





*Because the envelopes pass through heated rollers, the gummed area on the flaps may seal. Using envelopes with emulsion-based glue avoids this problem.*



## How do I load and print labels?





*Label printing is supported only from the multipurpose tray in letter or A4 media sizes.*

- 1 In the printer driver (Paper tab, Media Type option), select Label Stock.
- 2 If you are in Network Mode, on the control panel, select Operator Control/ MPT Media, and select Thick Stock.
- 3 Select the size of label.
  - a Press the MP Size Select  key and scroll to the required label size and select it, or
  - b On the control panel, press the Menu  key and select Operator Control/Multipurpose Sz. Scroll to the required label size and select it.
- 4 Load the label media face up in the multipurpose tray.
- 5 Adjust the media guides to the width of the label media.
- 6 Print the labels.

## How do I load and print postcards?



*Postcard printing is only supported from the multipurpose tray.*

- 1 In the printer driver (Paper tab, Media Type option), select Postcard.
- 2 If you are in Network Mode, on the control panel, select Operator Control/ MPT Media, and select Thick Stock.
- 3 Select postcard.
  - a Press the MP Size Select  key and scroll to Postcard and select it, or
  - b On the control panel, press the Menu  key and select Operator Control/Multipurpose Sz. Scroll to Postcard and select it.
- 4 Place the postcards on a flat surface, and flatten them by pressing down the corners.
- 5 Remove any media in the media tray.
- 6 Load the postcard media printing-side up in the multipurpose tray.
- 7 Adjust the media guides to the width of the postcards.
- 8 Print the postcards.



## How do I load and print thick stock?

### Attention


**Do not mix thick stock with any other media in the same tray, as this will cause printer jamming.**

- 1 In the printer driver (Paper tab, Media Type option), select Thick.
- 2 If you are in Network Mode, on the control panel, select Operator Control/ MPT Media, and select Thick Stock.
- 3 Load the new media.
- 4 Adjust the media guides.
- 5 Print the thick stock.

## How do I load and print transparencies?


### Attention

**Use only transparencies approved for this printer. For a list of currently approved media, go to [printer.konicaminolta.com](http://printer.konicaminolta.com). To order approved transparencies, go to [printer.konicaminolta.com](http://printer.konicaminolta.com).**

- 1 In the printer driver (Paper tab, Media Type option), select Transparency and select either Letter or A4.
- 2 If you are in Network Mode, on the control panel, select Operator Control/ MPT Media, and select Transparency.
- 3 Press the MP Size Select  key and scroll to the required transparency size and select it.
- 4 Fan a few transparencies.



*Fanning a large number will build up static electricity.*

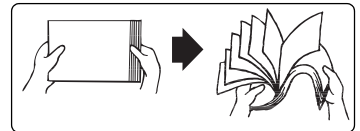

- 5 Put media face-up in the multi-purpose tray and adjust the media guides to the width of the transparencies.

### Attention

**Improperly adjusted guides may cause poor print quality, media jams, or printer damage.**

- 6 Print the transparencies.
- 7 Immediately remove the printed transparencies from the output tray.



# Duplexing

Select paper with high opacity for duplex (2-sided) printing. Opacity refers to how effectively paper blocks out what is written on the opposite side of the page. If the paper has low opacity (high translucency), then the printed data from one side of the page will show through to the other side. Check your application for margin information. For best results, print a small quantity to make sure the opacity is acceptable.

## How do I manually duplex?



*Media jams may occur if the printed sheet(s) reinserted are not entirely flat.*

- 1 In the printer driver (Paper tab), select Simplex, then double-click OK.
- 2 In the Print Document screen, select All.
- 3 Select and print the Odd-Numbered Pages.
- 4 Remove the media, flip it over, and select and print the Even-Numbered Pages.

## How do I autoduplex?



*Only plain paper 16–24 lb bond (60–90 g/m<sup>2</sup>) can be autoduplexed. Autoduplexing envelopes, labels, postcards, thick stock over 24 lb (90 g/m<sup>2</sup>), or transparencies is not supported.*

You should verify that the duplexer is physically installed on the printer to have the job duplex successfully. Otherwise, the print job will print as simplex even if you selected duplex.

Your printer is configured with 64 MB of RAM. Duplex (2-sided) printing can be done automatically with a duplexer and enough memory installed. For example, a 1200 dpi duplex ledger-size page would require 96 MB of SDRAM. Additional memory can be added up to 512 MB. Very high coverage (for example high content and graphics) pages may revert to 600 dpi when duplex printing if enough memory is not installed.

Print Type Media Size	Simplex		Duplex	
	600 dpi	1200 dpi	600 dpi	1200 dpi
A3	64 MB	96 MB	64 MB	96 MB
A4		64 MB		
Ledger		96 MB		
Legal		64 MB		
Letter		64 MB		



- 1 Check your application to determine how to set your margins for duplex printing.
- 2 To print duplex (both sides of the sheet), load the media with the top of the media toward the back of the tray, printing-side up.  
*In autoduplexing, the back side is printed first and the front side is printed last.*
- 3 Set the driver—for example: in the Layout tab, Duplex Options, select Long Edge (flipped horizontally as in a loose-leaf notebook), or Short Edge (flipped vertically as on a clipboard) as the Duplex option.
- 4 Click OK.

### Where can I get more information?

See your application documentation for specific information on formatting data and printing.

See the *Service & Support Guide* for a complete list of support telephone numbers.







---

# ***Maintaining the Printer***

# 4

---

---



# Introduction

"How do I <b>handle</b> the printer?"	page 56
" <b>When</b> does the printer need cleaning?"	page 57
"What cleaning <b>materials</b> should I use?"	page 57
"How do I clean the <b>media tray pickup rollers</b> ?"	page 58
"How do I clean the <b>multipurpose tray pickup rollers</b> ?"	page 59

## How do I handle the printer?

- **Do not open any cover of the printer during printing.**
- Handle the printer with care to preserve its life. Abuse may cause damage.
- Read all caution and warning labels carefully, making sure to follow any instructions contained in them. These labels are located on the inside of the printer.
- Do not tilt the printer more than  $\pm 1\%$  in any direction.



*For best output quality and longest consumables life, keep the printer on a hard, flat, level surface. A surface can be tested for levelness with a standard round pencil. If the pencil rolls, the surface is not level.*

- Do not oil, lubricate, or disassemble the printer.
- Do not touch the transfer roller cartridge, electrical contacts, gears, or laser beam devices. Doing so may damage the printer and cause the print quality to deteriorate.
- Do not place anything on the top of the printer.
- Always close the printer covers gently.
- Do not leave the printer's cover open for any length of time, especially in well-lit places; light may damage the toner cartridge.
- Be careful when cleaning the inside or removing paper jams, as the fuser and other internal parts may become very hot.



### Attention

**The fuser unit is hot. The fuser temperature drops gradually (one hour wait time).**



- Do not cover the printer immediately after using it.



# Cleaning

## When does the printer need cleaning?

Clean this item thoroughly...	After...
Exterior	Once a month or as needed, whichever comes first.
Interior (media feed rollers)	Media stops being fed from the media tray(s).
<b>Note:</b> We recommend that you do not clean elsewhere inside the printer. If necessary, refer to the <i>Service &amp; Support Guide</i> or <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a> for a KONICA MINOLTA-authorized service provider near you.	

## What cleaning materials should I use?

Exterior—Use	Exterior—Avoid
A soft <b>dry</b> cloth to clean the control panel.	Sharp or rough implements (such as wire or plastic cleaning pads or brushes); liquids.
A soft, wrung-out <b>damp</b> cloth to clean the outside of the printer.	Aerosol or pump-sprayed cleaners; too much dampness in the cloth.
Mild neutral detergent to clean the outside of the printer, if necessary.	Abrasive or corrosive solutions that contain solvents (such as alcohol, benzine, or thinners).
Interior Media Feed Rollers—Use	Interior—Avoid
A soft <b>dry</b> clean cloth.	Sharp or rough implements (such as wire or plastic cleaning pads or brushes); any liquids.

## Cleaning the Printer Exterior



### Attention

Never spray cleaning solution directly on the printer's surface; the spray could penetrate through the air vents of the printer and damage the internal circuits.



## Cleaning the Printer Interior

Make sure any parts removed during cleaning are replaced before you plug in the printer.

### WARNING!

**Turn off the printer, unplug the power cord, and disconnect all interface cables before cleaning.**

**Do not spill water or detergent into the printer; otherwise the printer will be damaged and an electric shock may occur.**

**Read all caution and warning labels carefully, making sure to follow any instructions contained in them. These labels are located on the printer's interior.**

## Media Tray Pickup Rollers


The printer's pickup rollers contain a sensor to detect the density of media passing by.

### How do I clean the media tray pickup rollers?


When the sensor gets dirty or dusty, print quality is degraded.

- 1 Pull the media tray out of the printer until it stops.

*The illustration shows the upper media tray. Follow the same instructions for the optional media tray(s).*

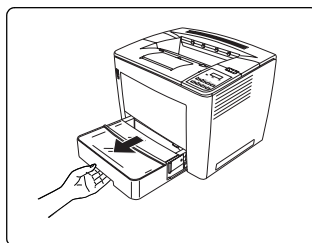


- 2 Remove the media tray.

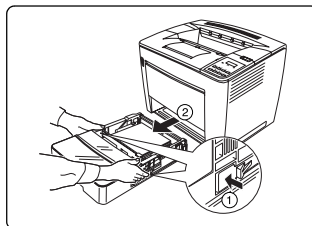




- 3** Wipe the pickup roller with a soft dry cloth.

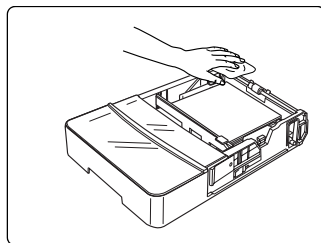


- 4** Reinsert the media tray into the printer.

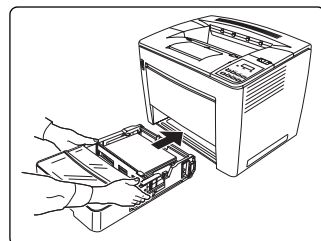


### How do I clean the multipurpose tray pickup rollers?

- 1** Turn off the printer.

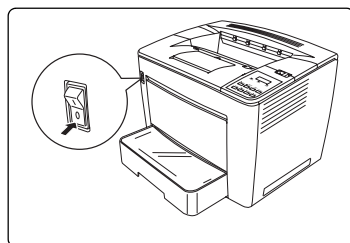

- 2** Open the top cover.

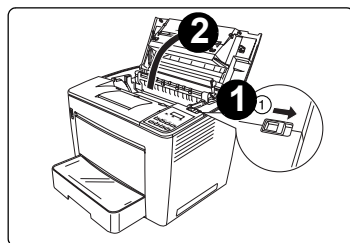





## **⚠ Attention**

Never touch the copper or brass electrodes ① or electrical parts that are located inside the top cover and under-neath the toner cartridge, as a printer malfunction can result.


Be careful not to touch ② around the image transfer roller (*touching certain parts in this area may result in reduced print quality*) or ③ around the fusing unit (*since the inside reaches temperatures of about 392 °F (200 °C), touching any part in this area may result in burns*).

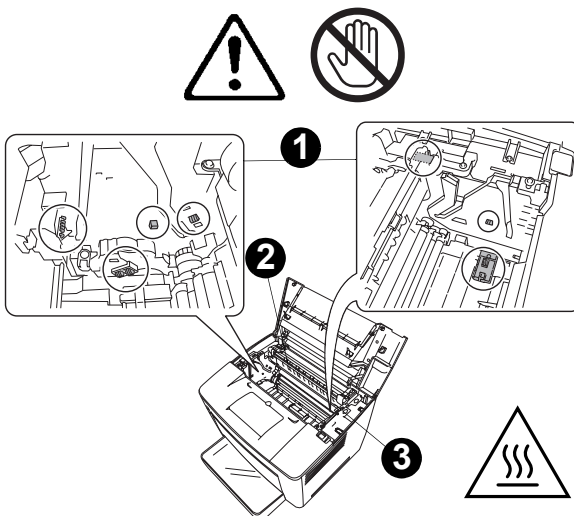

- 3 Remove the toner cartridge and store it in a light-protected bag.

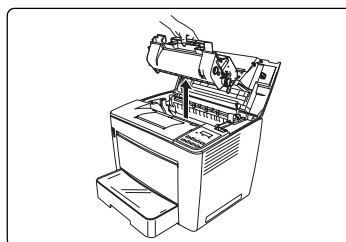


- 4 Open the media feed roller cover.

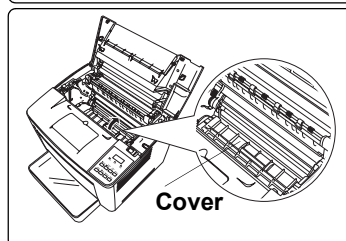





- 5 Wipe the two media feed rollers with a soft, dry cloth.

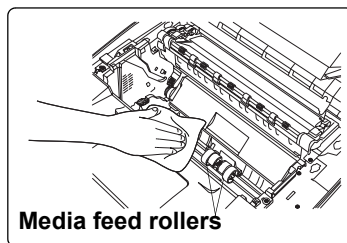


- 6 Close the media feed roller cover.

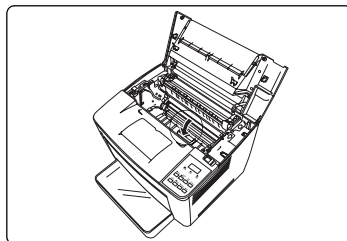


- 7 Align the tabs on the cartridge (one on each side) with the notches in the printer, and then insert the cartridge as far as possible into its compartment.

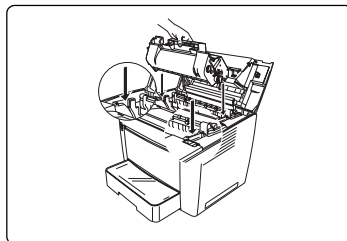

- 8 Close the top cover.

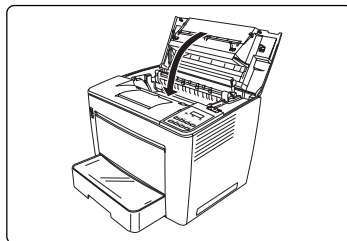

- 9 Turn on the printer.

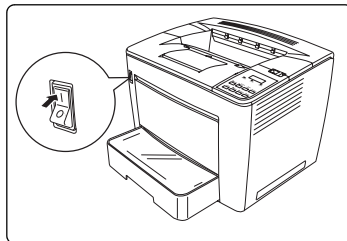







---

***Troubleshooting***

**5**

---

---



# Introduction

"Printing a <b>Status Page</b> "	page 64
" <b>PDF</b> File Printing"	page 64
" <b>Preventing Media Jams</b> "	page 66
"Automatic <b>Jam Recovery</b> "	page 67
"Understanding the <b>Media Path</b> "	page 67
"Understanding Media <b>Jam Status Messages</b> "	page 69
" <b>Clearing</b> Media Input <b>Jams</b> "	page 69
" <b>Solving</b> Problems"	page 81
"Status, Error, and Service <b>Messages</b> "	page 93
"Additional <b>Assistance</b> "	page 101

## Printing a Status Page

There are two kinds of status pages:

- **Standard:** A one-page overview of the most common printer settings used to confirm that your printer is printing.
- **Advanced:** Information about printer parameter settings, fonts, and emulations available. The document may have many pages, depending on the fonts installed. Print an advanced status page in case you need to restore any current memory settings, for example, after a DIMM installation.

Select the type of status page through the Administration/Special Pages/Status Page Type menu on the control panel.

After you have chosen the type you want, press the **Status ? Page** button on the control panel to verify the printer is printing correctly. You can also print a status page through the Administration/Special Pages/Print Status menu.

## PDF File Printing

Your printer has the ability to print PDF files directly just as it does for PostScript and PCL files. This can be a time-saving feature. Direct printing removes the need to open the file in an application, such as Acrobat Reader, then print the file via a PostScript or PCL driver. Your printer supports PDF version 1.3 and below. The PDF file can be sent to the printer using any method (lpr, ftp, etc.) that is normally used to print PostScript or PCL files.



## Adjusting Memory Clients for PDF Printing

The unique structure of PDF files requires that you make some adjustments to your printer's default memory clients. All PDF files contain information at the end of the files that is needed to correctly format them in the printer. Because of this, the entire file must be spooled into the printer before it can be interpreted. In order to spool the entire job into the printer, the Host Input (Spool) memory client may need to be adjusted. To determine the required size for the Host Input memory client, you first need to estimate the maximum file size, add 10% to this number and this becomes your required Host Input memory size. In the event that you experience problems, you may want to increase the Host Input memory size further. The maximum size of PDF files which may be printed is determined by the amount of installed memory. Direct printing of complex or large PDF files may require additional memory (RAM) and/or a hard disk.



### Attention

---

**We recommend an internal hard disk for optimum performance when printing large PDF files. Refer to the *Crown Books* (in PDF on the *Software Utilities* CD-ROM) on how to adjust the memory clients.**

---

## Printing Preformatted Files Using CrownView

Your printer also provides a utility via the CrownView web page for printing PDF files directly from the host using the browser. Users will be presented with a Browse button that, when selected, will enable a file chooser on the host. Users then select the file that they want to send to the printer, and the file is transferred and printed.

## Troubleshooting PDF Direct Printing from CrownView

If you are having problems printing large PDF files using direct printing or CrownView from a PC or UNIX, increase the PS Wait Timeout.

Printing large PDF files from your web browser with CrownView may fail without any indication of an error. The job will appear to start normally, but then flush without printing. The CrownView screen will indicate that the file has printed.

To correct the problem, increase the amount of time allowed before the PS Wait Timeout expires. The factory default setting for this timeout is 30 seconds. Doubling the value to 60 seconds in the Administration/Communications. Timeouts/PS Wait Timeout menu should correct most problems, or the value can be set to 0 seconds, which effectively makes the timeout period infinite.



# Preventing Media Jams

Make sure that...	Avoid...
Media matches the printer specifications.	Media that is folded, wrinkled, or excessively curled.
Media is flat, especially on the leading edge.	Double feeding ( <i>remove the media and fan the sheets—they may be sticking together</i> ).
The printer is on a flat, hard, stable, level surface.	Allowing buildup of static electricity from fanning large quantities of transparencies, or buildup of transparencies in the output tray.
You have the correct media type selected if you're printing on envelopes, labels, thick stock, or transparencies.	Loading more than one type/size/weight of media in a tray at the same time.
You store media in a dry location away from moisture and humidity.	Overfilling the media input trays.
You always adjust the media width regulation guides in the media tray <i>after</i> inserting the media.	Allowing the output tray to fill past the limit of 500 sheets of 20 lb bond (75 g/m <sup>2</sup> ) plain paper.
You load the media printing-side up.*	Allowing the 4-bin mailbox to fill past the limit of 50 sheets of 20 lb bond (75 g/m <sup>2</sup> ) plain paper.
<p>* Many manufacturers place an arrow on the end of the wrapper to indicate the printing side—if you can't determine which side of the media to print on, remove the media from the tray, rotate the stack a half-turn, turn the stack over, and then place it back in the tray.</p>	



## Automatic Jam Recovery

The printer provides automatic jam recovery (when enabled through the Administration/Engine/Page Recovery menu). After you remove any jammed media, printing automatically resumes from the page the printer stopped at when the jam occurred.




*For automatic jam recovery to work, it is necessary to leave the printer turned on when you remove the jammed media. After the jam is cleared, open and close the top cover before printing. Printing will not resume until you do this.*

## Understanding the Media Path


Understanding the printer's media path will help you locate media jams. Media is picked from the tray, passed under the toner cartridge and transfer unit, passed through the fuser, and delivered to the output tray.

### Printer

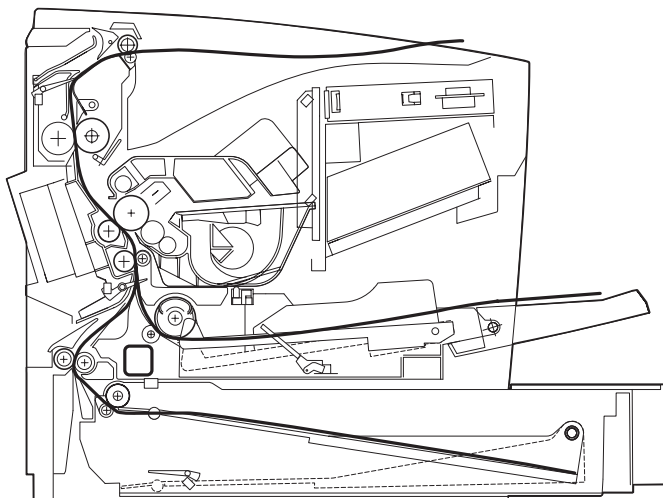



## Printer, Optional Tray(s), Duplexer, and 4-bin Mailbox

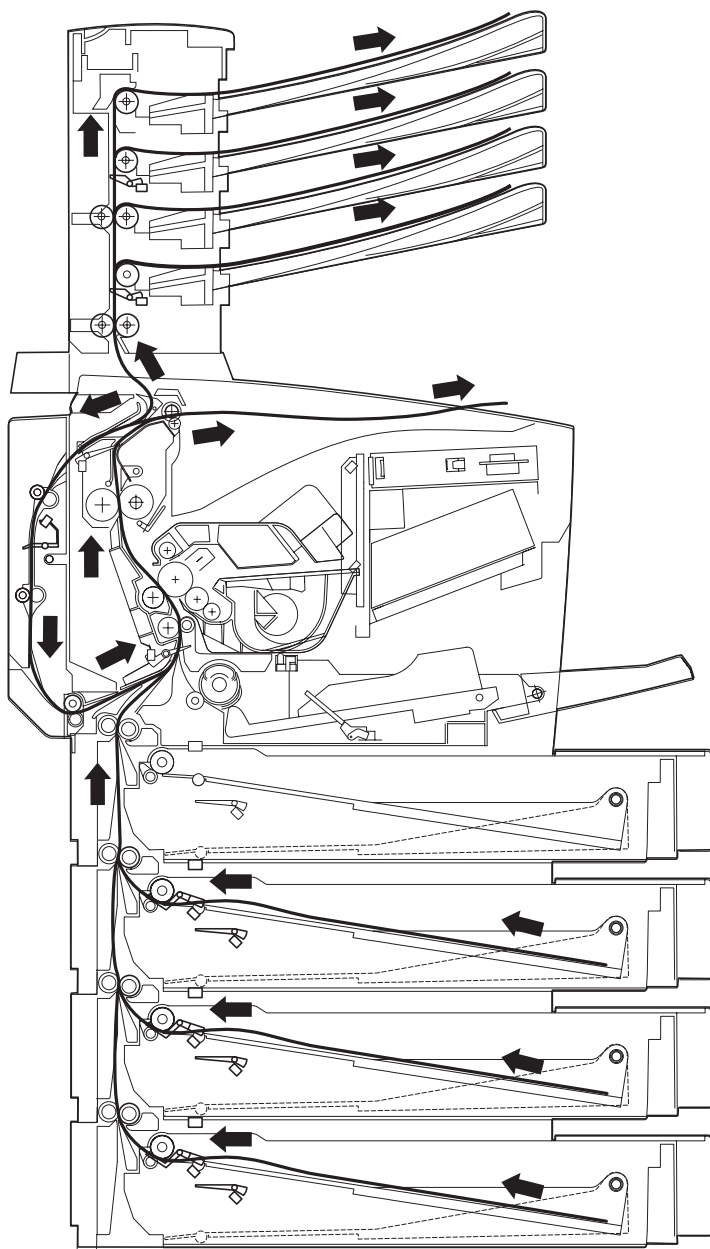



# Understanding Media Jam Status Messages

When a jam occurs, the message window on the control panel displays one of these messages:

## ■ Media input jams

MEDIA JAM UPPER TRAY, MEDIA JAM OPTIONAL1 (OR 2 OR 3)  
TRAY, MEDIA JAM MPT

## ■ Internal media jams

MEDIA JAM FUSER, MEDIA JAM DRUM, MEDIA JAM DUPLEX,  
MEDIA JAM DUPLEX FEEDER, MEDIA JAM TRANSPORT

## ■ Output media jams

MEDIA JAM MAIL BIN

Frequent jams in any area indicate that it should be checked, repaired, or cleaned. Frequent jams may occur if you're using the wrong weight of media.

## Clearing Media Input Jams

Messages:

MEDIA JAM UPPER TRAY, MEDIA JAM OPTIONAL1 (OR 2 OR 3)  
TRAY, MEDIA JAM MPT

- Always remove jammed media gently, without tearing it. Any pieces of media left in the printer, whether large or small, can obstruct the media path and cause further jams.
- Do not reload media that has jammed.

### Attention

---

**The image is not fixed on the media before the fusing process. If you touch the printed surface, the toner may stick to your hands, so be careful not to touch the print face when removing the jammed media. Make sure not to spill any toner inside the printer.**

---

If you accidentally get toner on your clothes, lightly dust them off as much as possible. If some toner remains on your clothes, use cool, not hot, water to rinse the toner off, provided your clothing is washable. If toner gets on your skin, wash it off with water or a neutral detergent.

### **WARNING!**


**If you get toner in your eyes, wash it out immediately with cool water and consult a doctor. Material Safety Data Sheets (MSDS) can be found at [printer.konicaminolta.com](http://printer.konicaminolta.com).**

---




## How do I remove a media jam in the upper or optional media tray(s)?

- 1 Pull out the media tray until it stops.

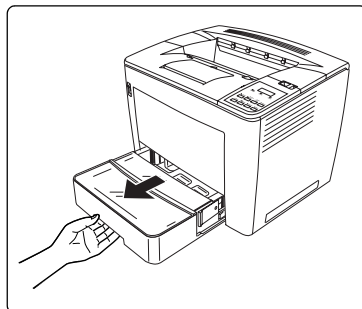


- 2 While pressing in the release buttons (one on each side), remove the tray.

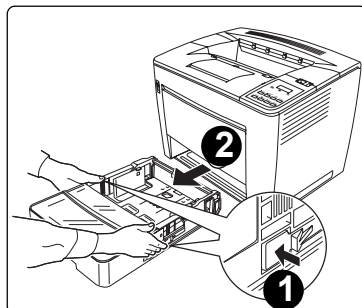

- 3 Pull out the misfed media.




*Make sure no media remains under the roller in the tray.*

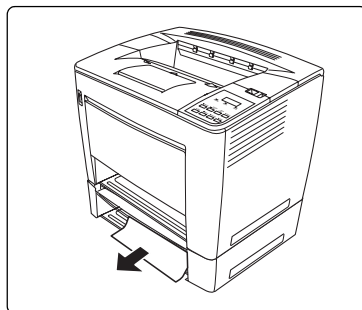



- 4 If the misfed media cannot easily be pulled out, lift the green lever ① on the inner-right side to release the media feed roller, and then pull out the media ②. After removing the misfed media, be sure to return the green lever to its original position ③.


*Do not use force to remove jammed media.*

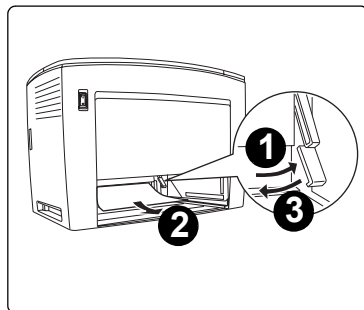

- 5 If you have optional media tray(s), repeat steps 1–4 for each optional media tray installed.




*At times, the media may be stopped inside the optional media tray(s) (in back, along the media path). Check inside the trays from the **front** of the printer, and remove any misfed media.*

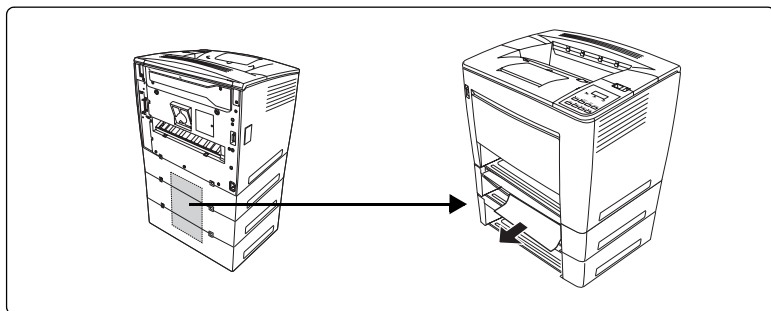

- 6 Install the media tray(s), inserting it (them) as far as possible into the printer.




*Check that the media remaining in the media tray(s) is loaded correctly before installing the tray(s). Make sure no media remains misfed under the roller in the tray.*

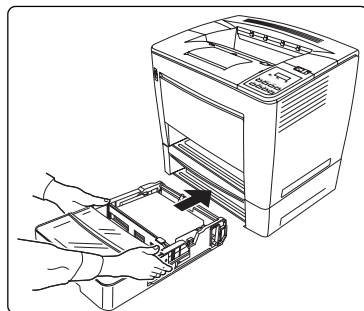




- 7 If necessary, open and close the top cover to cancel the error message.

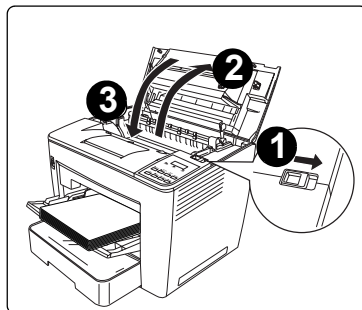


## How do I remove a media jam in the multipurpose media tray (MPT)?

- 1 Remove all media from the multipurpose tray.

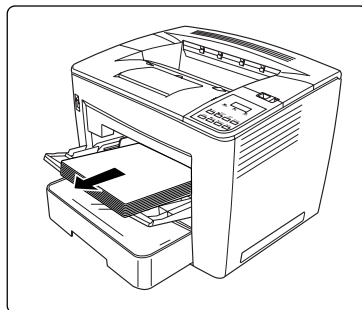


- 2 Pull out the misfed media.

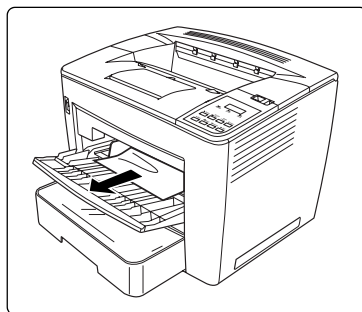




- 3 Correctly load the media into the multipurpose tray.

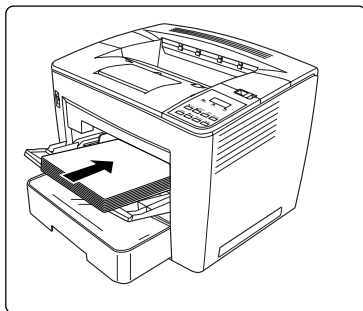

- 4 If necessary, open and close the top cover to cancel the error message.

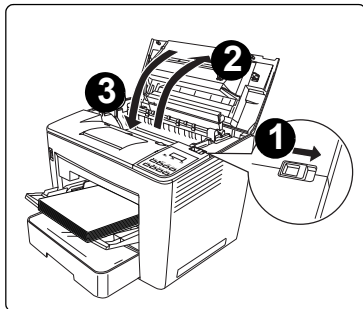


## Clearing Internal Jams

### How do I remove a media jam inside the printer?

Internal media jams messages:

MEDIA JAM FUSER, MEDIA JAM DRUM, MEDIA JAM DUPLEX, MEDIA JAM DUPLEX FEEDER, MEDIA JAM TRANSPORT

- 1 Open the top cover.

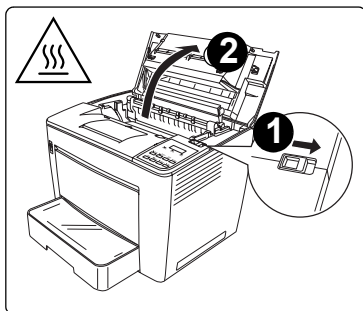





## **⚠ Attention**

Never touch the copper or brass electrodes ① or electrical parts that are located inside the top cover and underneath the toner cartridge, as a printer malfunction can result.

Be careful not to touch ② around the image transfer roller (*touching certain parts in this area may result in reduced print quality*) or ③ around the fusing unit (*since the inside reaches temperatures of about 392 °F (200 °C), touching any part in this area may result in burns*).

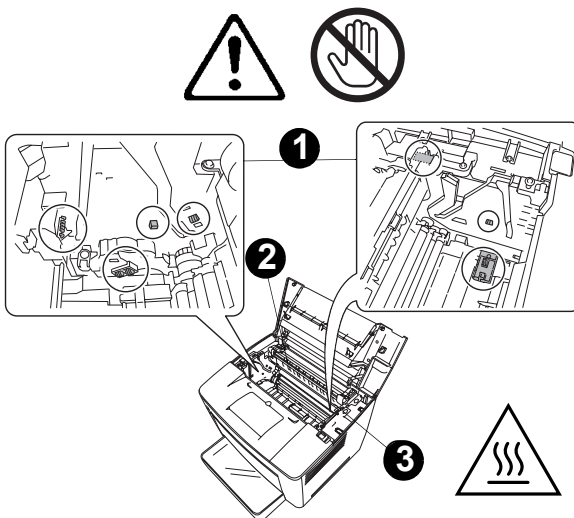

- 2 Remove the toner cartridge and store it in a light-free protective bag.

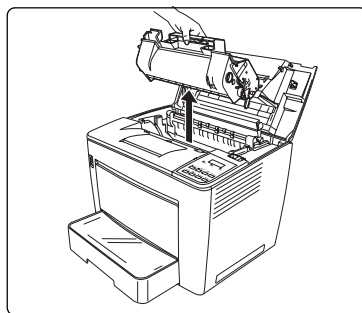





- 3 If the media is stopped by the fuser, lift the green levers on each side, and then slowly pull out the media from below the roller.

**⚠ Attention**


**Do not pull out the media from above the roller; otherwise, decreased print quality may result.**

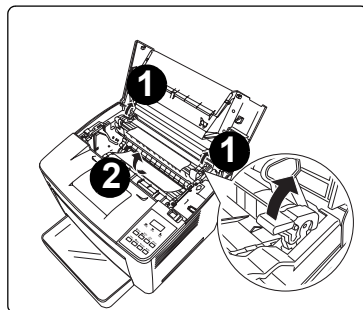


- 4 After removing the misfed media, lower the two levers.

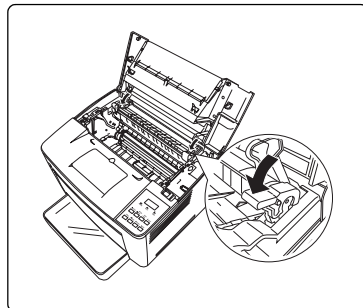

- 5 Open the media feed roller cover.

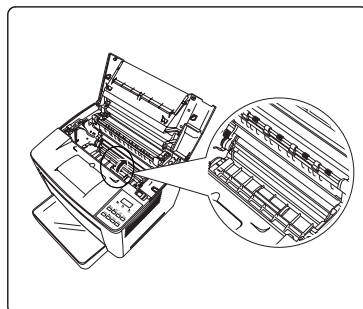


- 6 Pull out the jammed media.

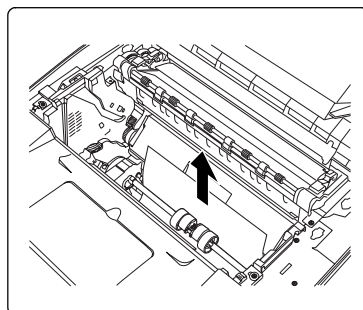




- 7 Close the media feed roller cover.

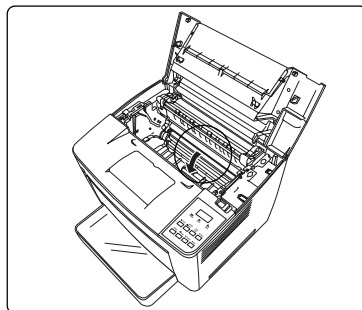


- 8 Align the tabs on the toner cartridge (one on each side) with the notches in the printer, and then insert the cartridge as far as possible.

**⚠ Attention**

**Do not touch the rollers or gears within the printer; otherwise, the printer may be damaged.**

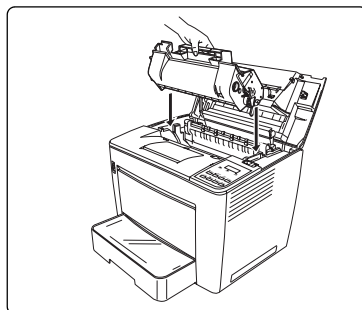


- 9 Close the top cover.

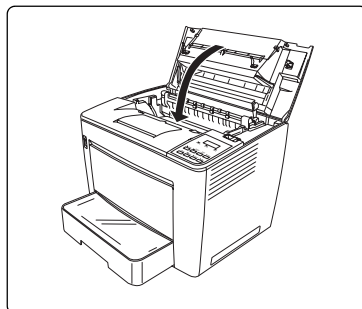




## How do I remove a media jam inside the duplex unit?

- 1 Open the upper cover ① of the duplex unit, remove the jammed media ②, and then close the upper cover ③.

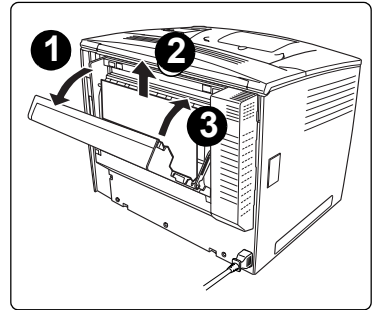


- 2 Open the lower cover ① of the duplex unit, remove the jammed media ②, and then close the lower cover ③.

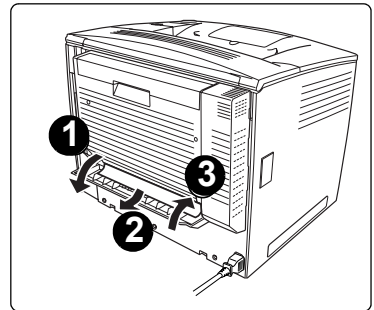


- 3 If the media jam error is not cancelled after removing the misfed media according to the previous procedure, remove the duplexer from the printer. (Refer to the duplexer installation instructions in chapter 6, "Installing Accessories.")

- 4 Remove any media in the feed slot at the bottom of the back of the printer.

- 5 Reinstall the duplexer.

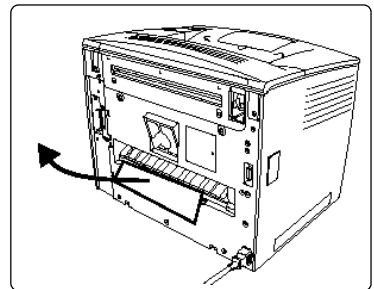


- 6 If necessary, open and close the top cover to cancel the error message.

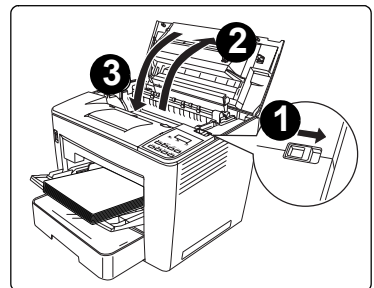




## How do I remove a media jam inside the printer with the 4-bin mailbox installed?


- 1 Slide the mailbox as far as possible to the back of the printer.

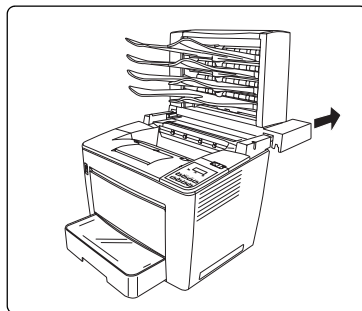

- 2 Open the top cover.

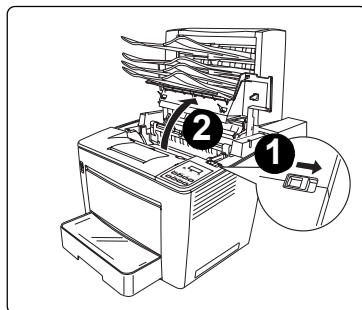


- 3 Fully lower the stopper to support the top cover.
- 4 Follow the procedure for removing a media jam inside the printer on page 73.

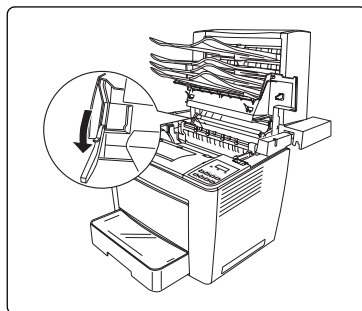




- 5 Return the stopper to its original position ①, and then close the top cover ②.

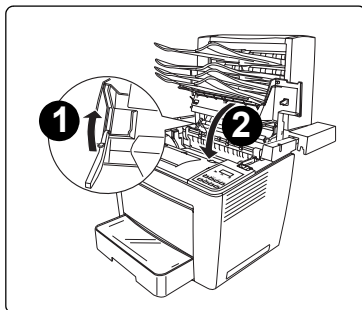

- 6 Slide the mailbox forward to its original position.

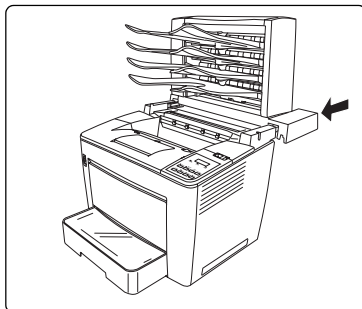




# Clearing Output Jams

Output media jams message:


MEDIA JAM MAIL BIN

## How do I remove a media jam inside the 4-bin mailbox?

- 1 Open the back cover ①, and then remove the jammed media ②.

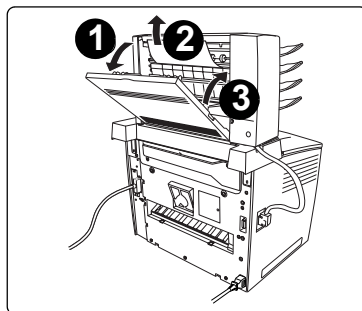

- 2 Close the back cover of the mailbox.
- 3 If necessary, open and close the top cover to cancel the error message.

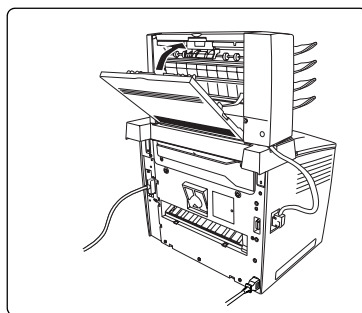

## How do I remove a media jam in the output bin?

- 1 Remove the media from the output bin.
- 2 If necessary, gently pull out any media that is still jammed.



# Solving Problems

Symptom	Cause	Solution
Nothing is printed.	There is a Keypad Locked, a media jam, or other message on the control panel.	Handle according to the message displayed. For example, if the keypad is locked, check to see if the printer's in Network Mode and someone else has opened a telnet session to it. Change the printer to Single User Mode (Operator Control/Media Mode menu).
	The driver is not set correctly.	Select the proper driver media setting.
	The power source does not match the printer specifications.	Use a power source with the proper specifications.
	Several sheets are being feed at the same time.	Remove the media from the tray and check for static electricity. Fan plain paper or other media (but not transparencies), and replace it in the tray.
	Media is not set properly in the media tray(s).	Remove the media, tap it to straighten it out, return it to the media tray, and realign the media guides.
	The printer is set up on a stand smaller than the bottom area of the printer.	Relocate the printer on a flat, hard, stable, level surface that is large enough to hold the printer.
	Media sizes or types are not correct.	Make sure that you are using the correct media. See "Using Media" on page 23.
	The media tray or tray cover was not correctly installed.	Check that your media tray(s) and tray covers are properly installed and inserted.



Symptom	Cause	Solution
Not all pages print.	The printer has the wrong kind of cable, or the printer is not configured for the correct cable and port.	Check your cable.
	The Cancel key was pressed.	Make sure no one pressed the Cancel key while your job was printing.
	The media tray is empty.	Check the message window to see if the tray you are using is out of media.
Several sheets go through the printer together.	Too much static electricity is present.	Do not fan large quantities of transparencies
Media is jamming	The media is moist from humidity.	Adjust the humidity for media storage. Remove the moist media and replace it with new, dry media.
	The media was not properly aligned before it was loaded.	Remove the media, tap it to straighten it out, return it to the media tray, and realign the media guides.
	Transparencies being fed from the upper or optional trays is not feeding correctly.	Envelopes, labels, postcards, special stock, thick stock, and transparencies can be printed only from the multi-purpose tray.
	Multiple sheets of transparencies are collecting static electricity in the tray.	Remove the transparencies and load it in the tray one sheet at a time. Do not fan large quantities of transparencies before loading them.
	The recommended transparencies or labels are facing the wrong way in the tray.	Load the transparencies or labels according to the manufacturer's instructions.
	Coated transparencies have been used.	Use uncoated transparencies that are approved for your printer.



Symptom	Cause	Solution
Media is jamming.	The wrong media tray is used.	Envelopes, labels, postcards, thick stock, and transparencies can be printed only from the multipurpose tray.
	The media is not correctly positioned in the tray.	Remove the jammed media and reposition the media properly in the tray.
	The number of sheets in the tray exceeds the maximum allowed.	Remove the excess media and reload the correct number of sheets in the tray.
	The width regulation guides are not correctly adjusted to the media size.	Adjust the regulation guides in the tray to match the size of the media.
	Warped or wrinkled media is loaded in the tray.	Remove the warped or wrinkled media and replace it with new media.
	The media is moist from humidity.	Remove the moist media and replace it with new, dry media.
	Unsupported media (wrong size, thickness, coating, type, etc.) is being used.	Use media that is approved for your printer.
Media jam message stays on.	The printer needs to be reset.	Open and close the top cover.
	Some media remains jammed in the printer.	Recheck the media path and make sure you have removed all of the media jams.



Symptom	Cause	Solution
Duplex jams occur.	The wrong media is being used.	Use only supported media. Refer to the “Media Types” on page 35.
		Plain paper and stock up to 24 lb bond (90 g/m <sup>2</sup> ) can be autoduplexed. For heavier weights, manual duplexing is required. To manually duplex, remove the media, flip it over, and reload it.
		Do not mix media types in your media tray.
	Media may still be jammed.	Recheck the media path and make sure you have removed all of the media jams.
	If you are manually duplexing, media jams may occur if the printed sheet(s) reinserted are not entirely flat	Remove the jammed media from the tray, flatten it out, and reload it.
4-bin mailbox jams occur.	Media may still be jammed.	Recheck the media path and make sure you have removed all of the media jams, even in the mailbox.



## Other Problems

Symptom	Cause	Solution
Printer power is not on.	The power cord is not correctly plugged into the outlet.	Set the power switch off (O position), then remove the power cord from the outlet and plug it back in, then set it back to the on (I) position.
	The power switch has not been pressed.	Set the power switch to the on (I) position.
	The power switch is not correctly turned on (I position).	Set the power switch to the off (O) position, then set it back to the on (I) position.
	Something is wrong with the outlet you are using for the printer.	If the outlet is connected to a switch, turn on the switch.  Plug another electrical appliance into the outlet and see whether it operates properly.
	The printer is connected to an outlet with a voltage or frequency that does not match the printer specifications.	Use a power source with the specifications listed in appendix A, "Technical Specifications."
"Printer is not responding" is displayed in the Print Monitor.	The printer is in energy-saving mode.	It takes a little time for printing to start if the printer is in energy-saving mode. You can change the number of minutes before the printer switches to power-saving mode in the Administration/Engine/Energy Saver menu. If you do not want to use this mode, disable it in the Administration/Engine/Energy Saver menu.
Printer resets or turns off frequently.	The power cord is not properly connected to the AC outlet.	Turn off the unit, confirm that the power cord is properly connected to the AC outlet, and turn the unit back on.
	A system error occurred.	Contact Technical Support with the error information. See the <i>Service &amp; Support Guide</i> for support telephone numbers.



Symptom	Cause	Solution
Printing takes too much time.	The printer is set to a slower printing mode (Thick Stock or Transparency media types).	It takes more time to print with special media types, such as Transparencies. When using regular paper, make sure that the media type is set to Plain Paper in the driver.
	The printer is set to energy-saving mode.	It takes a little time for printing to start in energy-saving mode. If you do not want to use this mode, disable it.
	The printer memory is insufficient.	Add more memory.
	The job is very complex.	Wait. No action needed.
	The printer is set for Single User Mode.	If getting your jobs printed in a timely manner is most important, use Network Mode (Operator Control/Media Mode menu).
You are experiencing problems duplexing.	Media or settings are not correct.	Make sure that you are using the correct media. Do not duplex envelopes, glossy stock heavier than 24 lb bond (90 g/m <sup>2</sup> ), labels, postcards, thick stock heavier than 24 lb bond (90 g/m <sup>2</sup> ), or transparencies.
		Make sure that your document has more than one page.
		In the printer driver (Properties/Layout/Duplex Options), choose Short Edge (flipped as on a clipboard) or Long Edge (flipped as in a loose-leaf notebook). Make sure that you are using correct media.
The printing is on the wrong side of the media.	The printer is set to autoduplexing and you are trying to duplex manually.	If you are manually duplexing, in the printer driver (Properties/Layout) choose Simplex.
	The media is not installed correctly.	Load the media printing-side up.



Symptom	Cause	Solution
Characters print incorrectly.	The fonts are set incorrectly on your printer driver.	Check your driver (Properties/Fonts tab) to make sure you are using the correct fonts (such as TrueType fonts).
You hear unusual noises.	The printer is not level.	Put the printer on a flat, hard, stable, level surface.
	The media tray is not installed correctly.	Remove the media tray that you are printing from and reinsert it completely into the printer.
	There is a foreign object stuck inside the printer.	Turn off the printer and remove the object. If you cannot remove it, contact Service. See the <i>Service &amp; Support Guide</i> for the office closest to you.
The printer goes into power-saving mode.	The printer automatically switches to power-saving mode after 30 minutes of inactivity (default).	You can change the number of minutes before the printer switches to power-saving mode in the Administration/Engine/Energy Saver menu.
You are unable to access Accounting in Crown-View.	The printer is not turned on and IDLE.	Make sure the printer is on and IDLE appears in the control panel.  For more information about CrownView, refer to the <i>Crown Books</i> in PDF on the <i>Documentation</i> CD-ROM.
	You do not have a hard disk installed.	Install a hard disk.
The fonts list was not updated after downloading a font to disk.	The printer's font list has not been refreshed.	Print an advanced status page. The downloaded fonts should now appear.


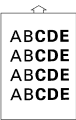

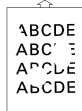
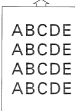
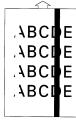
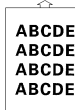
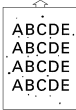
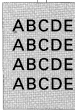
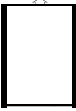


Symptom	Cause	Solution
The printer is not receiving data from the computer. <i>(The Data indicator doesn't blink after a file is sent.)</i>	The printer is not on line.	Put the printer on line and verify that the message window displays <code>IDLE</code> .
	The emulation has been changed from ESP to an emulation that doesn't match the file you are sending.	Print a status page. For information about the ESP mode, refer to the <i>Crown Books</i> in PDF on the <i>Documentation</i> CD-ROM.
	The port setting is incorrect.	For Ethernet, parallel, or USB connections, set the port to Enabled.
	When the parallel cable is set to Interactive (the default), and the parallel cable is unplugged then plugged back in, communication was lost.	Set the parallel cable to Non-Interactive mode in the Administration/Communications/Parallel/Mode menu.
Too many status pages print.	Your printer is set to print the multiple-page Advanced Status Page instead of the one-page Standard Status Page.	Select the type of status page through the Administration/Special Pages/Status Page Type menu on the control panel.
In the Security menu with Enable Password set, a telnet session asks for a password when entering the admin mode.	In the "Security/Admin Menu" menu, the password you set will affect both the admin mode and the Admin Menu.	Use the password you set for the Security/Admin Menu for the telnet admin mode.







# Printing Quality




## Summary

If printed page looks like this...	Check this...			If printed page looks like this...	Check this...		
	Toner Cartridge	Image Transfer Roller	Media Feed Roller or Media		Toner Cartridge	Image Transfer Roller	Media Feed Roller or Media
	page 90				page 91	page 91	
	page 90						page 91
	page 90				page 92		
	page 90						page 92
	page 91					page 92	

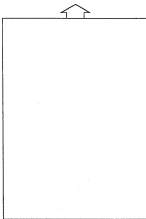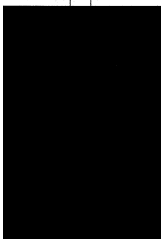
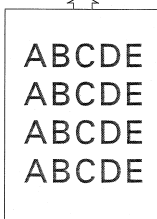
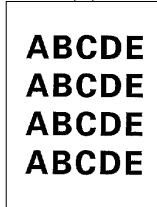


Symptom	Cause	Solution
Blank page 	The toner cartridge may be defective.	Remove the toner cartridge and check it for damage. Replace the toner cartridge, if necessary.
Black page 	The toner cartridge may be defective.	Remove the toner cartridge and check it for damage. Replace the toner cartridge, if necessary.
	Your printer may require servicing.	Contact your local vendor, refer to the <i>Service &amp; Support Guide</i> or, for the most up-to-date worldwide contact information, go to <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a> .
Print too light 	The toner cartridge may be running out of toner.	Remove the toner cartridge and shake it left and right a few times to distribute remaining toner.  If the problem persists, replace the toner cartridge.
	The toner cartridge may be defective.	Remove the toner cartridge and check it for damage. Replace the toner cartridge, if necessary.
Print too dark 	The toner cartridge may be defective.	Remove the toner cartridge and check it for damage. Replace the toner cartridge, if necessary.

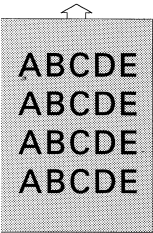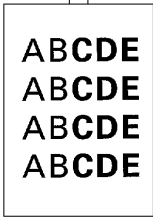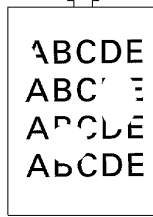

Symptom	Cause	Solution
Blurred background 	The toner cartridge may be defective.	Remove the toner cartridge and check it for damage. Replace the toner cartridge, if necessary.
Uneven print density 	The toner may be unevenly distributed inside the toner cartridge.	Remove the toner cartridge and shake it left and right a few times to distribute remaining toner.
	The toner cartridge may be defective.	Remove the toner cartridge and check it for damage. Replace the toner cartridge, if necessary.
	The image transfer roller may be defective.	Remove the image transfer roller and check it for damage. Replace the image transfer roller, if necessary.
Irregularities 	The media may have absorbed some moisture due to high humidity or because of direct contact with water.	Since toner will not adhere well to wet media, replace the media you are using with dry media and try printing again.

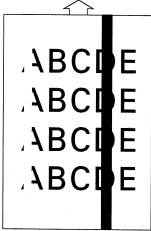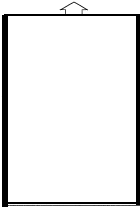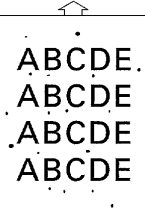

Symptom	Cause	Solution
White or black lines 	The toner cartridge may be defective.	Remove the toner cartridge and check it for damage. Replace the toner cartridge, if necessary.
Dark lines on the edges. 	The transfer roller is dirty.	Replace the transfer roller.
Toner smudges 	The toner may be unevenly distributed inside the toner cartridge.	Remove the toner cartridge and shake it left and right a few times to distribute remaining toner.
	The toner cartridge may be defective.	Remove the toner cartridge and check it for damage. Replace the toner cartridge, if necessary.
	Smudges on the back of the media indicate a dirty media feed roller.	Remove the media feed roller and check it for debris. Replace the media feed roller with a new one, if necessary. Contact your local vendor, refer to the <i>Service &amp; Support Guide</i> or, for the most up-to-date worldwide contact information, go to <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a> .



# Status, Error, and Service Messages

Status, error, and service messages are displayed in the control panel message window. They provide information about your printer and help you locate many problems. When the condition associated with a displayed message has changed, the message is cleared from the window. Refer to the *Crown Books* in PDF on the *Documentation* CD-ROM for further information.



*Status messages are not displayed while the printer is off line.*

## Status and Error Messages

This message...	means...	do this...
ACC DISABLED	The accounting option selected is now in effect.	No action needed.
ACC ENABLED		
ACC FILE 95% FULL ACC FILE 90% FULL ACC FILE 85% FULL ACC FILE 80% FULL	The Job Accounting File is 80, 85, 90, or 95% full.	<p>This message should be taken care of immediately because it may be masking another problem.</p> <p>Once the accounting message is cleared, can you see IDLE? If IDLE is not there, you will see another error message displayed. Attend to the message that appears.</p> <p>If you want accounting enabled, transfer them to your host computer using ftp (if available). Then reset the accounting files so that new jobs can be accepted. If you don't want to use accounting, you can disable it.</p>



<b>This message...</b>	<b>means...</b>	<b>do this...</b>
ACC FILES GOT REMOVED	The accounting option is disabled and the accounting files are empty. After a reset, the files are removed. This prevents you from wasting disk space with empty accounting files.	No action needed.
ACC <X> FILE FULL	The job or paper accounting file is full (<X> identifies the file).	This message should be taken care of immediately because it may be masking another problem.  If you want accounting enabled, transfer them to your host computer using ftp (if available). Then reset the accounting files so that new jobs can be accepted. If you don't want to use accounting, you can disable it.
ADJUST <X> BIN	The specified inputbin <X> is not inserted correctly and needs attention.	Readjust the media and media guides, and reinstall the inputbin (media tray), if necessary.
CANCEL <N>	The Cancel key has been pressed, and one or more of the print jobs <N> in the print queue are being canceled.	Press Select for all jobs with a printing, interpreting, spooled, or terminating status to be completely removed from the system.
CANCELLING JOB	The Cancel key has been pressed, and the print job in the print queue is being canceled.	Press Select and the job in the print queue will be canceled.



<b>This message...</b>	<b>means...</b>	<b>do this...</b>
CREATED FILE	The accounting file has been created.	No action needed.
CREATING XXXXXXXXXXXXX FILE, WAIT...	The specified accounting file is created when accounting is enabled and the files are not in existence or these files are created following a Reset Accounting (XXXXXXXXXXXXX represents the Job Accounting or Paper Accounting file).	Wait. No other action needed.
DUPLEX <X>	The specified message <X>, such as DUPLEX MEDIA ERROR, in the duplexer needs attention.	Locate and resolve the problem.
END JOB	The Cancel key has been pressed and the End Job option selected.	Press Select to provide an end-of-job indicator for a print job that does not have one.



This message...	means...	do this...
ENERGY SAVER	Energy Saver has been activated. The printer is in energy saver mode to reduce power consumption during periods of inactivity. When a print job is received, the printer returns to normal power within 90 seconds. While in “deep sleep,” the printer’s message window will not display operator status such as door- and tray-open messages. The printer remains in “deep sleep,” until a print job is received, or until the printer is manually switched from offline to online.	No action needed.
<X> COVER OPEN	The specified cover <X> is not closed properly.	Close the cover.
<X> BIN FULL	The specified outputbin <x> is full and needs to be emptied.	Remove the media from the outputbin.
<X> BIN JAM	The specified outputbin <x> has jammed media.	Locate and remove the jam. Also, check the media pickup rollers for wear. If necessary, replace all of them.
IDLE	The printer is on line, but no jobs are in process.	No action needed.



<b>This message...</b>	<b>means...</b>	<b>do this...</b>
INITIALIZING	The printer is initializing.	Wait. No other action needed.
	The printer is warming up and getting ready to go on line.	Wait. No other action needed.
INVALID TONER CARTRIDGE	You have attempted to install a non-approved toner cartridge, causing the printer to operate incorrectly.	Use only the approved KONICA MINOLTA consumables. To order consumables, go to <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a>
LOW RELEASE LEVEL	You are attempting to download previous versions of the system software.	Wait. The system software update will abort without operator intervention if the system software on the CD-ROM is the same as, or older than, the one currently installed on the printer controller.
MAILBIN <X>	The specified message <X> in the 4-bin mailbox needs attention.	Locate and resolve the problem.
MEDIA JAM <X>	A media jam in the specified location <X> may mean that media has jammed, that a sheet of media was not being picked up, or that the media pickup rollers need cleaning or replacement.	Locate and remove the jam. Also, check the media pickup rollers for wear. If necessary, replace all of them.
<X> OUTPUT BIN FULL	The media has exceeded the limit in the <X> output bin.	Remove the media from the specified output bin.
PAPER SIZE MISMATCH	The media detected in the tray doesn't match the media size setting.	Change the media in the tray or change the media size setting in the driver.



This message...	means...	do this...
PRINTING STATUS	A status page is printing.	Wait. The message clears after the status page prints.
PUT <X> IN <Y> BIN	The specified input tray <Y> needs to be refilled with the specified media <X> size or type.	Refill the specified input tray with the specified media.
RESETTING ACCOUNTING	The reset accounting operation is in process.	Wait. No other action needed.
SYS UPDATE ERROR <X>	The indicated error <X> has been reported.	Verify the update file and send it again, or go to <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a> for the latest code update.
TONER CART. MISINSTALLED	The toner cartridge is not seated properly in the printer.	Reinstall the approved KONICA MINOLTA toner cartridge.
TONER EMPTY	The toner cartridge is empty.	Replace the toner cartridge and, if no duplexer is installed, the exhaust filter.
TONER LOW	The toner cartridge is nearing the end of its life. Approximately 750 letter/A4 pages (at 5% coverage) after this message is displayed, the printer stops.	No action needed. If print quality is reduced, replace the toner cartridge and, if no duplexer is installed, the exhaust filter.
<X> MISINSTALLED	The specified item <X>, such as the toner cartridge, is misinstalled.	Reinstall the item.
WARMING UP	The printer is getting ready to print.	Wait. No other action needed.



## Service Messages

A service message sometimes occurs as a result of an unusual combination of events, not because of an actual problem. When the printer stops and a service message displays in the message window, turn the printer off and then back on. This often clears the service message indicator, and printer operation resumes. Always try this before making a service call.

<b>This service message...</b>	<b>means...</b>	<b>do this...</b>
SERVICE CALL <X>	An error has been detected with the item indicated <X> in the service message. A service call is needed.	Reboot the printer. If the condition persists, contact your local vendor and place a service call. If you cannot get service from your vendor, refer to the <i>Service &amp; Support Guide</i> or <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a> for the most current contact information.



## HP-GL Error Codes and PCL Error Codes

The following tables list error codes that could appear on the printer message window when running the HP-GL, PCL or PCLXL emulation.

HP-GL	
Error Code	Description
0	Not enough memory for job.
1	Too many transformations.
2	Math error.
3	Job aborted.
4	Instruction not recognized.
5	Wrong number of parameters.
6	Out of range parameter, or illegal character.
7	Not used.
8	Unknown character set.
9	Position overflow.
10	Buffer overflow.
11	Not used.

PCL	
Error Code	Description
0	Not enough memory for job.
1	State lost.
2	Math error.
3	Job aborted.
4	Out of memory for macros.
5	Disk full. Cannot store fonts.
6–13	Internal error 1–8.

PCLXL	
Error Code	Description
0	Not enough memory for job.
1	Math error.
2–7	Internal error 1–6



## PostScript Errors

If your printer is having trouble printing when using PostScript emulation, you should turn on the Error Handler in the control panel menu. Error Handler is a diagnostic tool that identifies PostScript errors encountered during a print job.

<b>Menu</b>	Administration/Startup Options/Do Error Handler
<b>Choices</b>	Yes—Load the Error Handler on reboot. No—Don't load the Error Handler on reboot.
<b>Default</b>	No
<b>Notes</b>	Refer to the <i>PostScript Language Reference Manual Third Edition</i> (Adobe Systems Incorporated, Reading, PA: Addison-Wesley, 1999, ISBN 0-201-37922-8) for information on PostScript errors.  You must reboot the printer after turning on the error handler for it to take effect.

## Additional Assistance

If you've followed all of the instructions in this guide and still have problems you can't solve, check [printer.konicaminolta.com](http://printer.konicaminolta.com) for a solution. You can also refer to the *Service & Support Guide* or visit our web site at [printer.konicaminolta.com](http://printer.konicaminolta.com) for the most current contact information.







---

## ***Installing Accessories***

---

# 6

---



# Introduction

## Attention

It's very important to protect the printer controller board and any associated daughterboard or module from electrostatic damage while performing any task involving the controller board.


## Attention

Use of accessories not manufactured/supported by KONICA MINOLTA is not supported by your printer and will void your warranty.

This chapter provides information about the following accessories. Contact your local vendor or [printer.konicaminolta.com](http://printer.konicaminolta.com) for purchase information.

<b>4-bin Mailbox</b>	Optional
<b>Dual In-Line Memory Modules (DIMMs) (two available slots)</b>	Additional memory must be 32, 64, 128, or 256 MB PC-100 Compliant SDRAM DIMMs, up to a maximum of 512 MB in the two DIMM slots
<b>Duplexer</b>	With built-in exhaust filter
<b>Fonts and Forms</b>	<ul style="list-style-type: none"><li>■ Fonts</li><li>■ Kanji Font Internal IDE Hard Disk Drive</li><li>■ PlanetPress (forms-creation utility)</li></ul>
<b>Interfaces and Daughterboards</b>	CrownNet for Ethernet 10BaseT/100BaseTX (equipped with RJ45 connector)
<b>Internal IDE Hard Disk Drive</b>	Optional
<b>Optional media feeder(s)</b>	<p>Up to three optional 500-sheet media feeders may be added.</p> <p>Purchasing extra media feeders may be convenient when changing media formats and/or when media qualities vary.</p>
<b>Time-of-Day Clock</b>	Optional



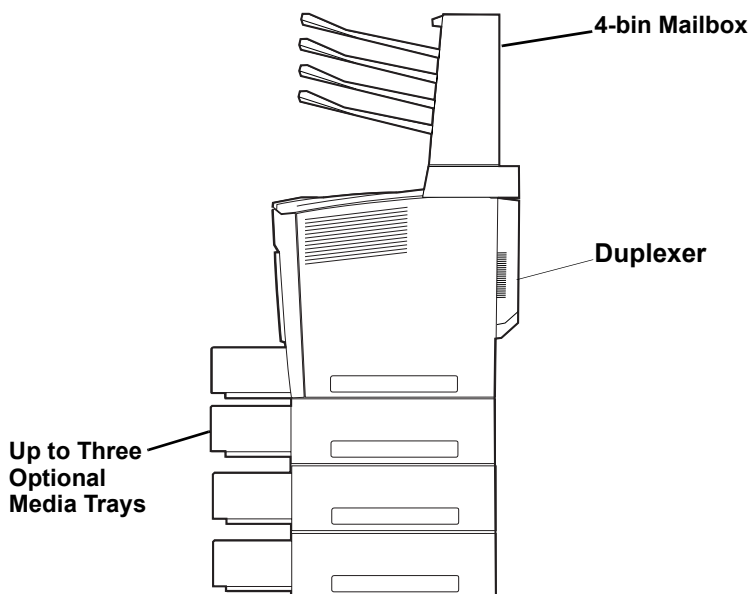

See appendix A, "Technical Specifications" on page 139 for dimensions and clearances.

If KONICA MINOLTA printer failure or damage is found to be directly attributable to the use of non-KONICA MINOLTA accessories, KONICA MINOLTA will not repair the printer free of charge. In this case, standard time and material charges will be applied to service your printer for that particular failure or damage.





## Attention


It's very important to protect the printer controller board and any associated daughterboard or module from electrostatic damage while performing any task involving the controller board.

If an antistatic wrist strap is provided in your printer option kit, attach one end of it to your wrist and the other end to any convenient electrical ground (for example, the bare metal chassis of equipment, as on the back of a computer, that is plugged in but turned off). Never attach the wrist strap to any piece of equipment with an electrical current present. Turn off all power switches first. Plastic, rubber, wood, painted metal surfaces, and telephones are not acceptable grounding points. The printer isn't an acceptable grounding point either because it must be unplugged before you perform this task.

If you don't have an antistatic wrist strap, discharge your body's static electric charge by touching a grounded surface before you handle any printer boards or components and before removing the controller board. Also avoid walking around after grounding yourself.

## 4-bin Mailbox

Use the 4-bin mailbox to output collated print jobs, or choose a specific bin to output to individually. Mailbin 1, Mailbin 2, Mailbin 3, and Mailbin 4 can be renamed for your convenience (Administration/Engine/Output X Bin Name menu option), but you may not select the named bin and also collate a print job at the same time.

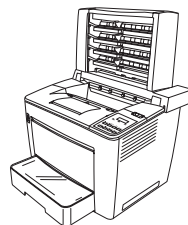


### What's in the 4-bin mailbox kit?

- Mailbox
- Transport unit
- 4 bins (renamable)
- Allan wrench



*A common screwdriver is needed for this procedure.*

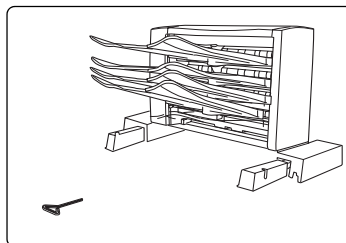




## Installing the 4-bin Mailbox



*If both the duplexer and the 4-bin mailbox are to be installed, install the 4-bin mailbox first.*

*If the duplexer is already installed, remove it before installing the 4-bin mailbox.*


- 1 Turn off the printer and unplug the power supply cord and interface cable.
- 2 Open the top cover.

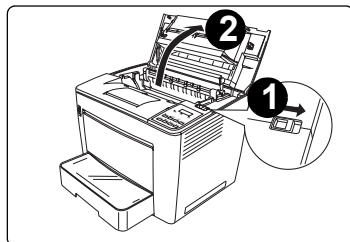

### **Attention**

Never touch the copper or brass electrodes ① or electrical parts that are located inside the top cover and underneath the toner cartridge, as a printer malfunction can result.

Be careful not to touch ② around the image transfer roller (touching certain parts in this area may result in reduced print quality) or ③ around the fusing unit (since the inside reaches temperatures of about 392 °F (200 °C), touching any part in this area may result in burns).

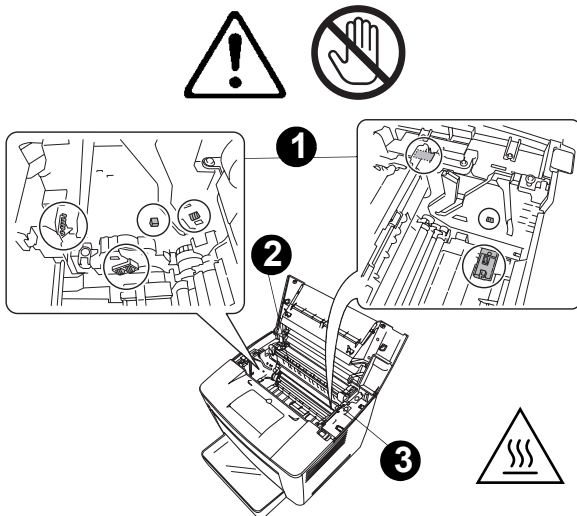



- 3 With the top cover slightly closed, pull out the tabs ① (two on each side).



*Pulling the tabs with force may break them.*

- 4 At the back of the top cover, slightly pull up the back section, and then remove it ②, sliding it toward the back of the printer.

- 5 Remove the brackets (one on each side) at the rear of the top cover.




*Keep the removed back section of the top cover and the brackets in a safe place for future use.*

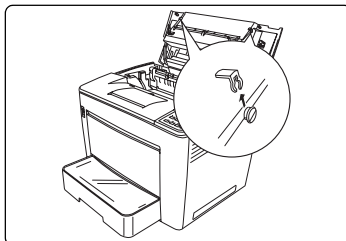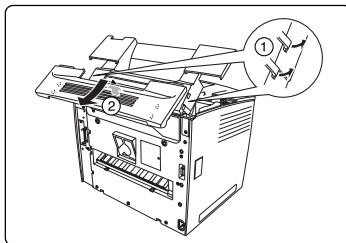

- 6 Lower the stopper at the back left of the top cover.


*The stopper prevents the top cover from closing when the 4-bin mailbox is installed.*

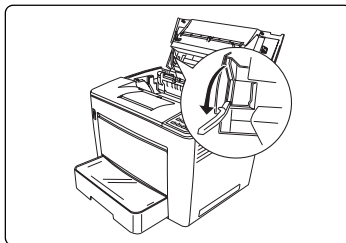

### **⚠ Attention**


**Before using the printer after removing the 4-bin mailbox, make sure that the stopper lowered in step 6 is returned to its original position.**

- 7 Close the top cover.

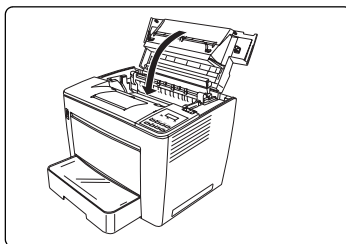




- 8 Attach the transport unit ① to the printer.
- 9 Insert the metal tabs on the left and right sides ② of the transport unit into the notches in the printer, and then slide the transport unit toward the front of the printer to install it.

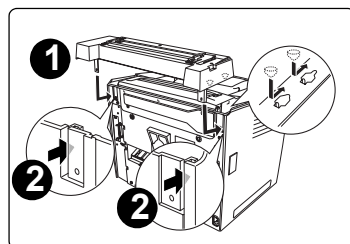

- 10 Using the wrench and screws supplied with the 4-bin mailbox, secure the left and right brackets on the transport unit to the printer.




*After using the wrench, keep it in a safe place for future use.*

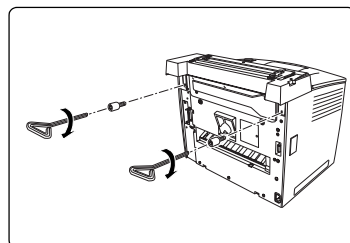

- 11 Attach the 4-bin mailbox to the transport unit.


- 12 Insert the extensions (one on each side) at the bottom of the 4-bin mailbox into the holes in the transport unit, pushing down until they lock into place.

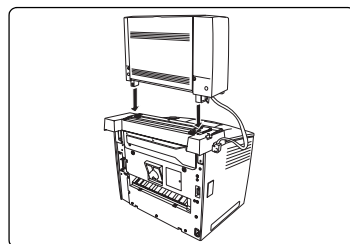

- 13 Using a screwdriver, remove the connector cover on the left side of the printer.




*Keep the removed connector cover in a safe place for future use.*

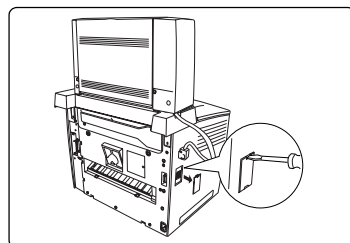




- 14** Insert the 4-bin mailbox cable into the connector on the left side of the printer until it locks into place.

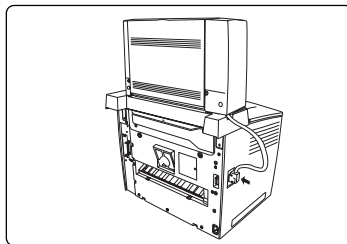

- 15** Install the four mailbins (trays) onto the 4-bin mailbox by inserting the tabs on the left and right sides of the tray into the slots in the 4-bin mailbox.

*Install the trays starting from the bottom.*

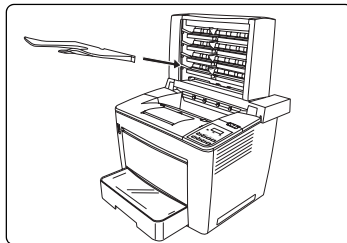

- 16** Reconnect all interface cables.


- 17** Reconnect the power cord and turn on the printer.



*In compliance with UL guidelines, "The appliance inlet is considered to be the main disconnect device."*



*Before moving the printer, even just a small distance, be sure to disconnect and remove the 4-bin mailbox from the printer.*

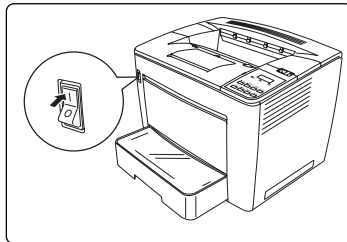

## Dual In-Line Memory Modules (DIMMs)

Dual in-line memory modules (or DIMMs) are compact circuit boards with surface-mount memory chips.

Your PagePro 9100 comes with 64 MB SDRAM printer memory. However, you can upgrade the PagePro 9100 to a maximum of 512 MB of RAM through the installation of additional DIMMs. Two DIMM slots are available. Additional memory must be 32, 64, 128, or 256 MB, PC-100 Compliant SDRAM DIMMs.

Additional memory allows you to download more fonts and increase the printer's buffer (area where data sent from the computer is stored while



waiting to be printed). The amount of RAM installed in your printer governs which resolutions can be used with each media size.

You may also need additional memory (DIMMs) for the following:

- To print at maximum performance
- To print complex graphics or complex PostScript documents
- For increased collation performance
- For increased spooling performance

## How much memory do you need?

Check the startup page to make sure the printer has enough RAM installed.

To allocate the default amount of memory to the memory clients, use the Memory/Quick Config menu to choose the correct resolution and media size for your printing (refer to the *Crown Books* in PDF on the *Documentation* CD-ROM for further information).

Print Type	Simplex			Duplex		
	RAM		Speed	RAM		Speed
	600 dpi	1200 dpi		600 dpi	1200 dpi	
Media Size						
A3	64 MB	96 MB	19 ppm	64 MB	96 MB	13 ipm
A4		64 MB	35 ppm			26 ipm
Ledger		96 MB	19 ppm			13 ipm
Legal		64 MB	17 ppm			13 ipm
Letter		64 MB	35 ppm			26 ipm
Notes	dpi = dots per inch; ppm = pages per minute ipm = images per minute					




## Attention

It's very important to protect the printer controller board and any associated circuit boards from electrostatic damage. Before performing this procedure, review the antistatic caution on page 106. In addition, always handle circuit boards by the edges only.

- 1 If you are not to the point when you are able to print an advanced status page (with the control panel's **Print Status?** button) yet, skip to step 2.

*If you have previously installed your printer and have confirmed that it is printing, print an advanced status page in case you need to restore any current memory settings after the DIMM installation.*

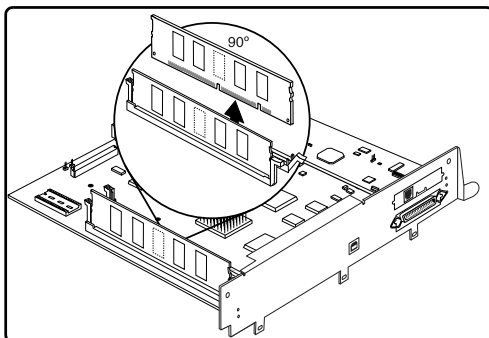


*Installing DIMMs automatically restores memory defaults. If your memory settings are specific to your environment, print an advanced status page before installing DIMMs, so you can recover the current memory settings.*

- 2 Turn off the printer and disconnect the power cord and all interface cables.
- 3 Remove the controller board.

*Loosen four screws, and pull the controller board from the printer.*

- 4 Position the controller board on a flat surface so it lies flat and the I/O connector panel is facing you.

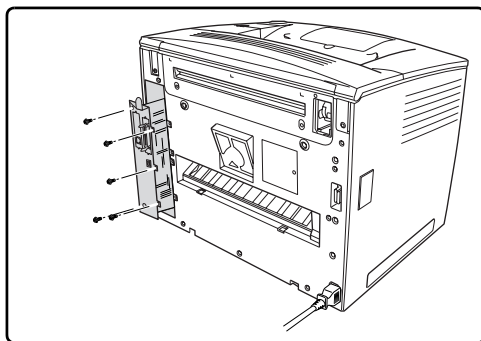


*If you want to install more memory, you may exchange one or more DIMMs for DIMMs with a greater memory capacity.*




- 5** If you need to remove a DIMM before installing one, remove it as follows; otherwise, skip to step 6.

- a** Using both thumbs, pull the latches (one on each side of the DIMM connector) outward.
- b** Lift the DIMM straight out of the DIMM connector.

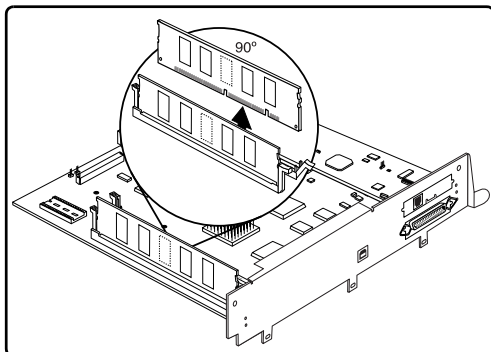

- 6** Insert the new DIMM straight down into the DIMM connector until the latches snap into the locked position.

*Observe the keyed side of the DIMM to align it with the connector. When seated, the DIMM stands upright, firmly in place. If you cannot snap the DIMM into place, do not force it. Reposition it, making sure that the bottom of the DIMM is seated completely in the connector.*

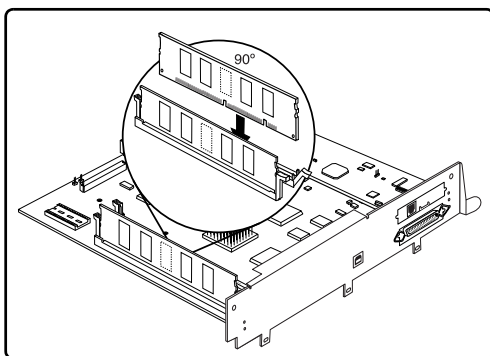

- 7** Reinstall the controller board into the printer.  
*Gently slide the controller board into the printer's tracks until it is fully seated, and then tighten the four screws.*
- 8** Reconnect all interface cables.
- 9** Reconnect the power cord, and turn on the printer.




*In compliance with UL guidelines, "The appliance inlet is considered to be the main disconnect device."*

- 10** Print a startup page or an advanced status page, and verify that the total amount of the RAM installed in your printer is listed (next to Installed Memory).



# Duplexer

Duplex (2-sided) printing can be done automatically with a duplexer and enough memory installed. See “Duplexing” in chapter 3.

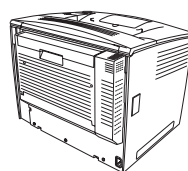

## What's in the duplexer kit?



- Duplexer
- Wrench

## Installing a Duplexer



*If both the optional duplexer and the 4-bin mailbox are to be installed, install the 4-bin mailbox first.*

- 1 Turn off the printer, and unplug the power supply cord and interface cable.

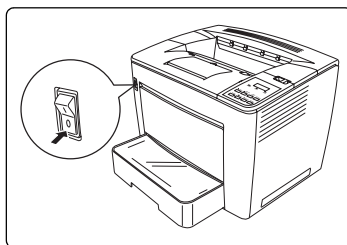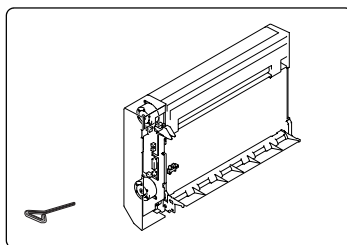


- 2 Remove the cover from the back of the printer.

*Since the back cover is secured with a screw, use the wrench supplied with the duplexer to loosen it.*




*Keep the removed cover in a safe place for future use.*

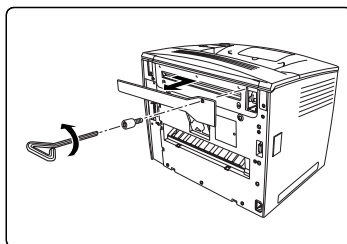




- 3 If the exhaust filter has been installed, remove it

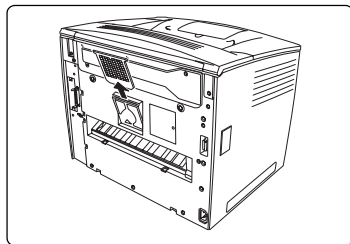


- 4 Attach the duplexer to the printer.
- a Hook the two tabs at the bottom of the duplexer onto the notches on the back of the printer.

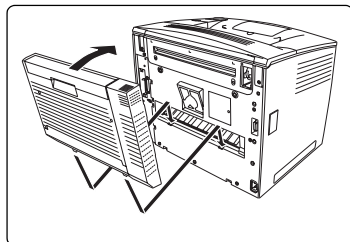

### **! Attention**

**If the duplexer is released before it is secured with the screws, it may fall and break. Be sure to keep the top of the duplexer supported until the screws are tightened.**

- b Using the wrench supplied with the duplexer, tighten the two screws on the duplexer to secure it to the printer.

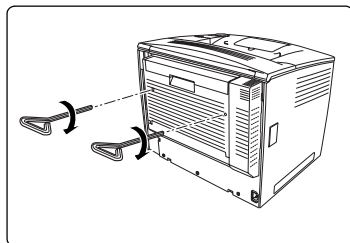

*The two screws are attached to the duplexer and cannot be removed.*




*After using the wrench, keep it in a safe place for future use.*

- 3 Reconnect all interface cables.
- 4 Reconnect the power cord and turn on the printer.



*In compliance with UL guidelines, "The appliance inlet is considered to be the main disconnect device."*

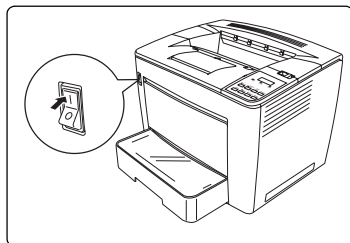



# Fonts and Forms

## Optional Fonts

Optional fonts are available as files on floppy disks or CD-ROMs.

An internal hard disk must be present on your printer before you can download a font.

We recommend that you use the Download Manager for Windows to download fonts. Other methods include downloading via Ethernet, USB, or parallel connections (refer to the *(in PDF on the Software Utilities CD-ROM)* for more information).

If you need assistance, go to [printer.konicaminolta.com](http://printer.konicaminolta.com).

## CID Fonts

CID fonts are a format of composite (multibyte) Type 1 fonts that address the requirements of Far East markets. CID-keyed refers to the character identifier (CID) numbers that are used to index and access the characters in the font. A CID font consists of a large font file that contains all the character outlines and a small CMap file that contains a list of characters, encodings, and character identifiers. Each CID font can support many character set and encoding combinations. CID fonts Adobe Morisawa, Enfour, and Fontworks are supported on the PagePro 9100.

## Kanji Font Internal IDE Hard Disk

The preformatted Kanji font internal IDE hard disk contains Kanji fonts and other files. These fonts can be printed at a variety of point sizes and in different styles and resolutions.

After the Kanji hard disk is installed in your printer, the Kanji fonts are available for use just as if they were resident on the printer.

## What's in the Kanji font internal IDE hard disk kit?

- Internal IDE hard disk drive preformatted with the following Kanji fonts:
  - GothicBBB Medium
  - Ryumin Light
- IDE hard disk with ribbon cable attached
- IDE hard disk bracket
- 4 screws



## Hardware Requirements

- A Macintosh, IBM PC, or compatible computer

## Software Requirements

- An application (such as a word processing or desktop publishing package) that supports PostScript printing.
- If you're using a Macintosh, the following Macintosh system software:
  - KanjiTalk, version J1-6.0.7 or later
  - System File, version J1-6.0.7 or later
  - Laser Prep, version J1-6.0.1 or later
  - LaserWriter, version J1-6.0.2 or later
  - Print Monitor, version J1-1.3 or later
  - MultiFinder, version J1-6.1.7 or later
  - Macintosh OS 8.xJ
- If you're using a PC, the following system software:
  - If you're using Windows, version 3.1J or later
  - If you're using DOS, version 5.0J or later

## Installing a Kanji Font Internal IDE Hard Disk Drive

### Attention

---

**The Kanji fonts are factory installed on a formatted hard disk drive. DO NOT reformat or initialize the Kanji internal IDE hard disk drive. Reformatting erases all data, fonts, and files on the disk. Your warranty does not cover this error.**

---

The Kanji font internal IDE hard disk is installed on the controller board in the same way any internal hard disk is installed. See "Internal IDE Hard Disk Drive" on page 119 for detailed steps on installing an internal IDE hard disk drive.

### Attention

---

**If you already have an internal hard disk installed, you must remove it before you can install the Kanji disk.**

---



## Configuring the Printer for Kanji

See “Storage Devices” in the *Crown Books* in PDF on the *Documentation* CD-ROM for information on how to configure your printer’s memory when using an internal IDE hard disk drive.

## PlanetPress

PlanetPress is an electronic forms package that allows the creation and modification of business forms, MICR checks, bar codes, and other preprinted forms.

Refer to the documentation that comes in the PlanetPress kit for installation and usage instructions.



# Internal IDE Hard Disk Drive

One optional internal IDE hard disk is supported.

## Attention

---


**Make sure that the printer and all accessories are turned off before installing accessories involving the controller board.**

---

## What's in the internal IDE hard disk drive kit?

The internal IDE hard disk drive kit includes the following:

- IDE hard disk with ribbon cable attached
- IDE hard disk bracket
- 4 screws

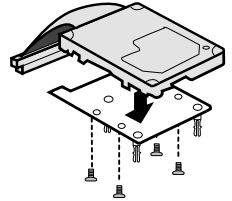

## Installing an Internal IDE Hard Disk Drive

## Attention

---

**It's very important to protect the printer controller board and any associated circuit boards from electrostatic damage. Before performing this procedure, review the antistatic caution on page 106. In addition, always handle circuit boards by the edges only.**

**When installing or removing a hard disk, make sure that the metal support posts (on the hard disk) do not come in contact with any of the electrical leads on the chips mounted on the controller board. The controller board will not function if any of the leads are broken or shorted together.**

---


- 1** Turn off the printer, and then disconnect the power cord and all interface cables from the printer.



- 2 Remove the controller board.


*Loosen four screws, and pull the controller board from the printer.*

- 3 Position the controller board on a flat surface so it lies flat and the I/O connector panel is facing you.

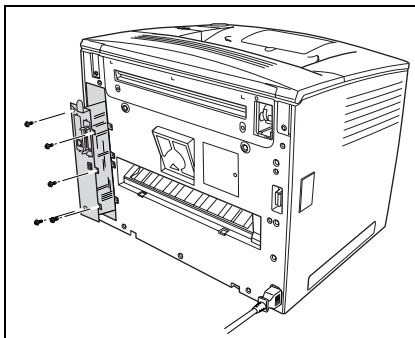

- 4 Attach the internal IDE hard disk drive to the hard disk bracket.

*Attach the internal IDE hard disk drive to the bracket with the grooved-end of the bracket facing the ribbon cable. The screw holes in the bottom of the hard disk should match up with the holes on the hard disk bracket. Fasten the hard disk to the bracket with the screws provided.*

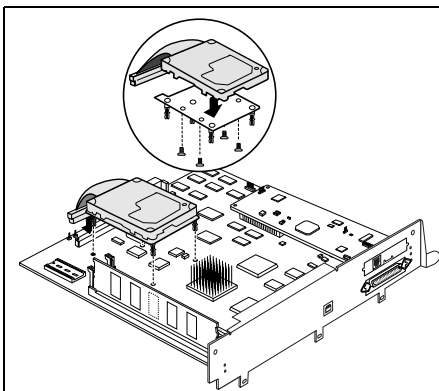

- 5 Position the hard disk so that the four support posts face the controller board, the colored stripe on the ribbon cable faces away from you, and the connector is down.

- 6 Insert ribbon cable connector pin 1 (the colored stripe side of the cable) in hard disk connector pin 1.

### **Attention**

**Make sure that the ribbon cable connector and the controller board connector pins are properly aligned. Damage to the controller board could result if the pins are misaligned.**

- 7 Press down gently but firmly on the cable connector until it is fully seated.

### **Attention**

**Do not push or pull with the ribbon cable. Use the cable connector.**



- 8 Align the support posts with the holes on the controller board, and then press down to secure the hard disk to the controller board.

*So that you don't stress the board, press one corner at a time to secure the hard disk to the controller board.*

- 9 Reinstall the controller board into the printer.


*Gently slide the controller board into the printer's tracks until it is fully seated, and then tighten the four screws.*

- 10 Reconnect all interface cables.

- 11 Reconnect the power cord and turn on the printer.




*In compliance with UL guidelines, "The appliance inlet is considered to be the main disconnect device."*

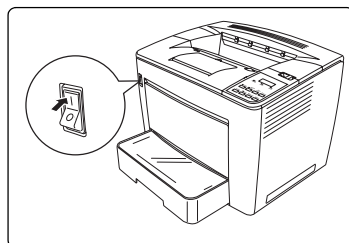



## Optional Media Feeder(s)

You may install up to three 500-sheet optional media feeders (inputbins 5 through 7). The media feeders are positioned under the printer, so no extra horizontal space is necessary.

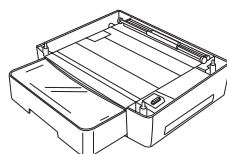

### What's in the optional media feeder kit?

 
- Optional media feeder with 500-sheet tray
- Two brackets
- Four screws

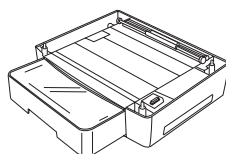



## Installing an Optional Media Feeder

- 1 Turn off the printer, and unplug the power supply cord and interface cable.

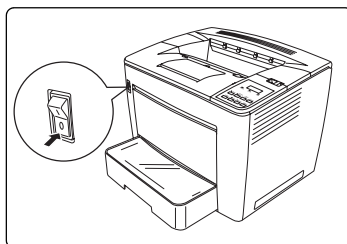

- 2 Remove the optional media feeder from the shipping carton, and place it on a table or flat surface near the printer.


- 3 Remove any tape and packing material.



*We **strongly** suggest that you save the packaging materials in case you ever need to move or ship the printer.*

- 4 If multiple media feeders are to be installed, stack them on top of each other at the desired setup location for the printer.

- 5 With another person's help, place the printer on top of the media feeder(s).

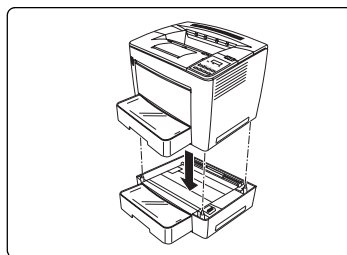


### **WARNING!**

**Your printer weighs approximately 70 lbs (32 kg) with consumables. Be sure to have help when lifting and moving it.**

- 6 Align the positioning pins on the media feeder with the holes in the bottom of the upper unit (printer or another media feeder) to stack them correctly.




- 7** Using the mounting parts (four screws and two brackets), secure the printer to the media feeder.
- a** Using the enclosed screws, attach the enclosed brackets to the two locations on the back of the printer.
  - b** Tighten the screws.

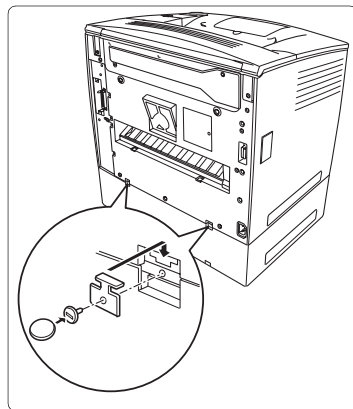

- 8** Remove the media tray from the upper unit (printer or other media feeder), and then secure the two units at the two locations shown using the enclosed screws. (Use a coin to tighten the screws.) After tightening the screws, replace the media tray.


*When installing multiple media feeders, secure each using the same procedure.*

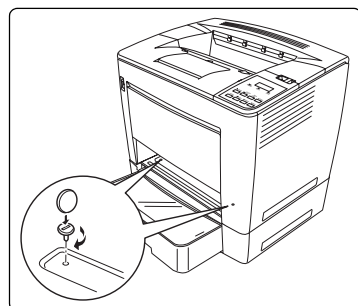

- 9** Reconnect all interface cables.
- 10** Reconnect the power cord, and turn on the printer.



*In compliance with UL guidelines, "The appliance inlet is considered to be the main disconnect device."*

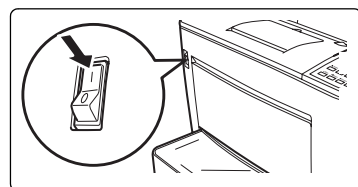



# Time-of-Day Clock


The time-of-day clock provides time and date information on the startup page and in the accounting data.

## Installing a Time-of-Day Clock

### Attention

It's very important to protect the printer controller board and any associated circuit boards from electrostatic damage. Before performing this procedure, review the antistatic caution on page 106. In addition, always handle circuit boards by the edges only.

- 1 Turn off the printer, and then disconnect the power cord and all interface cables from the printer.
- 2 Loosen the four screws and pull the controller board from the printer.

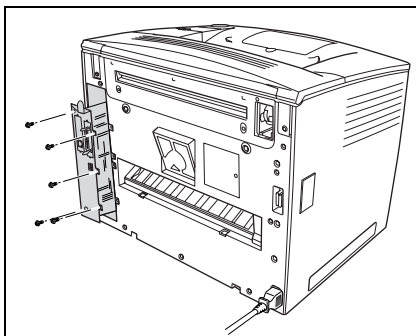

### WARNING!


**Because the time-of-day clock includes an internal battery, there is a danger of explosion if the clock is incorrectly installed or replaced. Replace it only with a supported KONICA MINOLTA time-of-day clock. Dispose of any used time-of-day clock in accordance with local laws and regulations.**



- 3 Attach the time-of-day clock to the controller board.

### Attention

**Make sure that the pins on the time-of-day clock are properly aligned with those in the receiving socket on the controller board. Damage to the time-of-day clock and/or controller board could result if the pins are misaligned.**

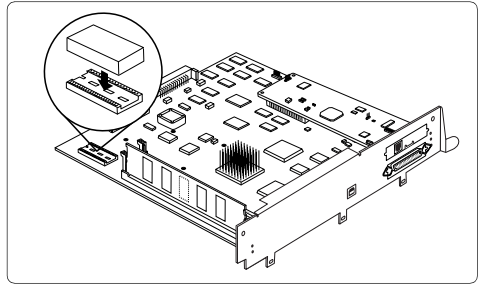

- a Locate the time-of-day clock socket on the controller board and the pin 1 notch or printed label.
- b Locate the pin 1 indicator mark on the top of the time-of-day clock.  
*This mark may be a notch or a slight depression on one end of the clock.*
- c Align this indicator mark with the pin 1 notch or printed label on the controller board.
- d Gently press down on the time-of-day clock until it's firmly seated.

- 4 Reinstall the controller board.


*Gently slide the controller board into the printer's tracks until it is fully seated, and then tighten the four screws.*

- 5 Reconnect all interface cables.

- 6 Reconnect the power cord and turn on the printer.



*In compliance with UL guidelines, "The appliance inlet is considered to be the main disconnect device."*

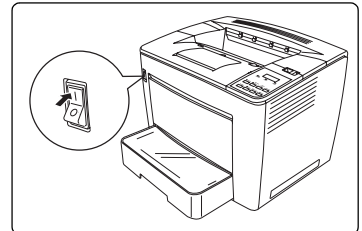

- 7 The presence of the clock will be automatically sensed.

- 8 Print a startup page.

*The time-of-day clock is not listed under "Installed Options" on the startup page, but the time does appear as System Date in the Printer Information column.*

## Using the Time-of-Day Clock

For instructions about setting and using the time-of-day clock, refer to the *Crown Books in PDF on the Documentation CD-ROM*.







---

***Storing,  
Deinstalling,  
Relocating,  
Repacking, and  
Shipping***

---

**7**



# Introduction

<b><i>Storing the Printer</i></b>	
"What do I do when <b>storing</b> the printer for an extended period?"	page 128
"How do I <b>care for media</b> ?"	page 129
<b><i>Deinstalling Accessories</i></b>	
"How do I <b>remove a duplexer</b> ?"	page 129
"How do I <b>remove a 4-bin mailbox</b> ?"	page 129
"How do I <b>remove an optional media tray</b> ?"	page 131
<b><i>Relocating the Printer</i></b>	
"How do I <b>relocate</b> my printer?"	page 133
<b><i>Repacking the Printer</i></b>	
"What's involved in <b>repacking</b> ?"	page 134
<b><i>Shipping the Printer</i></b>	
"How do I <b>ship</b> the printer?"	page 138
"Where can I get more <b>information</b> ?"	page 138



## **Attention**

Failure to follow instructions as outlined in this chapter could result in voiding your warranty.

## Storing the Printer

### **What do I do when storing the printer for an extended period?**

- 1 Turn off the printer.
- 2 Unplug the printer's power cords and interface cables.
- 3 Remove the toner cartridge from the printer and return it to its original packaging. If the original packaging is not available, protect the toner cartridge from light and from spilling toner.
- 4 Remove the media from all media tray(s).



## How do I care for media?

If media has been removed from its wrapper, place it in its original packaging and store in a cool, dark place.

### When storing media, avoid

- Moisture, excess humidity

*Keep media between 30% to 65% relative humidity. Toner does not adhere well to moist or wet paper*

*On the other hand, media that has been stored for a long time without staying in its packaging may dry up too much and also cause jamming.*

- Direct sunlight
- Excess heat (up to 86° F/30° C)
- Dust
- Leaning against other objects or placed in an upright position

*Store the media in a dust-free area protected from humidity.*

## Deinstalling Accessories

### Attention

---

**Before transporting the printer, remove the toner cartridge, put the cartridge in its original package or in a plastic bag, and then transport it without subjecting it to strong impacts.**

---

## How do I remove a duplexer?




*If both the optional duplexer and the 4-bin mailbox are to be removed, remove the duplexer first.*

**1**

Turn off the printer, and unplug the power supply cord and interface cable.

*The illustration shows the printer without a 4-bin mailbox. Follow the same instructions if a 4-bin mailbox is installed.*

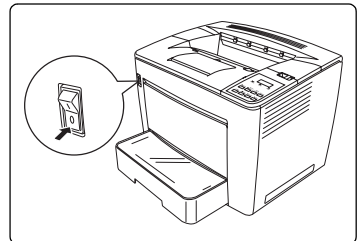



- 2 Detach the duplexer from the printer.

### **Attention**

**If the duplexer is released too quickly, it may fall and break. Be sure to keep the duplexer supported until the screws are loosened.**



- a** Using the wrench supplied with the duplexer, loosen the two screws on the duplexer.

*The two screws are attached to the duplexer and cannot be removed.*




*After using the wrench, keep it in a safe place for future use.*

- b** Unhook the two tabs at the bottom of the duplexer from the notches on the back of the printer.
- c** Store the duplexer in its original packaging.

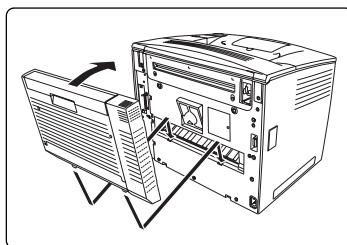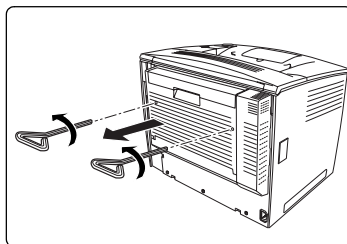


- 4 Replace the cover on the back of the printer.

*Use the wrench supplied with the duplexer to tighten it.*

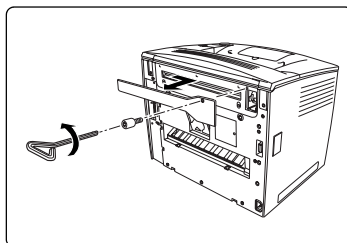


- 5 Replace the exhaust filter.

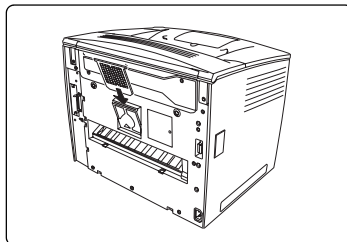




## How do I remove a 4-bin mailbox?

- 1 Turn off the printer.
- 2 Unplug the power supply cord and interface cable.
- 3 Remove the four mailbins (trays) from the 4-bin mailbox.
- 4 Disconnect the 4-bin mailbox cable from the connector on the printer.
  - a Press ①.
  - b Unplug the connector ②.

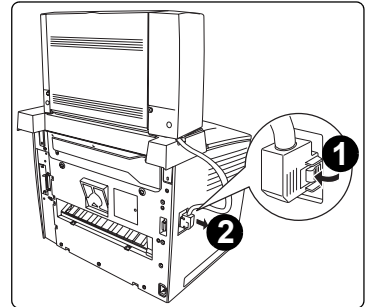


- 3 Press in the two buttons ① (one on each side) at the back of the 4-bin mailbox, and then lift the sorter up off the transport unit ②.
- 4 Remove the two screws securing the transport unit, and then remove the transport unit from the printer.
- 5 Return the stopper to its original position.
- 6 Install the two brackets, the back section of the top cover, and the connector cover, removed during installation of the 4-bin mailbox.
- 7 If you are going to use the printer without the 4-bin mailbox, reconnect the printer's power supply cord and interface cable.

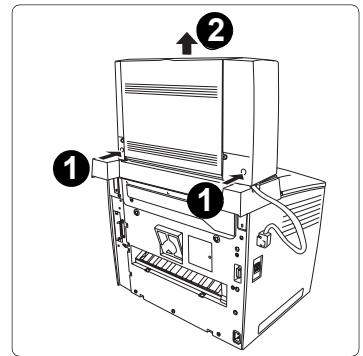


## How do I remove an optional media tray?

- 1 Turn off the printer, and unplug the power supply cord and interface cable.
- 2 Remove the upper media tray.

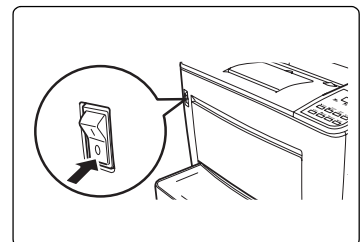




- 3 Detach the mounting brackets from the two locations on the back of the printer.

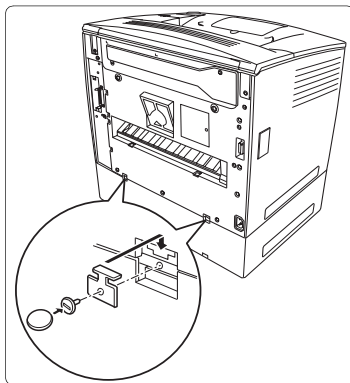

- 4 Loosen and remove the screws in front. (Use a coin to loosen the screws.)

*When deinstalling multiple optional media trays, remove each using the same procedure.*


- 5 After loosening the screws, lift the printer away from the optional media tray(s).

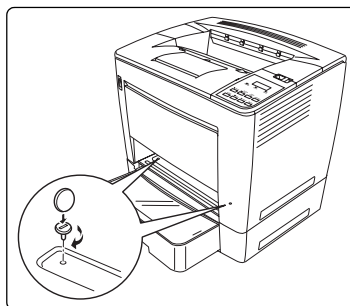

## WARNING!

**Your printer weighs approximately 61.7 lbs (28 kg) without consumables. Be sure to have help when lifting and moving it.**

- 6 Replace any tape and packing material.

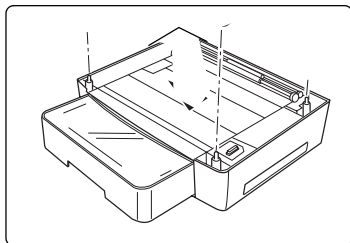


- 7 If you are going to use the printer without the optional media tray(s), reconnect the printer's interface cables.



- 8 Reconnect the power cord, and turn on the printer.



*In compliance with UL guidelines, "The appliance inlet is considered to be the main disconnect device."*

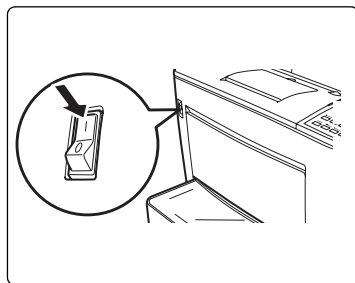

## Relocating the Printer

### How do I relocate my printer?

Occasionally, you may have to move your printer to a different location, either nearby or to a distant location.

To avoid damage to your printer, we advise you to follow the next instructions very carefully.

- 1 Turn off the printer.
- 2 If the printer has accessories, such as a 4-bin mailbox, remove them.
- 3 If you are moving to a distant location, follow the instructions for repacking the printer on page 134.
- 4 Relocate the printer.

### **WARNING!**

**Your printer weighs approximately 61.7 lbs (28 kg) without consumables. Be sure to have help when lifting and moving it.**

- 5 Set up the printer in its new location.
- 6 Reinstall the accessories you removed in step 2.



# Repacking the Printer

## Attention

---

KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. cannot be held responsible for damage to your printer during shipment that results from the improper packaging of your printer. You must use the instructions given in this section before repacking the printer in its original shipping carton with the original packing materials. If you do not have your original packaging, in the Americas call the Spares department at (251) 633-4300 extension 2530 and request the PagePro 9100 Repacking Kit 2600713-100. For locations outside the Americas, refer to [printer.konicaminolta.com](http://printer.konicaminolta.com).

If you have been instructed to return the printer to KONICA MINOLTA PRINTING SOLUTIONS U.S.A., INC. by a customer support representative in the Americas, be sure to write the RMA (Return Merchandise Authorization) number you receive on the outside of the carton before calling the shipper for pickup. If the RMA number is not *prominently* visible on the outside of the return inventory, we will not accept receipt.

You can also have a KONICA MINOLTA authorized service provider uninstall and repack your printer, or you can upgrade to on-site service. For prices and availability, call 1 (877) 778-2687 in the Americas or see [printer.konicaminolta.com](http://printer.konicaminolta.com) worldwide.

---

## What's involved in repacking the printer?

- 1 Turn off the printer.
- 2 Unplug the printer's power cords and interface cables.
- 3 Remove the toner cartridge and store it in its original packaging.
- 4 Remove all media.
- 5 Deinstall the duplexer, 4-bin mailbox, and optional media trays (if attached).



*If you're returning the printer for service, you don't need to return the accessories unless instructed to do so.*




- 6 With another person's help, put the printer into the plastic bag.

## WARNING!

**Your printer weighs approximately 61.7 lbs (28 kg) without consumables. Be sure to have help when lifting and moving it.**

**Do not tilt it more than 1° in any direction at any time.**

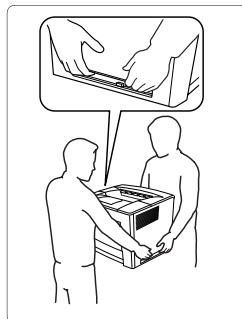

- 7 Verify that the actions in the following checklist have been completed.



*If you're returning the printer for service, you don't need to return the accessories, toner cartridges, imaging unit, documentation, or power and interface cables.*

✓	Item	Should be...	Additional information
	RMA number	Received and placed prominently on the outside of the carton.	page 134
	Replacement Packaging Kit part number 2600713-100	Acquired, if necessary	page 132
	Power cord and cables	Removed	page 134
	Toner cartridge	Removed	page 134
	Duplexer	Removed	page 129
	4-bin mailbox	Removed	page 131
	Optional media tray(s)	Removed	page 131
	Printer	Bagged	page 135



- 8 Pack the printer for shipment as shown in the illustration.



*Ensure the shipping carton rests squarely on top of the base tray.*

- 9 If you're also shipping the power cord and any manuals with the printer, place them in the shipping carton.



*Don't ship these items if you're returning the printer for service.*


- 10 Ensure that the top of the carton is securely taped.

- 11 Secure the shipping carton using proper strapping and buckling.

*If you ordered the repacking kit, 2 lengths of strapping precut to the appropriate length and 2 buckles to secure the strapping are included.*



*Otherwise, contact your local dealer for strapping and buckling supplies.*

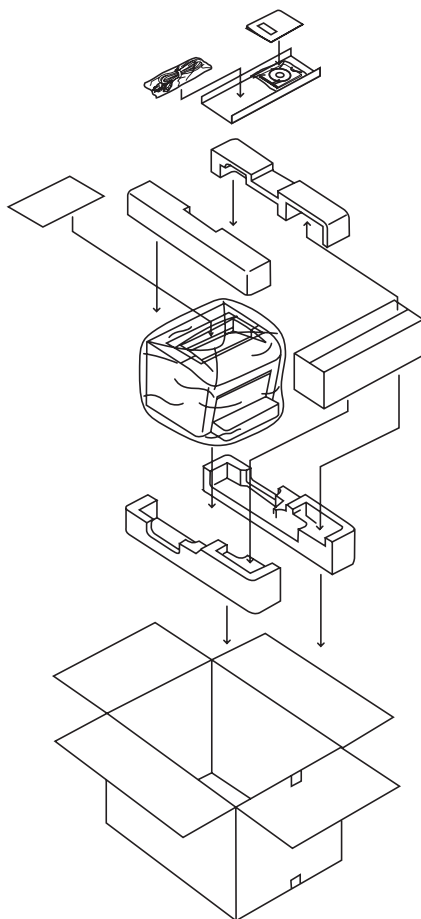


### **Attention**


**If the printer is not securely strapped, we will not accept receipt.**



- 12 Thread one end of the strapping beneath the carton.
- 13 Pull the two ends of the strapping together at the top of the carton.

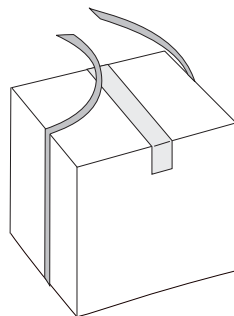


- 14 Thread both ends up through the center of the buckle.

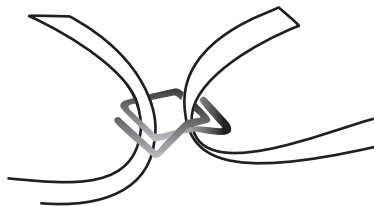

- 15 Weave the slack of one end through the buckle.

- 16 Pull the slack on that end so that the strapping is taut in the buckle.

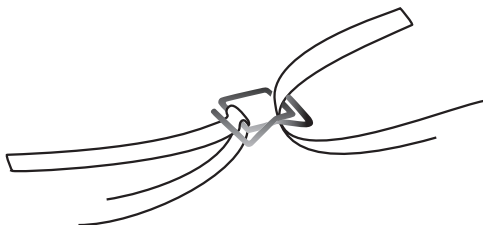

- 17 Weave the slack of the other end through the buckle.


- 18 Pull all of the remaining slack of the strapping through this side of the buckle, until the buckle is taut against the carton.



- 19 Pull the buckle against the carton as tightly as possible.  
*Some slack may still exist.*



- 20 Repeat this procedure again, spacing the straps across the carton.
- 21 Place the RMA number *prominently* on the carton.

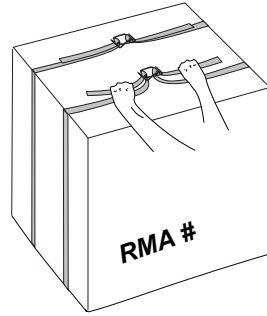

## Shipping the Printer

### How do I ship the printer?

If you need to ship your printer after installation, you must follow the procedures in this document to prevent damage to the printer and to keep your warranty valid.



*We **strongly** suggest that you save the packaging materials in case you ever need to move or ship the printer. If you're returning the printer for service, you don't need to return the accessories, documentation, interface cables, media tray(s), power cable, or toner cartridge.*

### Where can I get more information?

Refer to the *Service & Support Guide* or, for the most up-to-date contact information worldwide, go to [printer.konicaminolta.com](http://printer.konicaminolta.com).

If you have specific questions about your printer, go to [printer.konicaminolta.com](http://printer.konicaminolta.com).



---

***Technical  
Specifications***

---

**A**

---



# Requirements

## Space Requirements


The illustration below shows the amount of space required for operating the printer, replacing supplies, and removing media jams.



*Allow enough space around the printer to allow adequate ventilation and easy servicing. For best output quality and longest consumables life, install the printer on a hard, flat, level (within  $\pm 1^\circ$  slant) surface.*

### Base Printer


#### Top View

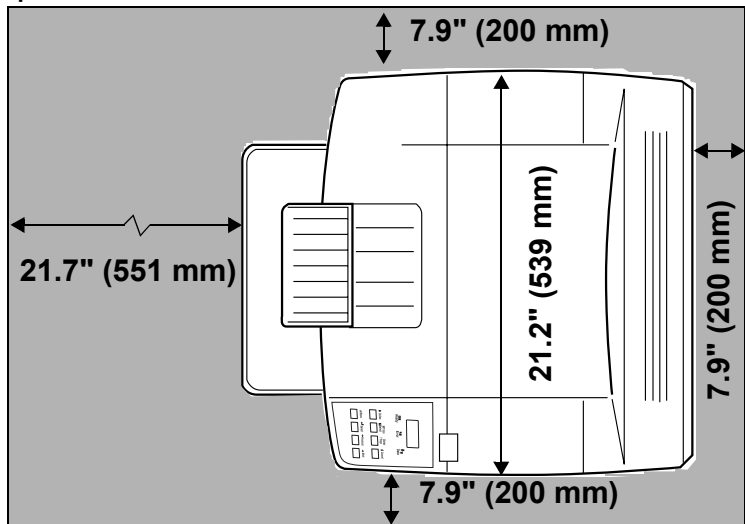

= Clearance (not shown: 18" [457 mm] on top of printer)



# Printer with Accessories

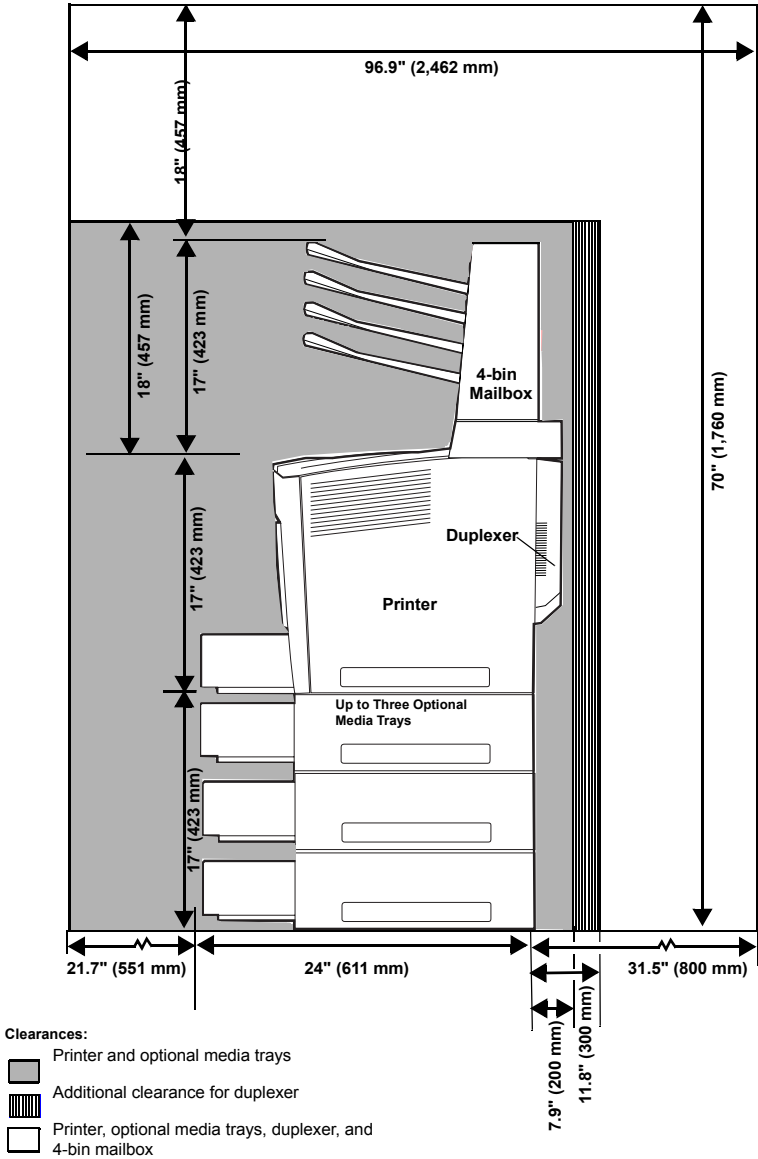



## Location Requirements

- On a surface capable of supporting the printer, accessories, consumables, and media.

Component	Weight
Printer	61.7 lbs (28 kg) or less
Printer with consumables (such as toner), manuals*	69.8 lbs (31.7 kg) or less
Basic system packaged to ship*	83.7 lbs (38.0 kg) or less
Media	5.2 lbs (1.9 kg) per ream of 20 lb bond (75 g/m <sup>2</sup> ) paper
Duplexer	4.50 lbs (2.04 kg)
4-bin mailbox	18.50 lbs (8.39 kg)
Optional media feeders*	20.25 lbs (9.2 kg) each (up to three available)
Printer with duplexer, 4-bin mailbox, and all three optional media feeders*	153.5 lbs (69.6 kg)
<b>Notes:</b> *Without media.	

With these characteristics...	But away from...
On a hard, flat, stable, level surface ( $\pm 1^\circ$ or less slant at any point around the machine).  <i>A surface can be tested for levelness with a standard round pencil. If the pencil rolls, the surface is not level.</i>	Direct sunlight, heating and cooling sources, extreme temperature or humidity changes, wind, dust, open flames, or items that can easily burn.
Close to an easily accessible grounded power supply (on an exclusively dedicated power outlet) that meets printer specifications. Near your computer. At the length 6.5' (2 m) or less for an IEEE 1284 bidirectional parallel connection.	A connection to the same electrical circuit as high-current machines. Noise-generating equipment, such as a copier or air conditioner, and strong magnetic or electromagnetic fields, such as a refrigerator.
With enough space to allow adequate ventilation and easy servicing.	Water, water pipes, liquid (drink) containers, and corrosive chemicals or vapors, such as ammonia.
With an ambient temperature range of 50°–90° F (10°–32° C) and relative humidity range of 15%–85% (noncondensating).	Small, loose metal parts, such as paper clips and staples.
At an altitude of 0–10,170' (0–3,100m).	Excessive vibration.



- If the printer is located in a cold room that is rapidly heated, or if the printer is moved from a cold place to a warm, humid place, condensation may occur within the printer, degrading print quality. If this occurs, allow the printer to adapt to the environment for about one hour before use.
- If using a humidifier or water vaporizer in the room with the printer, use only purified or distilled water. Impurities in the water may be released into the air, where they can accumulate inside the printer and cause degraded printer output.

## Attention

For products installed outside North America, do not connect the groundwire to gas or water pipes or grounding for telephones.

## WARNING!

Obstructing the ventilation grilles could present a fire hazard.

## Power Requirements

## WARNING!

Connect the power plug to an outlet with the same rated voltage as the printer (120 or 240 V), and fused for at least 15 amperes (120 V) or 8 amperes (240 V). No other devices should be connected to this outlet, as overheating could cause fire or electric shock. The printer draws 10 A at 120 V, or 5.5 A at 240 V. Your printer requires a properly grounded AC outlet with a rated line voltage of 120 V or 220–240 V. The grounding terminal on the power cable should be connected to a good earth ground to prevent electric shock and fire.

Power	Japan	100 VAC 50/60 Hz 10 amps
	North America	110-127 VAC 50-60 Hz 10 amps
	Europe	230–240 VAC 50/60 Hz 5.5 amps
	Latin America	120 VAC 60 Hz 10 amps 230 VAC 50/60 Hz 5.5 amps
	Taiwan	110-127 VAC 10 amps
	<b>Notes:</b> Amperage capacity at least 1.2 times that used by the printer.	



<b>Voltage Fluctuation Rate and Rated Line Voltage</b>	<b>Japan</b>	100 VAC $\pm 10\%$
	<b>North America</b>	120 VAC $\pm 10\%$
	<b>Europe</b>	220–240 VAC $\pm 10\%$
	<b>Latin America</b>	120 VAC $\pm 10\%$ 220–240 VAC $\pm 10\%$
	<b>Taiwan</b>	110-127 VAC $\pm 10\%$
	<b>Notes:</b> 10% of the rated line voltage for proper operation.	
<b>Frequency Variation Rate</b>	Within 50–60 $\pm 3$ Hz	
<b>Fused</b>	For at least 15 amperes (8 amperes for 240 V).	
<b>Printer</b>	Draws 10 A at 100 V, 110-127 V, or 120 V; or 5.5 A at 220 V or 240 V.	
<b>Maximum Electrical Current</b>	Required during operation is 10 amps for a 100 V-127V or a 120 V system and 5.5 amps for a 220–240 V system.	
<b>Noise-generating Equipment</b>	Should not be connected to the same electrical outlet as the printer.	
<b>Grounding</b>	Your printer requires a properly grounded AC outlet.	



# Engine and Controller Specifications

## Print Speed

<div>Print Type</div> <div>Media Size</div>	Simplex			Duplex			
	RAM*		Speed	Feed	RAM*		Speed
	600 dpi	1200 dpi			600 dpi	1200 dpi	
A3	64 MB	96 MB	19.5 ppm	SEF	64 MB	96 MB	13 ipm
A4		64 MB	35 ppm	LEF			26 ipm
B4		96 MB	19.1 ppm	SEF			13 ipm
Ledger		96 MB	19 ppm	SEF			26 ipm
Legal		64 MB	17 ppm	SEF			13 ipm
Letter		64 MB	35 ppm	LEF			26 ipm
Notes	<div>dpi = dots per inch; ppm = pages per minute; ipm = images per minute; SEF = Short Edge Feed; LEF = Long Edge Feed.</div> <div>Duplexing is supported only up to 24 lb (90 g/m<sup>2</sup>) bond. Duplexing envelopes, Japanese postcards, labels, thick stock, and transparencies is not supported</div>						

## Engine


<b>Engine</b>	KONICA MINOLTA NC-A611
<b>Standard average duty cycle</b>	150,000 simplex letter/A4 sheets maximum per month The duty cycle is affected by the media type and percent coverage.
<b>Printer type</b>	Desktop, non-impact, monochrome printer
<b>Print method</b>	<b>Scanner:</b> Semiconductor laser with rotating mirror <b>Recorder:</b> Black writing electrophotographic <b>Process:</b> Black toner image transfer to print media <b>Fuser:</b> Heated rollers



<b>Resolution</b>	600 x 600 dpi You may also need additional memory (DIMMs) for the following: <ul style="list-style-type: none"> <li>■ To print at maximum performance</li> <li>■ To print complex graphics or complex PostScript documents</li> <li>■ For increased collation performance</li> <li>■ For increased spooling performance</li> </ul>
<b>Toner</b>	<b>Type:</b> Chemical-type <b>Packaging:</b> User-replaceable toner cartridges Toner cartridges are available from your local vendor or visit <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a> .
<b>Warm-up time</b>	<b>Typical:</b> 70 seconds from power on, assuming normal temperature and humidity.
<b>Input sources</b>	<b>Upper:</b> 200-sheet multipurpose tray 500-sheet upper tray <b>Optional:</b> Up to three 500-sheet optional trays may be added
<b>Output</b>	500-sheet output tray on top of printer 50-sheet optional 4-bin mailbox
<b>Media sizes and weights</b>	See chapter 3, "Using Media."
<b>Media type</b>	Cut-sheet
<b>Notes</b>	The maximum media weight supported for duplex printing is 24 lb bond (90 g/m <sup>2</sup> ).



## Controller

<b>CPU</b>	IDT RC64474, operating at 200 MHz
<b>Resident emulations</b>	<p><b>HP PCL</b>—PCL XL/5e/5c, PCL6, PCL5e/GL2 (HP PaintJet XL300 compatible; 300/600 dpi; 300/600/1200 dpi, GL2 only)</p> <p><b>HP-GL</b>—7475A/7550/Draftmaster (300/600 dpi)</p> <p><b>Lineprinter</b>—(600 dpi)</p> <p><b>PDF</b>—Version 1.3 (Direct PDF Printing)</p> <p><b>PostScript</b>—Level 3 (600/1200 dpi)</p>
<b>Fonts</b>	<p>PostScript—252 resident PostScript fonts that can be scaled from 4 points upward and rotated to any angle in 1° increments; all typefaces have multi-lingual character sets</p> <p>HP PCL 5e, 5c—45 scalable and 9 bitmap fonts</p> <p>PCL XL—45 scalable and 9 bitmap typefaces</p> <p>HP-GL—40 resident HP-GL symbol sets</p> <p>Type 1 / Type 3 Support—Support for Type 1 and Type 3 host-resident downloadable PostScript fonts</p> <p>TrueType—Support for Type 42 (PostScript format) host-resident downloadable TrueType fonts, support for TrueType fonts in PCL</p>
<b>Optional Kanji fonts</b>	<b>Hard disk</b> — Kanji Internal IDE Hard Disk Drive with two Morisawa fonts
<b>Standard interfaces</b>	<p><b>CrownNet Ethernet</b>—10BaseT/100BaseTX</p> <p><b>Parallel</b>—Centronics/IEEE 1284 bidirectional</p> <p><b>USB</b>—USB Type B connector</p> 
<b>RAM</b>	<p><b>Type:</b> PC-100 Compliant SDRAM DIMMs</p> <p><b>Base system RAM:</b> 64 MB</p> <p><b>Total RAM:</b> Upgradable to 512 MB (through 2 DIMM connectors)</p>



<b>Optional RAM</b>	<p>32, 64, 128, and 256 MB DIMMs</p> <p>Additional memory must be 32, 64, 128, or 256 MB PC-100 Compliant SDRAM DIMMs, up to a maximum of 512 MB.</p> <p><i>For information about DIMMs recommended for your printer, check <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a></i></p>
<b>System software</b>	Softloadable; stored in Flash ROM
<b>Optional internal IDE hard disk</b>	<p>Up to 2.2 GB</p> <p><i>For information about hard disks recommended for your printer, check <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a></i></p>
<b>Time-of-day clock</b>	Optional
<b>Job accounting</b>	Crown job accounting; requires an optional internal IDE hard disk drive



# Electrical

## Voltage and Power

<b>Voltage and frequency</b>	<b>US:</b> 120 volts $\pm 10\%$ at 60 Hz $\pm 2$ Hz <b>Japan:</b> 100 volts $\pm 10\%$ at 50/60 Hz $\pm 2$ Hz <b>International:</b> 220-240 volts $\pm 6/-10\%$ at 50 Hz $\pm 2$ Hz <b>Taiwan:</b> 110-127 volts $\pm 10\%$ 50-60 Hz $\pm 2$ Hz		
<b>Phase</b>	Single		
<b>Power consumption</b>	<b>Mode</b>	<b>Average</b>	<b>Maximum</b>
	<b>Operation</b>	450 watts	850 watts
	<b>Standby</b>	180 watts	850 watts
	<b>Power saver</b>		45 watts


## Current

<b>Mode</b>	<b>Average</b>	<b>Maximum</b>
<b>Operation (100–120 V) (110-127V)</b>	4 amperes	10 amperes
<b>Operation (220–240 V)</b>	0.75 amperes	5.5 amperes
<b>Standby Power saver mode (100–120 V)</b>	1.7 amperes	8 amperes
<b>Standby Power saver mode (220–240 V)</b>	0.2 amperes	4 amperes



Environmental

<b>Acoustic noise data by ISO 7779</b>	57 dB(A) max. (printing) 38 dB(A) max. (stand-by)
<b>Noise Declaration for Germany</b>	Maschinenlärminformationsverordnung 3. FSGV, 18.01.1991: Der höchste Schalldruckpegel beträgt 70 dB (A) oder weniger gemäß EN 27779.
<b>Relative humidity</b>	<b>Operating:</b> 20-80% RH (without condensation) <b>Transportation/Storage:</b> 10–90% RH (without condensation)
<b>Temperature range</b>	<b>Operating:</b> 50-90.5° F (10-32.5° C) <b>Transportation/Storage:</b> 32-95° F (0-35° C)
<b>Altitude</b>	<b>Operating:</b> 0-8202 ft (0-2500 m)
<b>Inclination</b>	<b>Operating:</b> ±1° or less slant at any point around the machine

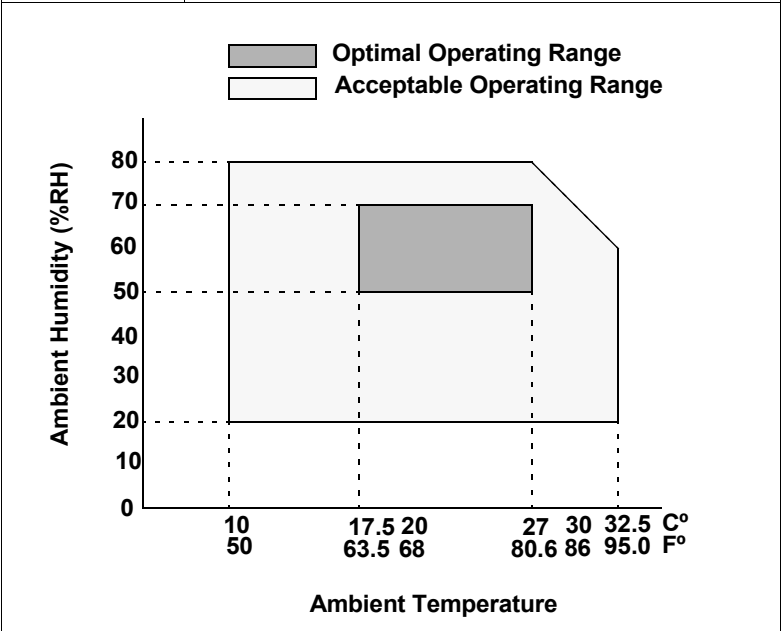



## Physical

	Main Body	Duplexer	Optional Media Tray (per Tray—up to Three Total Available)	4-bin Mailbox
<b>Dimensions</b>	<b>W:</b> 21.22 in. (539 mm)  <b>H:</b> 16.65 in., (423 mm)  <b>D:</b> 17.64 in., (448 mm)	<b>W:</b> 3.94 in. (100 mm)  <b>H:</b> 11.02 in. (280 mm)  <b>D:</b> 16.34 in. (415 mm)	<b>W:</b> 20.16 in. (512 mm)  <b>H:</b> 5.28 in. (134 mm)  <b>D:</b> 21.69 in. (551 mm)	<b>W:</b> 18.31 in. (465 mm)  <b>H:</b> 11.22 in. (285 mm)  <b>D:</b> 15.55 in. (395 mm)
<b>Weight (without consumables)</b>	<b>Unpacked:</b> 61.7 lbs (28 kg)  <b>Packed for shipment:</b> 82.7 lbs (37.5 kg)	4.50 lbs (2.04 kg)	20.25 lbs (9.19 kg) each (up to three available)	18.50 lbs (8.39 kg)
<b>Weight</b>	<b>(with consumables, duplexer, three optional media trays, 4-bin mailbox, manuals, but not media)</b>  151 lbs (68.49 kg)			
<b>Media</b>	5.2 lbs (1.9 kg) per ream of 20 lb bond (75 g/m <sup>2</sup> ) paper			

## Consumable Life Expectancies

The stated life expectancy of each consumable is based on printing under specific operating conditions, such as media type, page size, content of material printed, and page coverage (usually 5% coverage of letter/A4-size media). The actual life expectancy will vary (or be reduced) depending on these and other printing variables, including continuous (optimal consumable life) or intermittent (for example, one-page jobs) printing, ambient temperature, and humidity.



Item	Average Life Expectancy (in Simplex Pages)	Comment
<b>Fuser</b>	300,000 intermittent printing (for example, one-page jobs)  500,000 continuous printing (average four-page jobs)	The fuser must be replaced by a KONICA MINOLTA authorized service provider. Refer to the <i>Service &amp; Support Guide</i> or <a href="http://printer.konicaminolta.com">printer.konicaminolta.com</a> .
<b>Toner Cartridge and Exhaust Filter</b>	At 5% coverage, <b>Starter Cartridge</b> = 6,000 <b>Replacement Cartridge</b> = 15,000 continuous printing or 12,000 intermittent printing (TONER EMPTY displays in the message window.)	Replace the toner cartridge and the exhaust filter at the same time.  <i>If the optional duplexer is installed, the exhaust filter does not need replacement.</i>  See "How do I replace and recycle the toner cartridge?" on page 17.
<b>Media Pickup Roller—Multipurpose Tray</b>	Approximately 150,000	User replaces if media misfeeds in the multipurpose tray frequently, when the fuser is replaced, and after every 150,000 pages. See "How do I replace and recycle the toner cartridge?" on page 17.
<b>Paper Separation Roller—Media Tray(s)</b>	Approximately 200,000	User replaces if media misfeeds in the media tray(s) frequently, when the fuser is replaced, and after every 200,000 pages. See "How do I replace the paper separation roller?" on page 22.
<b>Transfer Roller</b>	Approximately 150,000	See "How do I replace the transfer roller?" on page 27.

Use of consumables not manufactured by KONICA MINOLTA or use of nonsupported print media may cause damage to your printer and will void your warranty. If KONICA MINOLTA printer failure or damage is found to be directly attributable to the use of non-KONICA MINOLTA consumables and/or accessories, KONICA MINOLTA will not repair the printer free of charge. In this case, standard time and material charges will be applied to service your printer for that particular failure or damage.

To order consumables and accessories, check [printer.konicaminolta.com](http://printer.konicaminolta.com) for the KONICA MINOLTA office closest to you.



## What is IPP?

IPP has two meanings:

- 1 Internet Printing Protocol**—Internet Printing Protocol allows you to print remotely to any IPP-enabled printer through both intranets and the Internet. All printers, including the PagePro 9100, that are shared on a Windows 2000 (and higher)-based server are automatically made accessible by using the Internet Printer Protocol (IPP). This technology allows for electronic distribution of documents via the Internet, and communication between the user and the printer. You can submit jobs, inquire about the status of a print job, and cancel a job.

*Internet printing in Windows 2000 is automatically enabled by installing Microsoft Internet Information Services (IIS). Clients that are running Microsoft Internet Explorer 4.01 (and later) with IPP printing support can print to Internet printers. IPP (which is case-sensitive) is built on top of HTTP, which in turn runs over TCP/IP.*

- a** After the driver is installed, select Start/Settings/Printers/Add Printer.
- b** Click Next; then select Network Printer; then click Next.
- c** Select "Connect to a printer on the Internet or on your intranet".
- d** Enter the URL, for example: `http://iphostname:80/printer_name`.  
*iphostname:80 = printer name in the host table, or the printer IP address. The iphostname is acquired from the System Administrator.*

*printer\_name = the printer name given on the startup or status page (do not include spaces or underscores in the name).*



*For instructions on changing your default printer name, refer to the Crown Books in PDF on the Documentation CD-ROM.*

- e** Click Next and follow the instructions on the screen.
- f** Print a test page, and verify that the test page printed.

*Windows 98/95-based clients can install the add-on Internet printing client from the Windows 2000 Server CD-ROM by using the following command:*

`\\clients\win9xipp.cli\wppnpins.exe`



## 2 **Internet Pull Printing**—Internet Pull Printing is a way to download files the printer can interpret already (such as PS, PCL, HPGL) and send them to the printer without having to download them to a computer first.



*Internet Pull Printing does not provide an HTML emulation that prints web pages.*

*To do effective pull printing, you have to be able to access both “http” and “ftp” methods.*

*Internet Pull Printing is activated through the printer’s web page (CrownView). One of the menu selections you will see on the printer’s browser page is Internet Pull Printing. When the menu item is selected, you are presented with several fields to populate.*

- a** No User name is required.
- b** Password is “admin” (all lower case, without the quotes).
- c** URL is the web address of the file you wish to print to the printer, for example: `http://newsite.test.com/testfile.ps`.



*The Use Proxy check box and the DNS/PROXY Settings are fields that will best be addressed by your System Administrator according to your network environment.*

- d** Once the password and URL have been input, simply select the Pull File button. You should receive a message that lists the URL address and file, saying that it has been queued to print.

*Internet traffic will factor into print speed and how fast the job is received.*



*If you incur any error messages, or your file does not print, contact your System Administrator to discuss the information on the Use Proxy check box and the DNS/PROXY Settings page.*



# Document Option Commands

This lists the supported Document Option Commands (DOCs) for your PagePro 9100. The commands are grouped by feature type.

Each command is preceded by either a DOC statement (%%) or an IncludeFeature statement (%%IncludeFeature). See the *Crown Document Option Commands* manual (in PDF at [printer.konicaminolta.com](http://printer.konicaminolta.com)) for information on all commands.

## Header/Trailer Page Commands

Print charge number	%%ChargeNumber
Print copyright statement	%%CopyRight:
Print document creator	%%Creator:
Print creation date and time	%%CreationDate:
Print current date	%%Date:
End comments	%%EndComments
Print document owner	%%For:
Print document host	%%Host:
	%%Pages
Job completion notification via email	%%Notify
Select page order	%%PageOrder
Save job for reprinting (proof and print)	%%Reprint:
Print routing information	%%Routing:
Print document title	%%Title:
Print version and revision	%%Version:
Print header page	%%IncludeFeature: header
Print trailer page	%%IncludeFeature: trailer

## HP-GL Emulation Commands

Select enhanced resolution	%%IncludeFeature: enhanced
Expand plot	%%IncludeFeature: expand
Select original paper size	%%IncludeFeature: size
Select pen width and color	%%IncludeFeature: pen
Select plotter	%%IncludeFeature: plotter
Scale the image	%%IncludeFeature: scaling
Set origin	%%IncludeFeature: origin

## HP PCL 5e Emulation Commands

Install object	%%IncludeFeature: install
Remove object	%%IncludeFeature: remove
Remove resource	%%IncludeFeature: removeresource



Retain temporary	%%IncludeFeature: retaintemporary
Select default font	%%IncludeFeature: font
Select default font ID	%%IncludeFeature: fontid
Reset	%%IncludeFeature: reset
Select symbol set	%%IncludeFeature: symbolset
Set carriage return to CR+LF	%%IncludeFeature: crisCrLf
Set linefeed to CR+LF	%%IncludeFeature: lfisCrLf
Set number of lines per inch	%%IncludeFeature: linesperinch
Set point size	%%IncludeFeature: pointsize
Resource	%%IncludeFeature: resource

## Lineprinter Emulation Commands

Select font for current job	%%IncludeFeature: font
Set point size for current job	%%IncludeFeature: pointsize
Specify character map type	%%IncludeFeature: map
Number lines	%%IncludeFeature: number
Set tabs	%%IncludeFeature: tabs
Set linefeed to CR+LF	%%IncludeFeature: lfisCrLf
Set carriage return to CR+LF	%%IncludeFeature: crisCrLf
Set formfeed to CR+FF	%%IncludeFeature: ffisCfff
Wrap lines	%%IncludeFeature: autowrap
Set number of lines per page	%%IncludeFeature: linesperpage
Set margins	%%IncludeFeature: lpmargins
Set orientation	%%IncludeFeature: lporientation

## PostScript Emulation Command

SC-110 to set PostScript protocol	%%IncludeFeature: parpsprotocol x
-----------------------------------	-----------------------------------

## Document Formatting

Logical page orientation	%%IncludeFeature: pageorientation
Number up printing	%%IncludeFeature: pagegrid
Offset logical page	%%IncludeFeature: pageoffsets
Print borders	%%IncludeFeature: border
Scale logical page	%%IncludeFeature: pagescaling
Print background images	%%IncludeFeature: background
Set printer resolution	%%IncludeFeature: resolution
Print page range	%%IncludeFeature: pagerange
Duplex printing	%%IncludeFeature: duplex



Collate print job	%%IncludeFeature: collate
Logical page size	%%IncludeFeature: pagesize
Select number of copies	%%IncludeFeature: numcopies
Select paper	%%IncludeFeature: input
Select paper	%%IncludeFeature: output
Select orientation	%%IncludeFeature: orientation
Select emulation	%%IncludeFeature: emulation
Logical margins	%%IncludeFeature: margins
New page layout	%%IncludeFeature: newlayout
Select color or monochrome	%%IncludeFeature: colormodel
Media type (such as thick stock)	%%IncludeFeature: mediatype

## Job and Subjob Boundary Commands

Sessions (only via network interface)	%%Sessions
End of document	%%EndOfDocument
	<ESC>%-12345X




# Menus

## Configuration Chart Conventions

The following conventions are used in the menu charts:

- Some menu choices are marked as optional, indicating that the selection appears in the menu only when the option is installed.
- These charts show only the top-level menus. See the *Crown Books* in PDF on the *Documentation* CD-ROM for detailed information on menu options.


## Security Menu

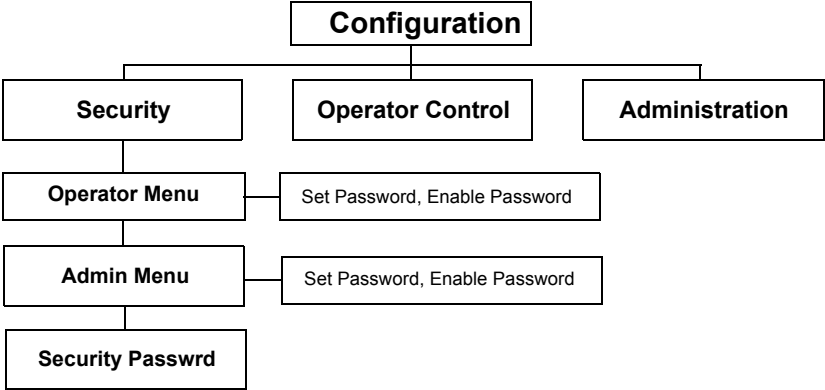

**Note:** For menu details and printer configuration information, refer to the *Crown Books* in PDF on the *Documentation* CD-ROM.



# Operator Control Menu

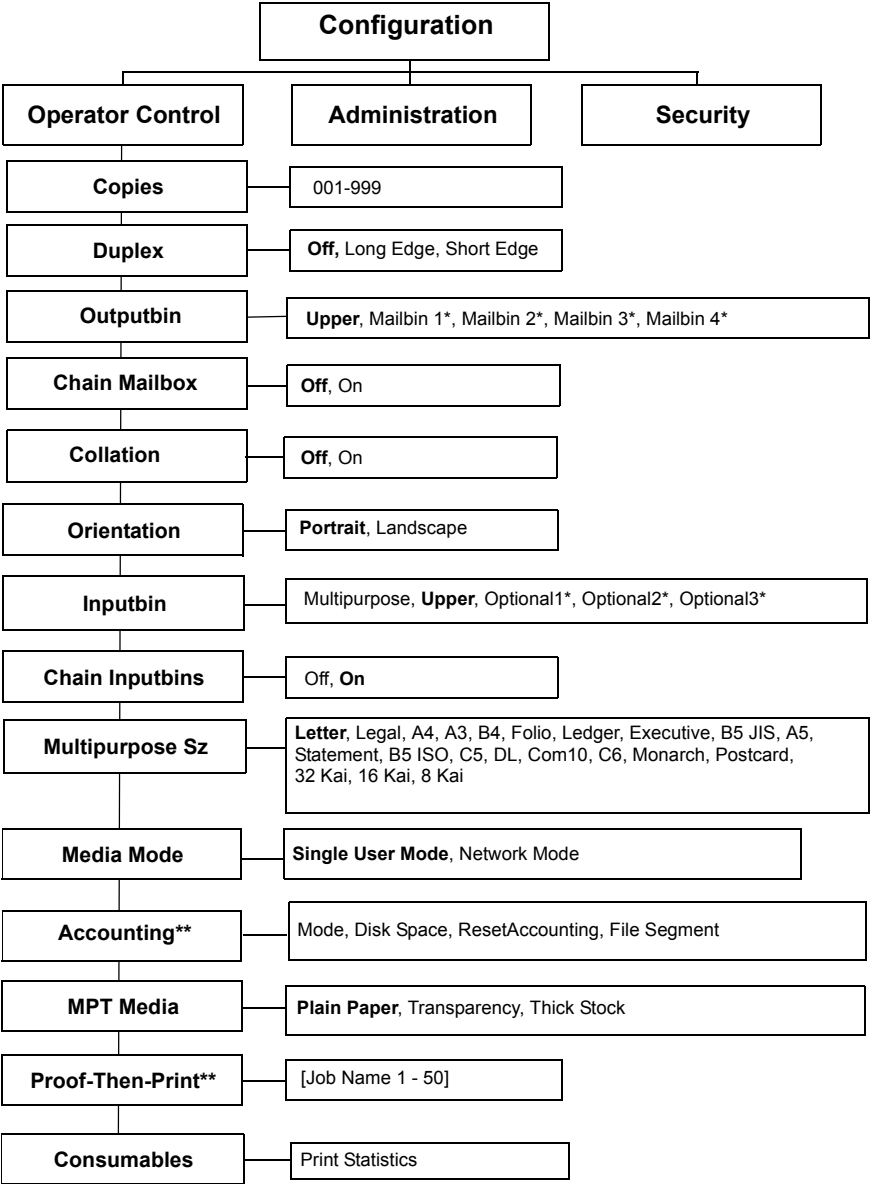

\* Only with an optional media tray(s) installed


\*\* Only with an optional hard disk installed

**Bold:** Default setting

**Note:** For menu details and printer configuration information, refer to the *Crown Books* in PDF on the *Documentation* CD-ROM.



# Administration Menu

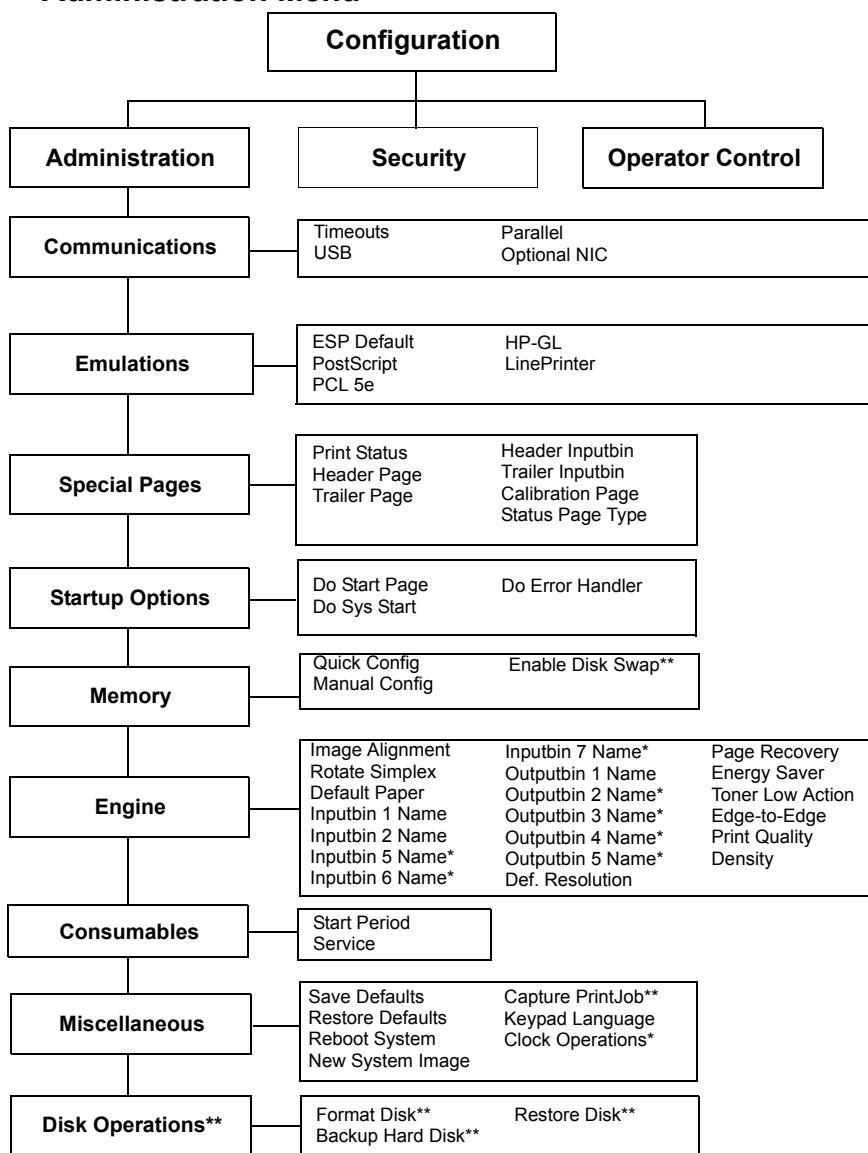

\* Only with an optional hard disk installed

\*\* Only with an optional dulpexer installed


**Bold:** Default setting

**Note:** For menu details and printer configuration information, refer to the *Crown Books* in PDF on the *Documentation CD-ROM*.



# Administration/Communications/Optional NIC/ CrownNet Menu

## Common Menu

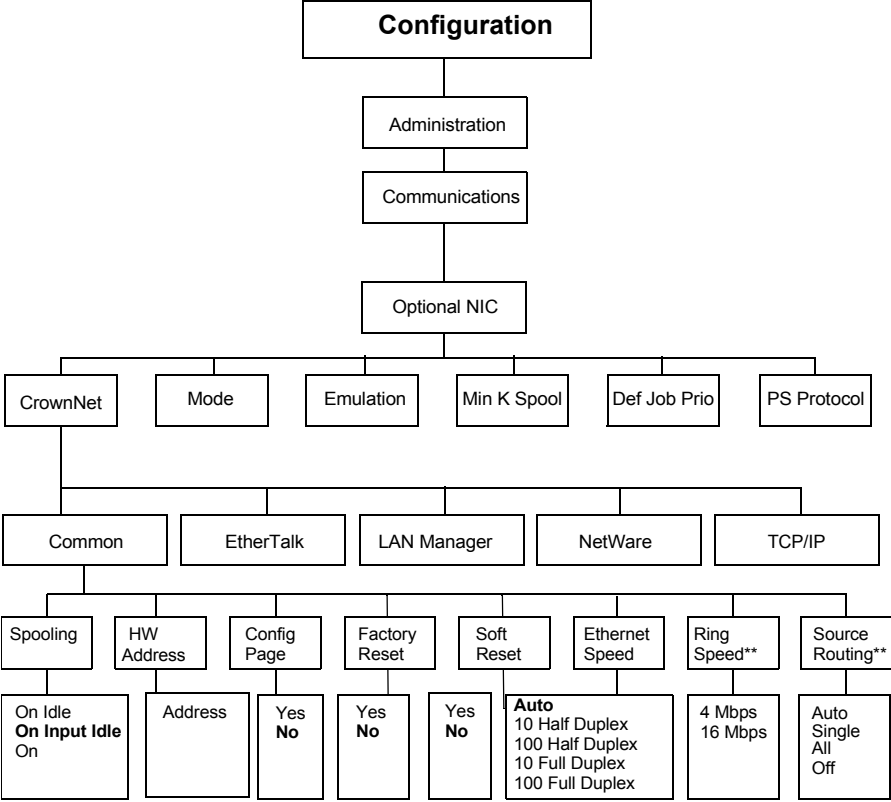

\* Optional


\*\* Token-Ring only

**Bold:** Default setting

**Note:** For menu details and printer configuration information, refer to the *Crown Books* in PDF on the *Documentation* CD-ROM.



# EtherTalk Menu

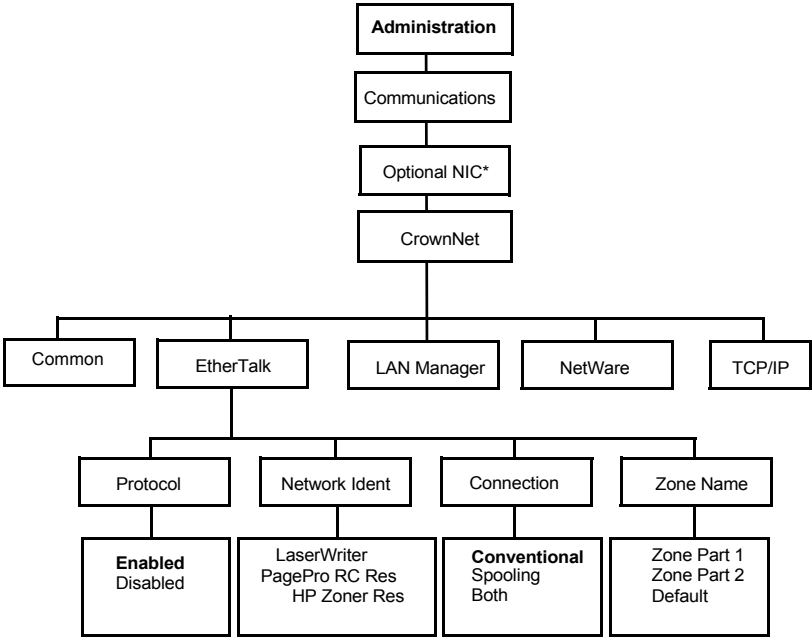


\* Optional

**Bold:** Default setting

**Note:** For menu details and printer configuration information, refer to the *Crown Books* in PDF on the *Documentation* CD-ROM.



## LAN Manager Menu

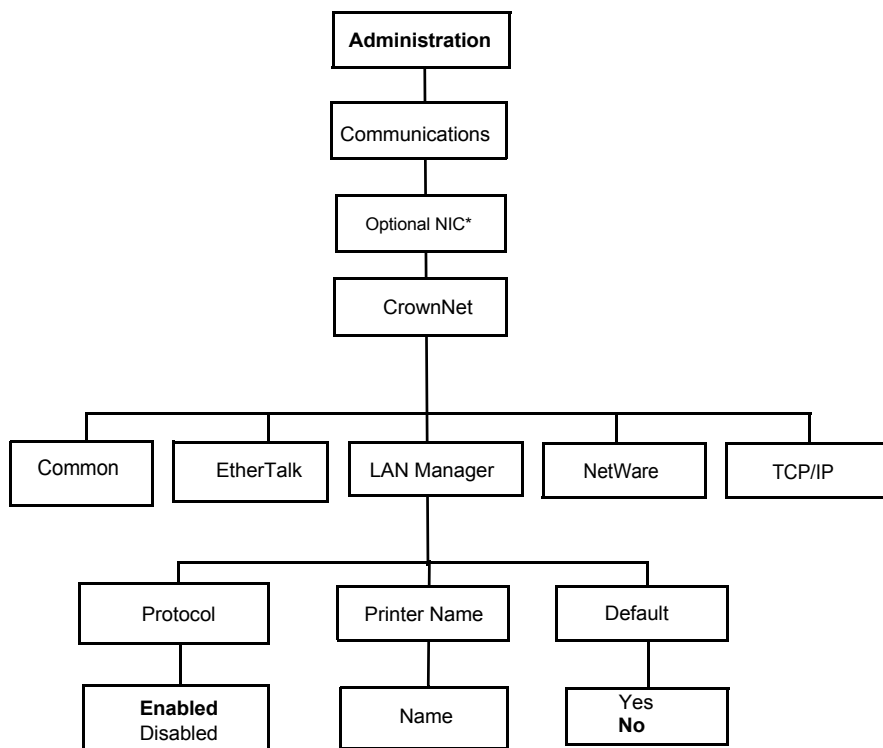


\* Optional

**Bold:** Default setting

**Note:** For menu details and printer configuration information, refer to the *Crown Books* in PDF on the *Documentation* CD-ROM.



# NetWare Menu

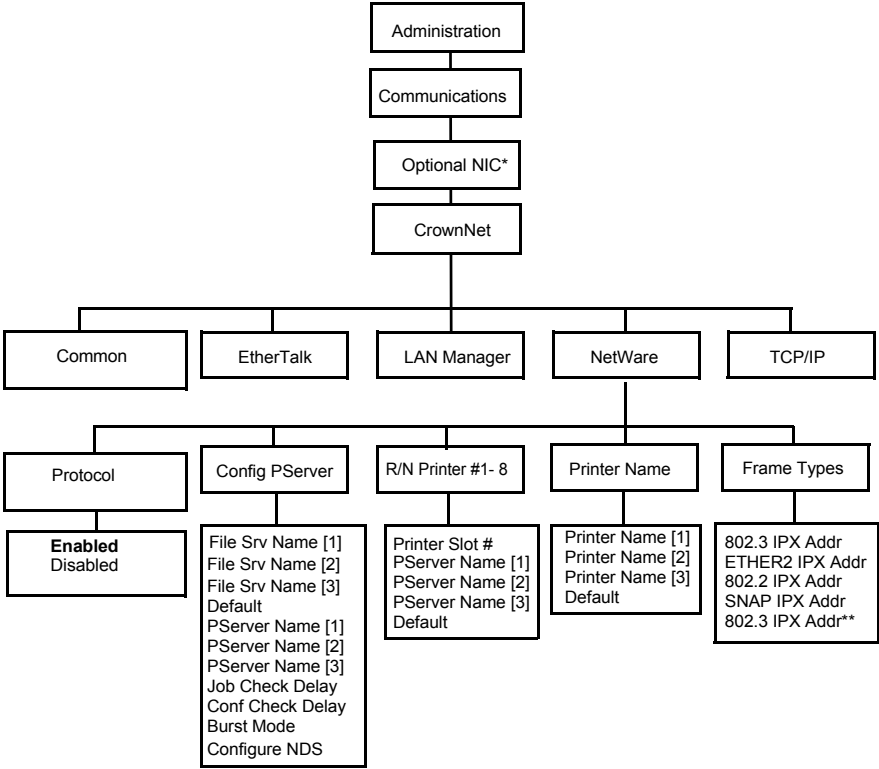


\* Optional  
\*\* Token-Ring only

**Bold:** Default setting

**Note:** For menu details and printer configuration information, refer to the *Crown Books* in PDF on the *Documentation* CD-ROM.



# TCP/IP Menu

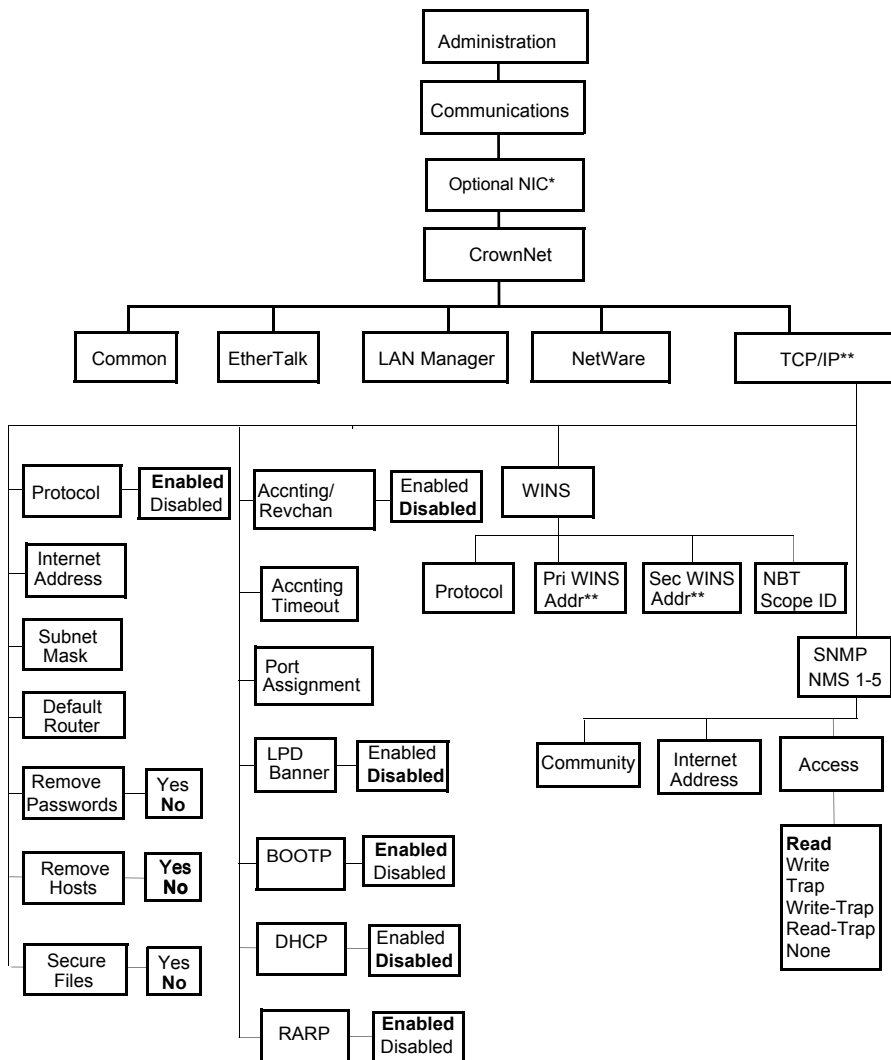

\* Optional

\*\* Pri and Sec WINS Addr are IP addresses of the Primary and Secondary WINS servers (default 0.0.0.0). Default for DHCP and WINS is disabled. NBT Scope ID is any valid DNS domain name consisting of 2 dot-separated parts, or a "" (default blank). An empty string (blank value) is ignored.

**Bold:** Default setting

**Note:** For menu details and printer configuration information, refer to the *Crown Books* in PDF on the *Documentation* CD-ROM.







---

# Index

---

## A

- Acc disabled message** 93
- Acc enabled message** 93
- Acc file x% full message** 93
- Acc files got removed message** 94

### Accessories

- CrownNet for Ethernet 104
- CrownNet for Token-Ring 104
- Daughterboards 104
- DIMMs 110
- Dual In-Line Memory Modules (DIMMs) 104
- Hard disk 119
- Interfaces 104
- Internal IDE hard disk drive 104
- LocalTalk 104
- SCSI 104
- Time-of-Day clock 104

### Additional memory 110

### Administration menu 160

### Advanced printing features

- Memory 111
- Antistatic protection** 106
- Autoduplex** 52
- Automatic jam recovery** 67

## B

### Battery 124

## C

### Cancel all jobs message 94

### Cancel job message 94

### Cancelling job

- Status message 94

### Cleaning cycle

- Imaging unit cleaning rotations 16

### Cleaning materials 57

### Codes

- Error 100



**Common Menu** 161  
**Consumables**  
    Warranty statement 13  
**Continuous printing** 12, 48  
**Control panel messages** 93  
**Controller**  
    Specifications 147  
**Created files message** 95  
**Creating x file message** 95  
**CrownView** 13

## D

**Deep sleep** 96  
**Default memory** 111  
**DIMMs** 110  
**Direct printing from PDF** 65  
**DOC**  
    See Document Options Commands  
**Document Option Commands**  
    Header/trailer page 155  
    HP PCL 5e emulation commands 155  
    HP-GL emulation commands 155  
    Job and subjob boundary commands 157  
    Lineprinter emulation commands 156  
**Drivers** 2  
    Installing for Macintosh 6  
    Installing for Windows 5  
**Dual In-Line Memory Modules**  
    See DIMMs 110  
**Duplex**  
    Printing 52  
    Manual duplexing 52  
**Duplexing**  
    Manual 52  
    Memory requirements 52

## E

**Edge-to-edge printing** 39  
**Electrostatic discharge** 106  
**End job message** 95  
**Energy saver**  
    Deep sleep 96  
**Envelopes**  
    Loading 49

    Printing 49  
**Environmental requirements** 150  
**Error codes** 100  
**Error message**  
    Bins 97  
**Error messages** 93  
**ESP** 88  
    Mode 88  
    Timeout 88  
**EtherTalk**  
    Menu 162

## F

**Face** 12

## H

**Hard disk** 119  
**Header/trailer page, Document Option Commands** 155  
**Host Input** 65  
**Host memory** 65  
**HP PCL 5e**  
    Document Option Commands 155  
**HP-GL**  
    DOC 155

## I

**IDE hard disk** 119  
**Idle**  
    Status message 96  
**Idle message** 96  
**Imageable area**  
    Margins 40  
**Installation**  
    Drivers and Utilities for Macintosh 6  
    Drivers and Utilities for NDPS 10  
    Drivers and Utilities for NetWare 10  
    Drivers and Utilities for UNIX 10  
    Drivers and Utilities for Windows 5  
    Hard disk 119  
    Kanji font internal IDE hard disk drive 117  
    Linux 10  
    Macintosh PPDs 6



NetWare 10  
NPDS 10  
UNIX 10

## **Interfaces 147**

### **IPP**

Internet Printing Protocol 153  
Internet Pull Printing 153

## **J**

### **Jam recovery, automatic 67**

#### **Jams 83**

Locating 69  
Media path 67  
Messages 69  
Preventing 66  
Removing 69, 73, 80  
Status messages 69

### **Job and subjob boundary, DOC 157**

## **K**

### **Kanji**

Option kit 118  
Software requirements 117

### **Keypad locked message 81**

#### **Kit**

IDE hard disk 119  
Kanji font internal IDE hard disk 116  
PlanetPress 118

## **L**

### **Labels**

Continuous printing 35

### **LAN Manager Menu 163**

### **Lineprinter, DOC 156**

### **Loading**

Envelopes 48  
Thick stock 51

### **Loading media 42**

## **M**

### **Macintosh**

Installation 6  
PPDs 2

### **Margins 40**

## **Media**

Automatic jam recovery 67  
Clearing media jams 69, 73, 80  
Clearing media misfeeds 69, 73, 80  
Loading 42  
Margins 40  
OHP film 36  
Path 67  
Preventing jams 66  
Transparencies 36

### **Media jams 83**

Removing 69

### **Media path 67**

### **Media tray**

Extra 104  
Fill limit mark 42, 47  
Optional 104, 121

### **Memory modules (DIMMs)**

Dual in-line memory modules 110

### **Memory/Quick Config 111**

### **Messages 93**

### **MICR checks 118**

### **Moving, printer 135, 138**

## **N**

### **NetWare menu 164**

### **Network mode 41**

## **O**

### **OHP film also known as transparency film 36**

### **On switch 87**

### **OPC 15**

### **Operator Control menu 159**

### **Optional accessories**

Media cassettes 118  
Trays 118

### **output 40**

### **Output tray 40**

## **P**

### **Page margins 40**

### **PageScope 4**

### **Paper**



- Jams 83
- Path, media** 67
- PCL**
  - Drivers 2
- PDF file printing** 65
- Physical specifications** 151
- PlanetPress** 118
- Please wait message** 95
- PostScript**
  - Drivers 2
  - Printer definitions 2
- Power requirements** 143
- Power saving mode** 87
- Power switch** 87
- Preventing paper jams** 66
- Print area**
  - Edge-to-edge 39
  - Guaranteed 39
  - Nonguaranteed 39
- Printer**
  - Cleaning 57
  - Handling 56
  - Relocating 133
  - See also Specifications
  - Speed 145
  - Storage 128
- Printing**
  - Custom and oversized media 37
  - Envelopes 49
  - Method 145
  - Speed 145
  - Transparencies 51
- Printing status message** 98
- Profile downloader** 2
- Proof and print** 155
- PS Wait Timeout** 65

## R

- Relocating your printer** 133
- Relocating, printer** 135, 138
- Repacking**
  - Illustration 136
- Repacking, printer** 135, 138
- Resetting accounting message** 98
- Resolution** 111, 146

## S

### Service

- Messages 93
- Service messages** 93
- Sheet** 12
- Shipping, printer** 135, 138
- Single user mode** 41

### Specifications

- Internal IDE hard disk 148

### Specifications

- Consumables 13, 151
- Controller 145, 147
- CPU 147
- CrownNet Ethernet 147
- Emulations 147
- Engine 145
- Environmental 150
- Flash ROM 148
- Fonts 147
- Input sources 146
- Interfaces 147
- Memory 147
- Options 148
- Output 146
- Parallel 147
- Physical 151
- Print method 145
- Print speed 145
- Resolution 146
- System software 148
- Temperature 150
- Toner 146
- Toner cartridges 13, 151
- Warm-up time 146

### Spool memory

- Static electricity discharge** 106

### Status message

- Acc disabled 93
- Acc enabled 93
- Acc file x% full 93
- Acc files got removed 94
- Cancel all jobs 94
- Cancel job 94
- Created files 95
- Creating x file 95
- End job 95



Idle 96  
Please wait 95  
Printing status 98  
Resetting accounting 98  
Warming up 98

## **System software**

Specifications 148

## **T**

### **TCP/IP**

Menu 165

**Temperature requirements** 150

**Time-of-Day clock** 124

**Timeout** 65

**Toner** 146

**Toner cartridges** 13, 151

**Transparencies** 36

Continuous printing 36

### **Tray**

Multipurpose 46

### **Trays**

Optional 118

**Troubleshooting** 64

Duplexing 86

Error codes 100

Media jams 83

Nothing is printed 81

Printer resets 85

Printer takes too much time 86

Status, service, and error messages  
93

## **U**

**UNIX host software** 2

**Utilities** 2

Installing for Macintosh 6

Installing for Windows 5

## **V**

**Ventilation grilles** 143

## **W**

**Warming up message** 98

**Warm-up time** 146

**Wrist strap for antistatic protection**

106



